

IES-708-22A

8-port G.bis mini-DSLAM

User's Guide

Version 3.52
10/2007
Edition 1

DEFAULT LOGIN

IP Address	http://192.168.1.1
User Name	admin
Password	1234



About This User's Guide

Intended Audience

This manual is intended for people who want to configure the IES-708-22A. You should have at least a basic knowledge of TCP/IP networking concepts and topology.

Related Documentation



It is recommended you use the web configurator to configure the IES-708-22A.

- Supporting Disk
Refer to the included CD for support documents.
- ZyXEL Web Site
Please refer to www.zyxel.com for additional support documentation and product certifications.

User Guide Feedback

Help us help you. Send all User Guide-related comments, questions or suggestions for improvement to the following address, or use e-mail instead. Thank you!

The Technical Writing Team,
ZyXEL Communications Corp.,
6 Innovation Road II,
Science-Based Industrial Park,
Hsinchu, 300, Taiwan.

E-mail: techwriters@zyxel.com.tw

Document Conventions

Warnings and Notes

These are how warnings and notes are shown in this User's Guide.



Warnings tell you about things that could harm you or your device.












Notes tell you other important information (for example, other things you may need to configure or helpful tips) or recommendations.

Syntax Conventions

- The IES-708-22A may be referred to as the “IES-708-22A”, the “device”, the “system” or the “product” in this User's Guide.
- Product labels, screen names, field labels and field choices are all in **bold** font.
- A key stroke is denoted by square brackets and uppercase text, for example, [ENTER] means the “enter” or “return” key on your keyboard.
- “Enter” means for you to type one or more characters and then press the [ENTER] key. “Select” or “choose” means for you to use one of the predefined choices.
- A right angle bracket (>) within a screen name denotes a mouse click. For example, **Maintenance > Log > Log Setting** means you first click **Maintenance** in the navigation panel, then the **Log** sub menu and finally the **Log Setting** tab to get to that screen.
- Units of measurement may denote the “metric” value or the “scientific” value. For example, “k” for kilo may denote “1000” or “1024”, “M” for mega may denote “1000000” or “1048576” and so on.
- “e.g.” is a shorthand for “for instance”, and “i.e.” means “that is” or “in other words”.

Icons Used in Figures

Figures in this User's Guide may use the following generic icons. The IES-708-22A icon is not an exact representation of your device.

IES-708-22A 	Computer 	Server 
Central Office/ ISP 	DSLAM 	Firewall 
Telephone 	Switch 	Router 


Safety Warnings



For your safety, be sure to read and follow all warning notices and instructions.

- Do NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Do NOT expose your device to dampness, dust or corrosive liquids.
- Do NOT store things on the device.
- Do NOT install, use, or service this device during a thunderstorm. There is a remote risk of electric shock from lightning.
- Connect ONLY suitable accessories to the device.
- ONLY qualified service personnel should service or disassemble this device.
- Make sure to connect the cables to the correct ports.
- Place connecting cables carefully so that no one will step on them or stumble over them.
- Always disconnect all cables from this device before servicing or disassembling.
- Use ONLY an appropriate power adaptor or cord for your device. Connect it to the right supply voltage (for example, 110V AC in North America or 230V AC in Europe).
- Use ONLY power wires of the appropriate wire gauge (see [Chapter 57 on page 387](#) for details) for your device. Connect it to a power supply of the correct voltage (see [Chapter 57 on page 387](#) for details).
- Do NOT allow anything to rest on the power adaptor or cord and do NOT place the product where anyone can walk on the power adaptor or cord.
- Do NOT use the device if the power adaptor or cord is damaged as it might cause electrocution.
- If the power adaptor or cord is damaged, remove it from the device and the power source.
- Do NOT attempt to repair the power adaptor or cord. Contact your local vendor to order a new one.
- Do not use the device outside, and make sure all the connections are indoors. There is a remote risk of electric shock from lightning.
- Do NOT obstruct the device ventilation slots, as insufficient airflow may harm your device.
- Use only No. 26 AWG (American Wire Gauge) or larger telecommunication line cord.
- Fuse Warning! Replace a fuse only with a fuse of the same type and rating.

This product is recyclable. Dispose of it properly.

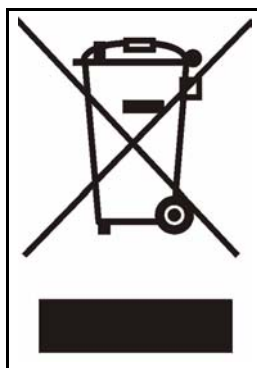

Contents Overview

Introduction	37
Introducing the IES-708-22A	39
Hardware	43
Hardware Installation and Connection	45
Front Panel	49
Web Configurator	55
Introducing the Web Configurator	57
Initial Configuration	65
Home and Port Statistics Screens	71
System Information	83
General Setup	87
User Account	89
Switch Setup	93
IP Setup	99
ENET Port Setup	101
xDSL Port Setup	103
xDSL Profiles Setup	117
xDSL Line Data	131
G.bond	135
VLAN	139
IGMP	147
Static Multicast	157
Multicast VLAN	159
Packet Filtering	165
MAC Filter	167
Spanning Tree Protocol	169
Port Authentication	175
Port Security	179
DHCP Relay	181
DHCP Snoop	185
2684 Routed Mode	189
PPPoA to PPPoE	197
DSCP	203
TLS PVC	205
ACL	209

Downstream Broadcast	215
SysLog	217
Access Control	219
Static Routing	227
Alarm	229
Maintenance	235
Diagnostic	239
MAC Table	241
ARP Table	243
CLI	245
Commands	247
Command Examples	265
Alarm Commands	269
DHCP Commands	277
IEEE 802.1Q Tagged VLAN Commands	285
MAC Commands	293
IGMP Commands	299
Packet Filter Commands	311
IP Commands	315
Firmware and Configuration File Maintenance	321
SNMP	327
DSL Commands	329
Virtual Channel Management	345
ACL Commands	369
Troubleshooting and Specifications	375
Troubleshooting	377
Product Specifications	387
Appendices and Index	395

Table of Contents

About This User's Guide	3
Document Conventions.....	4
Safety Warnings.....	6
Contents Overview	9
Table of Contents.....	11
List of Figures	27
List of Tables.....	33

Part I: Introduction..... 37

Chapter 1	
Introducing the IES-708-22A	39
1.1 Overview	39
1.1.1 High-speed, Point-to-point Connections (STU-C/STU-R)	39
1.1.2 High-speed, Point-to-point Connections (STU-R)	40
1.1.3 High-speed Internet Access (STU-C)	40
1.2 STU-C/STU-R Mode	40
1.2.1 Checking the Current Mode	40
1.2.2 Changing the Current Mode	42
1.3 Ways to Manage the IES-708-22A	42
1.4 Good Habits for Managing the IES-708-22A	42

Part II: Hardware

Chapter 2	
Hardware Installation and Connection	45
2.1 Freestanding Installation	45
2.2 Mounting the IES-708-22A on a Rack	46
2.2.1 Rack-mounted Installation Requirements	46
2.2.2 Attaching the Mounting Brackets to the IES-708-22A	46
2.2.3 Mounting the IES-708-22A on a Rack	47

Chapter 3	
Front Panel	49
3.1 LEDs	49
3.2 Front Panel Ports	50
3.2.1 Power Connection	50
3.2.2 Console Port	50
3.2.3 LAN (Ethernet) Ports	50
3.2.4 USER/CO Ports	51
Part III: Web Configurator	55
Chapter 4	
Introducing the Web Configurator	57
4.1 Introduction	57
4.2 Screen Privilege Levels	57
4.3 System Login	57
4.4 Status Screen	58
4.5 Navigation Panel	59
4.6 Changing Your Password	61
4.7 Saving Your Configuration	62
4.8 Logging out of the Web Configurator	62
Chapter 5	
Initial Configuration	65
5.1 Initial Configuration Overview	65
5.2 Initial Configuration	65
Chapter 6	
Home and Port Statistics Screens.....	71
6.1 Home Screen	71
6.1.1 Ethernet Port Statistics Screen	72
6.1.2 DSL Port Statistics Screen	75
6.1.3 RMON Statistics Screen	77
6.1.4 RMON History Screen	79
6.1.5 RMON History Detail Screen	80
Chapter 7	
System Information	83
Chapter 8	
General Setup.....	87

Chapter 9	
User Account.....	89
9.1 User Account Screen	89
9.2 Authentication Screen	90
Chapter 10	
Switch Setup	93
10.1 GARP Timer Setup	93
10.2 Switch Modes	93
10.2.1 Standalone Switch Mode	93
10.2.2 Port Isolation with Standalone Switch Mode Example	94
10.2.3 Daisychain Switch Mode	94
10.2.4 Port Isolation with Daisychain Switch Mode Example	94
10.3 Switch Setup Screen	95
Chapter 11	
IP Setup.....	99
Chapter 12	
ENET Port Setup	101
Chapter 13	
xDSL Port Setup.....	103
13.1 DSL Profiles	103
13.2 Alarm Profiles	103
13.3 Downstream and Upstream	103
13.4 Default Settings	103
13.5 xDSL Port Setup Screen	104
13.5.1 xDSL Port Setting Screen	105
13.6 Virtual Channels	107
13.6.1 Super Channel	108
13.6.2 LLC	108
13.6.3 VC Mux	108
13.6.4 Virtual Channel Profile	108
13.7 VC Setup Screen	108
13.8 Priority-based PVCs	112
13.9 PPVC Setup Screen	113
13.9.1 PPVC Setup Members Screen	114
Chapter 14	
xDSL Profiles Setup.....	117
14.1 Configured Versus Actual SHDSL Rates	117
14.2 N-wire Mode	117
14.3 Port Profile Screen	118

14.4 ATM QoS	119
14.5 Traffic Shaping	119
14.5.1 ATM Traffic Classes	120
14.5.2 Traffic Parameters	120
14.6 Upstream Policing	122
14.7 VC Profile Screen	123
14.8 Alarm Profile Screen	124
14.8.1 Alarm Profile Map Screen	126
14.9 IGMP Filtering	127
14.10 IGMP Filter Profile Screen	127
 Chapter 15	
xDSL Line Data.....	131
15.1 xDSL Line Rate Info Screen	131
15.2 xDSL Performance Screen	132
 Chapter 16	
G.bond.....	135
16.1 Bonding Overview	135
16.1.1 Cell-level Bonding Process	135
16.1.2 Bonding Standards	135
16.2 G.bond Setup Screen	135
16.2.1 G.bond Status Screen	137
 Chapter 17	
VLAN	139
17.1 Introduction to VLANs	139
17.2 Introduction to IEEE 802.1Q Tagged VLAN	139
17.2.1 Forwarding Tagged and Untagged Frames	140
17.3 VLAN Status Screen	140
17.4 Static VLAN Setting Screen	142
17.5 VLAN Port Setting Screen	143
 Chapter 18	
IGMP.....	147
18.1 IGMP	147
18.2 IP Multicast Addresses	147
18.2.1 IGMP Snooping	147
18.2.2 IGMP Proxy	147
18.3 IGMP Status Screen	148
18.4 IGMP Bandwidth Screen	150
18.4.1 Bandwidth Port Setup Screen	151
18.5 IGMP Setup Screen	152

18.6 IGMP Filter Setup Screen	153
18.7 IGMP Count Screen	153
18.8 IGMP Port Info Screen	154
18.9 IGMP Port Group Screen	155
Chapter 19	
Static Multicast.....	157
19.1 Static Multicast	157
19.2 Static Multicast Screen	157
Chapter 20	
Multicast VLAN.....	159
20.1 Multicast VLAN Overview	159
20.2 MVLAN Status Screen	159
20.3 MVLAN Setup Screen	160
20.4 MVLAN Group Screen	162
Chapter 21	
Packet Filtering	165
21.1 Packet Filter Screen	165
Chapter 22	
MAC Filter	167
22.1 MAC Filter Introduction	167
22.2 MAC Filter Screen	167
Chapter 23	
Spanning Tree Protocol.....	169
23.1 RSTP and STP	169
23.2 Spanning Tree Protocol Status Screen	171
23.3 Spanning Tree Protocol Screen	173
Chapter 24	
Port Authentication.....	175
24.1 Introduction to Authentication	175
24.1.1 RADIUS	175
24.1.2 Introduction to Local User Database	175
24.2 RADIUS Screen	176
24.3 802.1x Screen	177
Chapter 25	
Port Security.....	179
25.1 Port Security Overview	179

25.2 Port Security Screen	179
Chapter 26	
DHCP Relay	181
26.1 DHCP Relay	181
26.2 DHCP Relay Agent Information Option (Option 82)	181
26.2.1 DHCP Relay Agent Circuit ID and Remote ID Sub-option Formats	181
26.3 DHCP Relay Screen	182
Chapter 27	
DHCP Snoop.....	185
27.1 DHCP Snoop Overview	185
27.2 DHCP Snoop Screen	185
27.3 DHCP Snoop Status Screen	186
27.4 DHCP Counter Screen	187
Chapter 28	
2684 Routed Mode	189
28.1 2684 Routed Mode	189
28.1.1 2684 Routed Mode Example	189
28.2 2684 Routed PVC Screen	190
28.3 2684 Routed Domain Screen	192
28.4 RPVC Arp Proxy Screen	193
28.5 2684 Routed Gateway Screen	194
Chapter 29	
PPPoA to PPPoE.....	197
29.1 PPPoA to PPPoE Overview	197
29.2 PPPoA to PPPoE Screen	197
29.3 PPPoA to PPPoE Status Screen	200
Chapter 30	
DSCP	203
30.1 DSCP Overview	203
30.2 DSCP Setup Screen	203
30.3 DSCP Map Screen	204
Chapter 31	
TLS PVC.....	205
31.1 Transparent LAN Service (TLS) Overview	205
31.1.1 TLS Network Example	205
31.2 TLS PVC Screen	206

Chapter 32	
ACL.....	209
32.1 Access Control Logic (ACL) Overview	209
32.1.1 ACL Profile Rules	209
32.1.2 ACL Profile Actions	210
32.2 ACL Setup Screen	210
32.3 ACL Profile Setup Screen	212
32.4 ACL Profile Map Screen	213
Chapter 33	
Downstream Broadcast.....	215
33.1 Downstream Broadcast	215
33.2 Downstream Broadcast Screen	215
Chapter 34	
SysLog.....	217
34.1 Syslog	217
34.2 SysLog Screen	217
Chapter 35	
Access Control.....	219
35.1 Access Control Screen	219
35.2 Access Control Overview	219
35.3 SNMP	219
35.3.1 Supported MIBs	221
35.3.2 SNMP Traps	221
35.4 SNMP Screen	223
35.5 Service Access Control Screen	224
35.6 Remote Management Screen	225
Chapter 36	
Static Routing.....	227
Chapter 37	
Alarm.....	229
37.1 Alarm	229
37.2 Alarm Status Screen	229
37.3 Alarm Descriptions	230
37.4 Alarm Event Setup Screen	231
37.4.1 Edit Alarm Event Setup Screen	232
37.5 Alarm Port Setup Screen	233
Chapter 38	
Maintenance	235

38.1 Maintenance Screen	235
38.2 Firmware Upgrade Screen	235
38.3 Restore Configuration Screen	236
38.4 Backing up a Configuration File	236
38.5 Load Factory Defaults	237
38.6 Reboot System	238
38.7 Command Line FTP	238
Chapter 39	
Diagnostic.....	239
39.1 Diagnostic Screen	239
Chapter 40	
MAC Table.....	241
40.1 Introduction to MAC Table	241
40.2 MAC Table Screen	242
Chapter 41	
ARP Table	243
41.1 Introduction to ARP Table	243
41.1.1 How ARP Works	243
41.2 ARP Table Screen	243
Part IV: CLI.....	245
Chapter 42	
Commands	247
42.1 Command Line Interface Overview	247
42.2 Command Privilege Levels	247
42.3 Saving Your Configuration	248
42.4 Commands	248
Chapter 43	
Command Examples.....	265
43.1 Command Examples Overview	265
43.2 Sys Commands	265
43.2.1 Log Show Command	265
43.2.2 Log Clear Command	265
43.2.3 Info Show Command	266
43.3 Isolation Commands	266
43.3.1 Isolation Show Command	266

43.3.2 Isolation Enable Command	266
43.3.3 Isolation Disable Command	267
43.4 Statistics Monitor Command	267
43.5 Statistics Port Command	267
Chapter 44	
Alarm Commands	269
44.1 Alarm Commands	269
44.2 General Alarm Command Parameters	269
44.3 Alarm Show Command	269
44.4 Alarm Port Show Command	270
44.5 Alarm Port Set Command	271
44.6 Alarm Tablelist Command	271
44.7 Log Format	272
44.8 Alarm History Show Command	273
44.9 Alarm History Clear Command	273
44.10 Alarm XEdit Command	274
44.11 Alarm Cutoff Command	275
44.12 Alarm Clear Command	275
Chapter 45	
DHCP Commands	277
45.1 DHCP Relay Commands	277
45.1.1 Show Command	277
45.1.2 Enable Command	277
45.1.3 Disable Command	278
45.1.4 Server Set Command	278
45.1.5 Server Delete Command	278
45.1.6 Server Active Command	278
45.1.7 Relaymode Command	279
45.2 DHCP Relay Option 82 (Agent Information) Sub-option 1 (Circuit ID)	279
45.2.1 Option 82 Sub-option 1 Enable Command	279
45.2.2 Option 82 Sub-option 1 Disable Command	279
45.2.3 Option 82 Sub-option 1 Set Command	280
45.3 DHCP Relay Option 82 (Agent Information) Sub-option 2 (Remote ID)	280
45.3.1 Option 82 Sub-option 2 Enable Command	280
45.3.2 Option 82 Sub-option 2 Disable Command	280
45.3.3 Option 82 Sub-option 2 Set Command	280
45.4 DHCP Snoop Commands	281
45.4.1 DHCP Snoop Enable Command	281
45.4.2 DHCP Snoop Disable Command	281
45.4.3 DHCP Snoop Flush Command	282
45.4.4 DHCP Snoop Show Command	282

45.4.5 DHCP Counter Statistics Command	282
45.4.6 DHCP Snoop Statistics Command	283
Chapter 46	
IEEE 802.1Q Tagged VLAN Commands	285
46.1 Introduction to VLANs	285
46.2 IEEE 802.1Q Tagging Types	285
46.3 Filtering Databases	285
46.3.1 Static Entries (SVLAN Table)	285
46.4 IEEE VLAN1Q Tagged VLAN Configuration Commands	286
46.4.1 VLAN Port Show Command	286
46.4.2 VLAN PVID Command	286
46.4.3 VLAN Priority Command	286
46.4.4 VLAN Set Command	287
46.4.5 VLAN Frame Type Command	288
46.4.6 VLAN CPU Show Command	289
46.4.7 VLAN CPU Set Command	289
46.4.8 Configuring Management VLAN Example	290
46.4.9 VLAN Delete Command	290
46.5 VLAN Enable	291
46.6 VLAN Disable	291
46.6.1 VLAN Show Command	291
Chapter 47	
MAC Commands	293
47.1 MAC Commands Overview	293
47.2 MAC Filter Commands	293
47.2.1 MAC Filter Show Command	293
47.2.2 MAC Filter Enable Command	294
47.2.3 MAC Filter Disable Command	294
47.2.4 MAC Filter Mode Command	294
47.2.5 MAC Filter Set Command	295
47.2.6 MAC Filter Delete Command	295
47.3 MAC Count Commands	295
47.3.1 MAC Count Show Command	296
47.3.2 MAC Count Enable Command	296
47.3.3 MAC Count Disable Command	297
47.3.4 MAC Count Set Command	297
Chapter 48	
IGMP Commands	299
48.1 Multicast Overview	299
48.2 IGMP Snoop Commands	299

48.2.1 IGMP Snoop Show Command	299
48.2.2 IGMP Snoop Enable Command	299
48.2.3 IGMP Snoop Disable Command	300
48.3 IGMP Filter Commands	300
48.3.1 IGMP Filter Show Command	300
48.3.2 IGMP Filter Set Command	301
48.3.3 IGMP Filter Profile Set Command	301
48.3.4 IGMP Filter Profile Delete Command	302
48.3.5 IGMP Filter Profile Show Command	302
48.4 IGMP Bandwidth Commands	303
48.4.1 IGMP Bandwidth Default Command	303
48.4.2 IGMP Bandwidth Set Command	303
48.4.3 IGMP Bandwidth Delete Command	304
48.5 IGMP Bandwidth Port Commands	304
48.5.1 IGMP Bandwidth Port Disable Command	304
48.5.2 IGMP Bandwidth Port Enable Command	305
48.5.3 IGMP Bandwidth Port Set Command	305
48.5.4 IGMP Bandwidth Port Show Command	305
48.6 IGMP Count Limit Commands	306
48.6.1 IGMP Count Disable Command	306
48.6.2 IGMP Count Enable Command	306
48.6.3 IGMP Count Set Command	307
48.6.4 IGMP Count Show Command	307
48.7 IGMP Snoop Statistics Commands	307
48.7.1 IGMP Snoop Info Statistics Command	308
48.7.2 IGMP Group Statistics Command	308
48.7.3 IGMP Port Info Statistics Command	308
48.7.4 IGMP Port Group Statistics Command	309
Chapter 49	
Packet Filter Commands	311
49.1 Packet Filter Commands	311
49.1.1 Packet Filter Show Command	311
49.1.2 Packet Filter Set Command	312
49.1.3 Packet Filter PPPoE Only Command	313
Chapter 50	
IP Commands	315
50.1 IP Commands Introduction	315
50.2 IP Settings and Default Gateway	315
50.3 General IP Commands	316
50.3.1 Show	316
50.3.2 Ping Command	316

50.3.3 Route Set Command	316
50.3.4 Route Delete Command	317
50.3.5 Route Show Command	317
50.3.6 ARP Show Command	318
50.3.7 ARP Flush Command	318
50.4 Statistics IP Command	318
 Chapter 51	
Firmware and Configuration File Maintenance	321
51.1 Firmware and Configuration File Maintenance Overview	321
51.2 Filename Conventions	321
51.3 Editable Configuration File	322
51.3.1 Editable Configuration File Backup	323
51.3.2 Edit Configuration File	323
51.3.3 Editable Configuration File Upload	324
51.4 Firmware File Upgrade	325
 Chapter 52	
SNMP	327
52.1 SNMP Commands	327
52.1.1 Get Community Command	327
52.1.2 Set Community Command	327
52.1.3 Trusted Host Set Command	327
52.1.4 Trap Community Command	328
52.1.5 Trap Destination Set Command	328
52.1.6 Show SNMP Settings Command	328
 Chapter 53	
DSL Commands	329
53.1 DSL Port Commands	329
53.1.1 DSL Port Show Command	329
53.1.2 DSL Port Enable Command	329
53.1.3 DSL Port Disable Command	330
53.1.4 DSL Port Profile Show Command	330
53.1.5 DSL Port Profile Set Command	331
53.1.6 DSL Port Profile Delete Command	332
53.1.7 DSL Port Profile Map Command	332
53.1.8 DSL Port Name Command	333
53.1.9 DSL Port Tel Command	333
53.1.10 DSL Port Loopback Command	334
53.2 Statistics DSL Commands	334
53.2.1 DSL Statistics Show Command	334
53.2.2 DSL Port Linerate Command	335

53.2.3 DSL Port Lineinfo Command	336
53.2.4 DSL Port Lineperf Command	337
53.2.5 DSL Port 15 Minute Performance Command	338
53.2.6 DSL Port 1 Day Performance Command	339
53.3 Alarm Profile Commands	340
53.3.1 Alarm Profile Show Command	340
53.3.2 Alarm Profile Set Command	341
53.3.3 Alarm Profile Delete Command	341
53.3.4 Alarm Profile Map Command	342
53.3.5 Alarm Profile Showmap Command	342
Chapter 54	
Virtual Channel Management.....	345
54.1 Virtual Channel Management Overview	345
54.2 Virtual Channel Profile Commands	345
54.2.1 Show Virtual Channel Profile Command	345
54.2.2 Set Virtual Channel Profile Command	345
54.2.3 Delete Virtual Channel Profile Command	347
54.3 PVC Channels	347
54.3.1 PVC Show Command	347
54.3.2 PVC Set Command	348
54.3.3 PVC Delete Command	349
54.4 Priority-based PVCs	349
54.4.1 PPVC Set Command	349
54.4.2 PPVC Member Set Command	350
54.4.3 PPVC Member Delete Command	351
54.4.4 PPVC Member Show Command	351
54.4.5 PPVC Show Command	352
54.4.6 PPVC Delete Command	352
54.5 2684 Routed Mode Commands	353
54.5.1 2684 Routed Mode Example	354
54.5.2 RPVC Gateway Set Command	355
54.5.3 RPVC Gateway Show Command	355
54.5.4 RPVC Gateway Delete Command	356
54.5.5 RPVC Set Command	356
54.5.6 RPVC Show Command	357
54.5.7 RPVC Delete Command	358
54.5.8 RPVC Route Set Command	358
54.5.9 RPVC Route Show Command	359
54.5.10 RPVC Route Delete Command	360
54.5.11 RPVC ARP Agingtime Set Command	360
54.5.12 RPVC ARP Agingtime Show Command	361
54.5.13 RPVC ARP Show Command	361

54.5.14 RPVC ARP Flush Command	361
54.6 PPPoA to PPPoE (PAE) Commands	362
54.6.1 PAE PVC Delete Command	362
54.6.2 PAE PVC Set Command	362
54.6.3 PAE PVC Show Command	363
54.6.4 PAE PVC Session Command	364
54.6.5 PAE PVC Counter Command	364
54.7 Transparent LAN Service (TLS) Commands	366
54.7.1 TLS PVC Delete Command	366
54.7.2 TLS PVC Set Command	366
54.7.3 TLS PVC Show Command	367
Chapter 55	
ACL Commands	369
55.1 ACL Profile Commands	369
55.1.1 ACL Profile Set Command	369
55.1.2 ACL Profile Delete Command	370
55.1.3 ACL Profile Show Map Command	371
55.1.4 ACL Profile Show Command	371
55.2 ACL Assignment Commands	372
55.2.1 ACL Assignment Set Command	372
55.2.2 ACL Assignment Delete Command	372
55.2.3 ACL Assignment Show Command	373
 Part V: Troubleshooting and Specifications	 375
Chapter 56	
Troubleshooting	377
56.1 Power, Hardware Connections, and LEDs	377
56.2 IES-708-22A Access and Login	378
56.3 Internet Access	380
56.4 Password	381
56.5 System Lockout	382
56.6 Resetting the Defaults	382
56.6.1 Resetting the Defaults Via Command	382
56.6.2 Uploading the Default Configuration File	383
56.7 Recovering the Firmware	384
 Chapter 57	
Product Specifications	387
57.1 General IES-708-22A Specifications	387

57.2 Cable Pin Assignments 392

Part VI: Appendices and Index 395

Appendix A Setting up Your Computer’s IP Address..... 397

Appendix B Pop-up Windows, JavaScripts and Java Permissions 419

Appendix C Common Services 427

Appendix D Virtual Circuit Topology 431

Appendix E Legal Information 433

Appendix F Customer Support..... 437

Index..... 443

List of Figures

Figure 1 High-speed, Point-to-point Connections (STU-C/STU-R)	39
Figure 2 End-to-end, High-speed Network Connections (STU-R)	40
Figure 3 High-speed Internet Access (STU-C)	40
Figure 4 Attaching Rubber Feet	45
Figure 5 Attaching the Mounting Brackets	46
Figure 6 Mounting the IES-708-22A on a Rack	47
Figure 7 Front Panel	49
Figure 8 Telco-50 Cable with RJ-11 Connectors	51
Figure 9 MDF Wiring	52
Figure 10 MDF Installation Scenario	53
Figure 11 Login	58
Figure 12 Home	58
Figure 13 User Account	61
Figure 14 User Account	62
Figure 15 Logout	63
Figure 16 IP Setup	65
Figure 17 xDSL Port Setup	66
Figure 18 VC Setup	67
Figure 19 VC Setup, Delete	67
Figure 20 Select Ports	67
Figure 21 VC Setup	68
Figure 22 VC Setup	68
Figure 23 Select Ports	69
Figure 24 VC Setup	69
Figure 25 Config Save	69
Figure 26 Config Save > Save Successful	70
Figure 27 Home	71
Figure 28 Home > Port Statistics (Ethernet)	73
Figure 29 Home > Port Statistics (DSL)	76
Figure 30 Home > Port Statistics > RMON	78
Figure 31 Home > Port Statistics > RMON > RMON History	80
Figure 32 Home > Port Statistics > RMON > RMON History > Detail	81
Figure 33 Basic Setting > System Information	83
Figure 34 Basic Setting > General Setup	87
Figure 35 Basic Setting > User Account	89
Figure 36 Basic Setting > User Account > Authentication	90
Figure 37 Port Isolation with Standalone Switch Mode Example	94
Figure 38 Port Isolation with Daisychain Switch Mode Example	95

Figure 39 Basic Setting > Switch Setup	96
Figure 40 Basic Setting > IP Setup	99
Figure 41 Basic Setting > ENET Port Setup	101
Figure 42 Basic Setting > xDSL Port Setup	104
Figure 43 Select Ports	104
Figure 44 Basic Setting > xDSL Port Setup > xDSL Port Setting	106
Figure 45 Basic Setting > xDSL Port Setup > VC Setup	109
Figure 46 Basic Setting, xDSL Port Setup, VC Setup, Delete	111
Figure 47 Select Ports	111
Figure 48 Select Ports	112
Figure 49 Basic Setting > xDSL Port Setup > PPVC Setup	113
Figure 50 Basic Setting > xDSL Port Setup > PPVC Setup > Edit	114
Figure 51 Basic Setting > xDSL Profiles Setup	118
Figure 52 PCR, SCR and MBS in Traffic Shaping	121
Figure 53 TAT, CDVT and BT in Traffic Shaping	122
Figure 54 Basic Setting > xDSL Profiles Setup > VC Profile	123
Figure 55 Basic Setting > xDSL Profiles Setup > Alarm Profile	125
Figure 56 Basic Setting > xDSL Profiles Setup > Alarm Profile > Map	126
Figure 57 Basic Setting > xDSL Profiles Setup > IGMP Filter Profile	128
Figure 58 Basic Setting > xDSL Line Data	131
Figure 59 Basic Setting > xDSL Line Data > Line Performance	133
Figure 60 Basic Setting > G.bond	136
Figure 61 Basic Setting > G.bond > G.bond Status	137
Figure 62 Advanced Application > VLAN	141
Figure 63 Advanced Application > VLAN > Static VLAN Setting	142
Figure 64 Advanced Application > VLAN > VLAN Port Setting	144
Figure 65 Select Ports	145
Figure 66 IGMP Proxy Network Example	148
Figure 67 Advanced Application > IGMP	149
Figure 68 Advanced Application > IGMP > Bandwidth Setup	150
Figure 69 Advanced Application > IGMP > Bandwidth Setup > Port Setup	151
Figure 70 Advanced Application > IGMP > IGMP Setup	152
Figure 71 Advanced Application > IGMP > Count Setup	154
Figure 72 Advanced Application > IGMP > IGMP Port Info	154
Figure 73 Advanced Application > IGMP > IGMP Port Group	155
Figure 74 Advanced Application > Static Multicast	157
Figure 75 Advanced Application > Multicast VLAN	159
Figure 76 Advanced Application > Multicast VLAN > MVLAN Setup	161
Figure 77 Advanced Application > Multicast VLAN > MVLAN Group	162
Figure 78 Advanced Application > Filtering	165
Figure 79 Advanced Application > MAC Filter	167
Figure 80 STP Root Ports and Designated Ports	170
Figure 81 Advanced Application > Spanning Tree Protocol	171

Figure 82 Advanced Application > Spanning Tree Protocol > STP Config	173
Figure 83 RADIUS Server	175
Figure 84 Advanced Application > Port Authentication	176
Figure 85 Advanced Application > Port Authentication > 802.1x	177
Figure 86 Advanced Application > Port Security	179
Figure 87 Select Ports	180
Figure 88 DHCP Relay Agent Circuit ID Sub-option Format	182
Figure 89 DHCP Relay Agent Remote ID Sub-option Format	182
Figure 90 Advanced Application > DHCP Relay	183
Figure 91 Advanced Application > DHCP Snoop	185
Figure 92 Advanced Application > DHCP Snoop > DHCP Snoop Status	186
Figure 93 Advanced Application > DHCP Snoop > DHCP Counter	187
Figure 94 2684 Routed Mode Example	190
Figure 95 Advanced Application > 2684 Routed PVC	191
Figure 96 Advanced Application > 2684 Routed Mode > Routed Domain	192
Figure 97 Advanced Application > 2684 Routed Mode > RPVC Arp Proxy	194
Figure 98 Advanced Application > 2684 Routed Mode > Routed Gateway	195
Figure 99 Mixed PPPoA-to-PPPoE Broadband Network Example	197
Figure 100 Advanced Application > PPPoA to PPPoE	198
Figure 101 Advanced Application > PPPoA to PPPoE > Status	200
Figure 102 Advanced Application > DSCP	203
Figure 103 Advanced Application > DSCP > DSCP Map	204
Figure 104 Transparent LAN Service Network Example	206
Figure 105 Advanced Application > TLS PVC	207
Figure 106 Advanced Application > ACL	211
Figure 107 Advanced Application > ACL > ACL Profile Setup	212
Figure 108 Advanced Application > ACL > ACL Profile Map	214
Figure 109 Advanced Application > Downstream Broadcast	215
Figure 110 Advanced Application > SysLog	217
Figure 111 Advanced Application > Access Control	219
Figure 112 SNMP Management Model	220
Figure 113 Advanced Application > Access Control > SNMP	223
Figure 114 Advanced Application > Access Control > Service Access Control	224
Figure 115 Advanced Application > Access Control > Secured Client	225
Figure 116 Routing Protocol > Static Routing	227
Figure 117 Alarm > Alarm Status	229
Figure 118 Alarm > Alarm Event Setup	231
Figure 119 Alarm > Alarm Event Setup > Edit	232
Figure 120 Alarm > Alarm Port Setup	234
Figure 121 Management > Maintenance	235
Figure 122 Management > Maintenance > Click Here (Firmware Upgrade)	236
Figure 123 Management > Maintenance > Click Here (Restore Configuration)	236
Figure 124 Management > Maintenance > Click Here (Restore Default Configuration)	237

Figure 125 Management > Maintenance > Click Here (Restore Default Configuration) > Reboot	238
Figure 126 Management > Maintenance > Click Here (Reboot System)	238
Figure 127 Management > Diagnostic	239
Figure 128 MAC Table Filtering Flowchart	241
Figure 129 Management > MAC Table	242
Figure 130 Management > ARP Table	244
Figure 131 2684 Routed Mode Example	354
Figure 132 Resetting the IES-708-22A Via Command	382
Figure 133 Example Xmodem Upload	383
Figure 134 Example Xmodem Upload	384
Figure 135 Console Cable RJ-11 Male Connector	393
Figure 136 Console Cable DB-9 Female Connector	393
Figure 137 Telco-50 Pin Assignments	394
Figure 138 Windows 95/98/Me: Network: Configuration	398
Figure 139 Windows 95/98/Me: TCP/IP Properties: IP Address	399
Figure 140 Windows 95/98/Me: TCP/IP Properties: DNS Configuration	400
Figure 141 Windows XP: Start Menu	401
Figure 142 Windows XP: Control Panel	401
Figure 143 Windows XP: Control Panel: Network Connections: Properties	402
Figure 144 Windows XP: Local Area Connection Properties	402
Figure 145 Windows XP: Internet Protocol (TCP/IP) Properties	403
Figure 146 Windows XP: Advanced TCP/IP Properties	404
Figure 147 Windows XP: Internet Protocol (TCP/IP) Properties	405
Figure 148 Windows Vista: Start Menu	406
Figure 149 Windows Vista: Control Panel	406
Figure 150 Windows Vista: Network And Internet	406
Figure 151 Windows Vista: Network and Sharing Center	406
Figure 152 Windows Vista: Network and Sharing Center	407
Figure 153 Windows Vista: Local Area Connection Properties	407
Figure 154 Windows Vista: Internet Protocol Version 4 (TCP/IPv4) Properties	408
Figure 155 Windows Vista: Advanced TCP/IP Properties	409
Figure 156 Windows Vista: Internet Protocol Version 4 (TCP/IPv4) Properties	410
Figure 157 Macintosh OS 8/9: Apple Menu	411
Figure 158 Macintosh OS 8/9: TCP/IP	411
Figure 159 Macintosh OS X: Apple Menu	412
Figure 160 Macintosh OS X: Network	413
Figure 161 Red Hat 9.0: KDE: Network Configuration: Devices	414
Figure 162 Red Hat 9.0: KDE: Ethernet Device: General	414
Figure 163 Red Hat 9.0: KDE: Network Configuration: DNS	415
Figure 164 Red Hat 9.0: KDE: Network Configuration: Activate	415
Figure 165 Red Hat 9.0: Dynamic IP Address Setting in ifconfig-eth0	416
Figure 166 Red Hat 9.0: Static IP Address Setting in ifconfig-eth0	416
Figure 167 Red Hat 9.0: DNS Settings in resolv.conf	416

Figure 168 Red Hat 9.0: Restart Ethernet Card	416
Figure 169 Red Hat 9.0: Checking TCP/IP Properties	417
Figure 170 Pop-up Blocker	419
Figure 171 Internet Options: Privacy	420
Figure 172 Internet Options: Privacy	421
Figure 173 Pop-up Blocker Settings	421
Figure 174 Internet Options: Security	422
Figure 175 Security Settings - Java Scripting	423
Figure 176 Security Settings - Java	423
Figure 177 Java (Sun)	424
Figure 178 Mozilla Firefox: Tools > Options	425
Figure 179 Mozilla Firefox Content Security	425
Figure 180 Virtual Circuit Topology	431

List of Tables

Table 1 LEDs	49
Table 2 Front Panel Ports	50
Table 3 Navigation Panel Submenu Links	59
Table 4 Web Configurator Screens	59
Table 5 Home	71
Table 6 Home > Port Statistics (Ethernet)	73
Table 7 Home > Port Statistics (DSL)	76
Table 8 Home > Port Statistics > RMON	78
Table 9 Home > Port Statistics > RMON > RMON History	80
Table 10 Home > Port Statistics > RMON > RMON History > Detail	81
Table 11 Basic Setting > System Information	84
Table 12 Basic Setting > General Setup	87
Table 13 Basic Setting > User Account	89
Table 14 Basic Setting > User Account > Authentication	91
Table 15 Basic Setting > Switch Setup	96
Table 16 Basic Setting > IP Setup	99
Table 17 Basic Setting > ENET Port Setup	101
Table 18 Basic Setting > xDSL Port Setup	104
Table 19 Basic Setting > xDSL Port Setup > xDSL Port Setting	106
Table 20 Basic Setting > xDSL Port Setup > VC Setup	109
Table 21 IEEE 802.1p Priority to PPVC Mapping	112
Table 22 Basic Setting > xDSL Port Setup > PPVC Setup	113
Table 23 Basic Setting > xDSL Port Setup > PPVC Setup > Edit	115
Table 24 Basic Setting > xDSL Profiles Setup	118
Table 25 Basic Setting > xDSL Profiles Setup > VC Profile	123
Table 26 Basic Setting > xDSL Profiles Setup > Alarm Profile	125
Table 27 Basic Setting > xDSL Profiles Setup > Alarm Profile > Map	126
Table 28 Basic Setting > xDSL Profiles Setup > IGMP Filter Profile	128
Table 29 Basic Setting > xDSL Line Data	131
Table 30 Basic Setting > xDSL Line Data > Line Performance	133
Table 31 Basic Setting > G.bond	136
Table 32 Basic Setting > G.bond > G.bond Status	137
Table 33 Advanced Application > VLAN	141
Table 34 Advanced Application > VLAN > Static VLAN Setting	142
Table 35 Advanced Application > VLAN > VLAN Port Setting	144
Table 36 Advanced Application > IGMP	149
Table 37 Advanced Application > IGMP > Bandwidth Setup	150
Table 38 Advanced Application > IGMP > Bandwidth Setup > Port Setup	152

Table 39 Advanced Application > IGMP > IGMP Setup	152
Table 40 Advanced Application > IGMP > Count Setup	154
Table 41 Advanced Application > IGMP > IGMP Port Info	155
Table 42 Advanced Application > IGMP > IGMP Port Group	155
Table 43 Advanced Application > Static Multicast	157
Table 44 Advanced Application > Multicast VLAN	160
Table 45 Advanced Application > Multicast VLAN > MVLAN Setup	161
Table 46 Advanced Application > Multicast VLAN > MVLAN Group	162
Table 47 Advanced Application > Filtering	165
Table 48 Advanced Application > MAC Filter	168
Table 49 Path Cost	169
Table 50 RSTP Port States	170
Table 51 Advanced Application > Spanning Tree Protocol	171
Table 52 Advanced Application > Spanning Tree Protocol > STP Config	173
Table 53 Advanced Application > Port Authentication	176
Table 54 Advanced Application > Port Authentication > 802.1x	177
Table 55 Advanced Application > Port Security	179
Table 56 Advanced Application > DHCP Relay	183
Table 57 Advanced Application > DHCP Snoop	185
Table 58 Advanced Application > DHCP Snoop > DHCP Snoop Status	186
Table 59 Advanced Application > DHCP Snoop > DHCP Counter	187
Table 60 Advanced Application > 2684 Routed PVC	191
Table 61 Advanced Application > 2684 Routed Mode > Routed Domain	193
Table 62 Advanced Application > 2684 Routed Mode > RPVC Arp Proxy	194
Table 63 Advanced Application > 2684 Routed Mode > Routed Gateway	195
Table 64 Advanced Application > PPPoA to PPPoE	198
Table 65 Advanced Application > PPPoA to PPPoE > Status	200
Table 66 Advanced Application > DSCP	203
Table 67 Advanced Application > DSCP > DSCP Map	204
Table 68 Advanced Application > TLS PVC	207
Table 69 Advanced Application > ACL	211
Table 70 Advanced Application > ACL > ACL Profile Setup	212
Table 71 Advanced Application > ACL > ACL Profile Map	214
Table 72 Advanced Application > Downstream Broadcast	215
Table 73 Advanced Application > SysLog	217
Table 74 Access Control Summary	219
Table 75 SNMP Commands	220
Table 76 SNMP Traps	221
Table 77 Advanced Application > Access Control > SNMP	224
Table 78 Advanced Application > Access Control > Service Access Control	224
Table 79 Advanced Application > Access Control > Secured Client	225
Table 80 Routing Protocol > Static Routing	227
Table 81 Alarm > Alarm Status	229

Table 82 Alarm Descriptions	230
Table 83 Alarm > Alarm Event Setup	232
Table 84 Alarm > Alarm Event Setup > Edit	233
Table 85 Alarm > Alarm Port Setup	234
Table 86 Management > Diagnostic	240
Table 87 Management > MAC Table	242
Table 88 Management > ARP Table	244
Table 89 Commands	248
Table 90 General Alarm Command Parameters	269
Table 91 Log Format	272
Table 92 Statistics IP Command	318
Table 93 Filename Conventions	322
Table 94 DSL Port Linerate Command Counters	335
Table 95 DSL Port Lineinfo Command Counters	336
Table 96 DSL Port Lineperf Command Counters	338
Table 97 Hardware Specifications	387
Table 98 Firmware Specifications	388
Table 99 Default Settings	390
Table 100 Standards Supported	391
Table 101 Console Cable Connector Pin Assignments	393
Table 102 Ethernet Cable Pin Assignments	393
Table 103 Hardware Telco-50 Connector Port and Pin Numbers	394
Table 104 Commonly Used Services	427

PART I

Introduction

Introducing the IES-708-22A (39)

Introducing the IES-708-22A

This chapter introduces the main applications and features of the IES-708-22A. It also introduces the ways you can manage the IES-708-22A.

1.1 Overview

The IES-708-22A is an 8-port G.SHDSL device. The IES-708-22A aggregates traffic from 8 SHDSL lines to two Ethernet ports, and the eight G.bis ports can be bonded together to provide up to 40 Mbps (8 x 5.69 Mbps) symmetric bandwidth to subscribers. Moreover, with different FW, the IES-708-22A can act as STU-C or STU-R as needed. See [Chapter 57 on page 387](#) for a complete list of features.


You can use the built-in web configurator to manage and configure the IES-708-22A. In addition, the IES-708-22A can also be managed via Telnet, the console port, or third-party SNMP management.

1.1.1 High-speed, Point-to-point Connections (STU-C/STU-R)

Use two IES-708-22As to create a cost-effective, high-speed connection for high-bandwidth applications, such as videoconferencing and distance learning. The IES-708-22As provide a simple, fast point-to-point connection between two geographically-dispersed networks.

In the following example, two IES-708-22As connect the headquarters and a branch office.

Figure 1 High-speed, Point-to-point Connections (STU-C/STU-R)

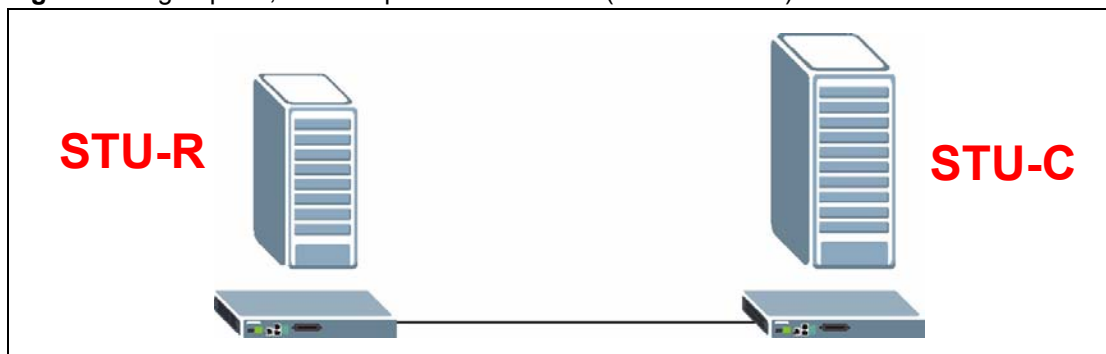


1.1.2 High-speed, Point-to-point Connections (STU-R)

Connect the IES-708-22A to another DSLAM, such as a chassis-based system, to create a cost-effective, high-speed connection for high-bandwidth applications, such as videoconferencing and distance learning. In this case, the IES-708-22A is the STU-R device.

In the following example, the IES-708-22A connects a branch to the existing chassis-based system at headquarters.


Figure 2 End-to-end, High-speed Network Connections (STU-R)

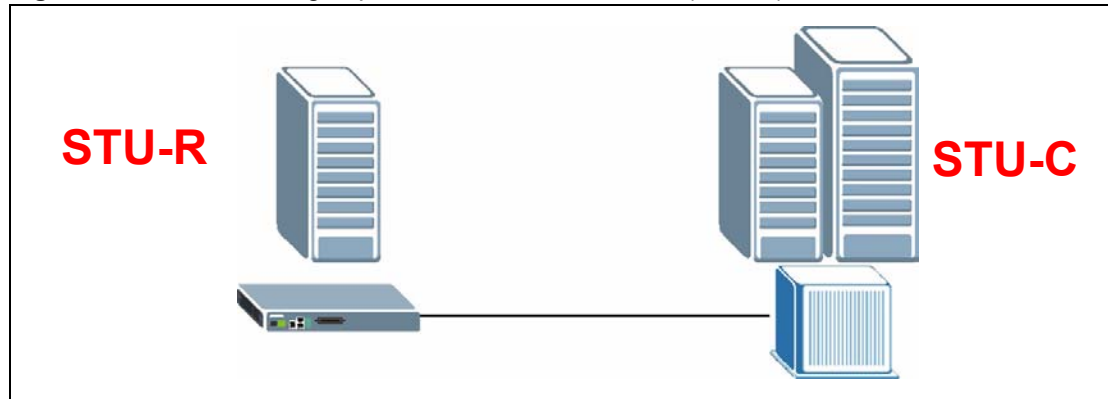

1.1.3 High-speed Internet Access (STU-C)

Connect the IES-708-22A to a SHDSL device such as a router, switch, or modem to provide high-speed Internet access. In this case, the IES-708-22A is the STU-C device.

Figure 3 High-speed Internet Access (STU-C)

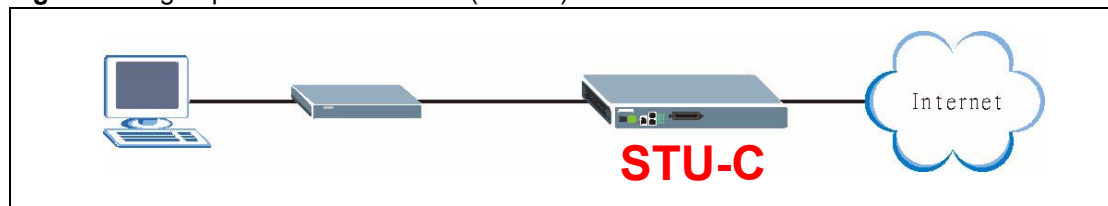

1.2 STU-C/STU-R Mode


The IES-708-22A can run in STU-C mode or in STU-R mode. This mode is determined by the firmware the IES-708-22A is running.

- The STU-C firmware version contains AYS; for example, V3.52(AYS.0)b2.
- The STU-R firmware version contains AYT; for example, V3.52(AYT.0)b2.

1.2.1 Checking the Current Mode

Look at the model name or the firmware version to find out whether the IES-708-22A is in STU-C mode or in STU-R mode.

- **Login screen**

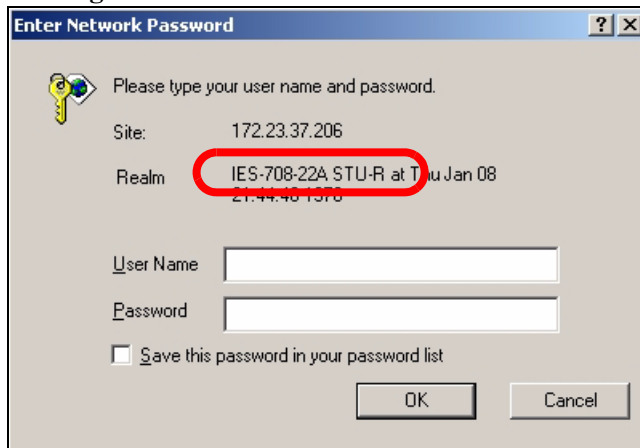

Enter Network Password

Please type your user name and password.

Site: 172.23.37.206

Realm: IES-708-22A STU-R at T... Jan 08

User Name:

Password:

☐ Save this password in your password list

OK Cancel


- **System Information screen**



System Info

System Name	IES-708-22A STU-R
ZyNOS FW Version	V3.52(AYT.0)b4 09/28/2007
DSL Driver Version	0.9.1.0
DSP Code Version	1.1-1.5.0__004
Hardware Version	AAB
Serial Number	0Z0735039040
Ethernet Address	00:19:cb:4f:0c:50

- **General Setup screen**

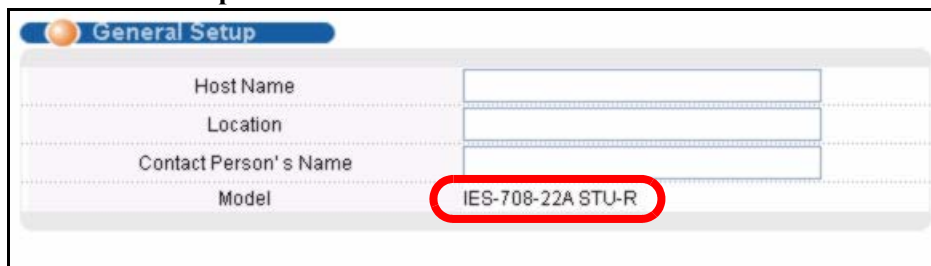

General Setup

Host Name	<input type="text"/>
Location	<input type="text"/>
Contact Person's Name	<input type="text"/>
Model	IES-708-22A STU-R

- **sys info show command**

```

ras> sys info show
Hostname:
Location:
Contact:
Model: IES-708-22A STU-R
ZyNOS version: V3.52(AYT.0)b2 | 08/29/2007
F/W size: 2910134
MAC address: 00:13:49:02:02:02
System up time: 1(days) : 5:22:44
Bootbase version: VAYS1.01 | 07/20/2007
F/W build date: Sep 4 2007 19:54:47
Driver version: 0.9.1.0
DSP code version: 1.1-1.5.0__004
Hardware version:
Serial number:

```

1.2.2 Changing the Current Mode

You have to upload new firmware to change the STU-C/STU-R mode.

- 1 Go to <http://www.zyxel.com>.
- 2 Download the desired firmware.
- 3 Use the web configurator ([Section 38.2 on page 235](#)) or FTP ([Chapter 51 on page 321](#)) to upload the firmware.

1.3 Ways to Manage the IES-708-22A

Use any of the following methods to manage the IES-708-22A.

- Web Configurator. This is recommended for everyday management of the IES-708-22A using a (supported) web browser. See [Chapter 4 on page 57](#).
- Command Line Interface. Line commands offer an alternative to the Web Configurator and may be necessary to configure advanced features. See [Chapter 42 on page 247](#).
- FTP. Use File Transfer Protocol for firmware upgrades and configuration backup/restore. See [Chapter 51 on page 321](#).
- SNMP. The device can be monitored and/or managed by an SNMP manager. See [Chapter 35 on page 219](#).

1.4 Good Habits for Managing the IES-708-22A

Do the following things regularly to make the IES-708-22A more secure and to manage the IES-708-22A more effectively.

- Change the password. Use a password that's not easy to guess and that consists of different types of characters, such as numbers and letters.
- Write down the password and put it in a safe place.
- Back up the configuration (and make sure you know how to restore it). Restoring an earlier working configuration may be useful if the device becomes unstable or even crashes. If you forget your password, you will have to reset the IES-708-22A to its factory default settings. If you backed up an earlier configuration file, you would not have to totally re-configure the IES-708-22A. You could simply restore your last configuration.

PART II

Hardware

Hardware Installation and Connection (45)

Front Panel (49)


Hardware Installation and Connection

This chapter shows you how to install and connect the IES-708-22A.

2.1 Freestanding Installation

- 1 Make sure the IES-708-22A is clean and dry.
- 2 Set the IES-708-22A on a smooth, level surface strong enough to support the weight of the IES-708-22A and the connected cables. Make sure there is a power outlet nearby.
- 3 Make sure there is enough clearance around the IES-708-22A to allow air circulation and the attachment of cables and the power cord.
- 4 Remove the adhesive backing from the rubber feet.
- 5 Attach the rubber feet to each corner on the bottom of the IES-708-22A. These rubber feet help protect the IES-708-22A from shock or vibration and ensure space between devices when stacking.

Figure 4 Attaching Rubber Feet

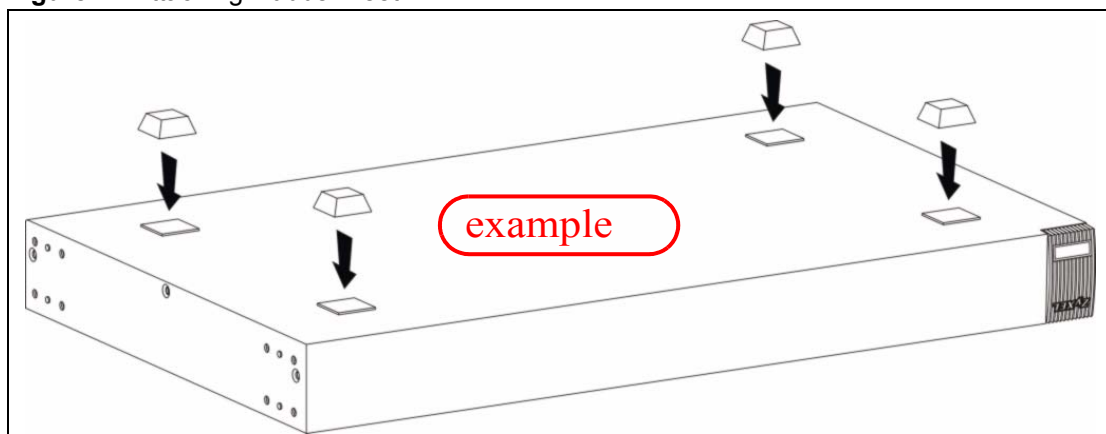



Do NOT block the ventilation holes. Leave space between devices when stacking. For proper ventilation, allow at least 4 inches (10 cm) of clearance at the front and 3.4 inches (8 cm) at the back of the IES-708-22A. This is especially important for enclosed rack installations.

2.2 Mounting the IES-708-22A on a Rack

This section lists the rack mounting requirements and precautions and describes the installation steps.

2.2.1 Rack-mounted Installation Requirements

- Two mounting brackets.
- Eight M3 flat head screws and a #2 Phillips screwdriver.
- Four M5 flat head screws and a #2 Phillips screwdriver.



Failure to use the proper screws may damage the unit.


2.2.1.1 Precautions

- Make sure the rack will safely support the combined weight of all the equipment it contains.
- Make sure the position of the IES-708-22A does not make the rack unstable or top-heavy. Take all necessary precautions to anchor the rack securely before installing the unit.

2.2.2 Attaching the Mounting Brackets to the IES-708-22A

- 1 Position a mounting bracket on one side of the IES-708-22A, lining up the four screw holes on the bracket with the screw holes on the side of the IES-708-22A.

Figure 5 Attaching the Mounting Brackets

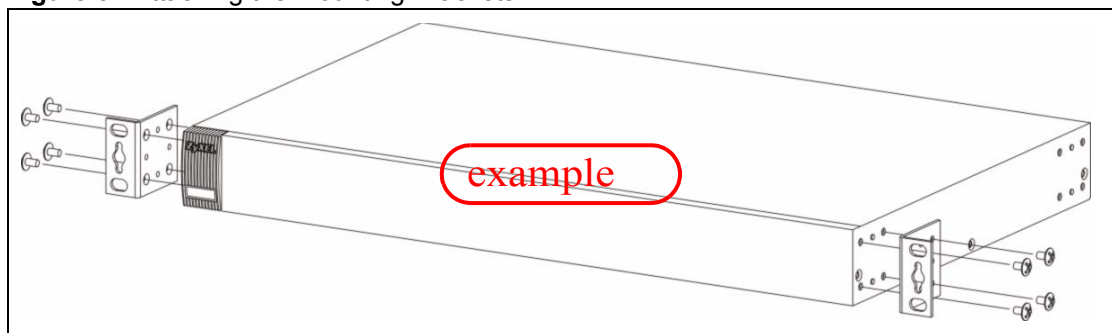


- 2 Using a #2 Phillips screwdriver, install the M3 flat head screws through the mounting bracket holes into the IES-708-22A.
- 3 Repeat steps 1 and 2 to install the second mounting bracket on the other side of the IES-708-22A.
- 4 You may now mount the IES-708-22A on a rack. Proceed to the next section.

2.2.3 Mounting the IES-708-22A on a Rack

- 1 Position a mounting bracket (that is already attached to the IES-708-22A) on one side of the rack, lining up the two screw holes on the bracket with the screw holes on the side of the rack.

Figure 6 Mounting the IES-708-22A on a Rack

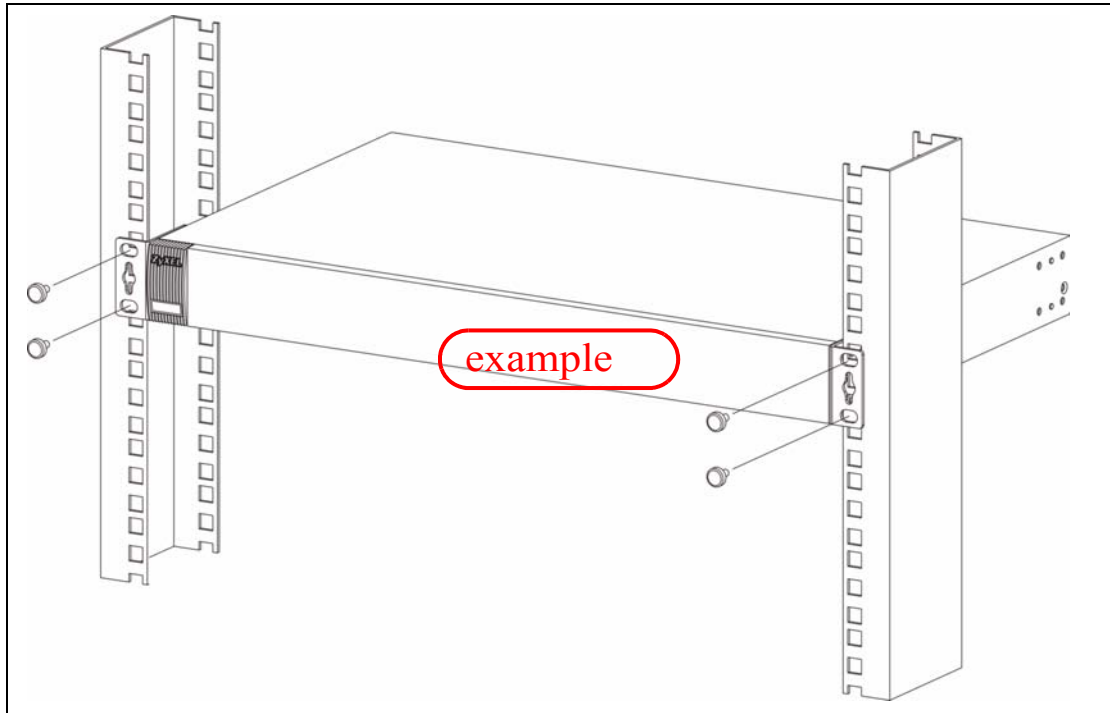


- 2 Using a #2 Phillips screwdriver, install the M5 flat head screws through the mounting bracket holes into the rack.
- 3 Repeat steps 1 and 2 to attach the second mounting bracket on the other side of the rack.

Front Panel

This chapter describes the front panel of the IES-708-22A, shown below.

Figure 7 Front Panel

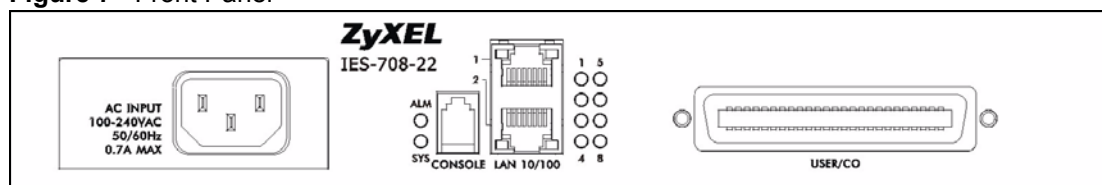

The LEDs and ports are discussed in the following sections.

3.1 LEDs

The following table describes the LED indicators on the IES-708-22A.

Table 1 LEDs

LED	COLOR	STATUS	DESCRIPTION
SYS	Green	On	The IES-708-22A is running.
		Blinking	The IES-708-22A is starting up.
		Off	The IES-708-22A is not receiving power.
ALARM	Red	On	The temperature and/or voltage are outside tolerance.
		Off	The temperature and/or voltage are within tolerance.
ETHERNET	Green	On	This port has a 10 Mbps connection.
		Blinking	This port is sending/receiving data at 10 Mbps.
	Orange	On	This port has a 100 Mbps connection.
		Off	This port is sending/receiving data at 100 Mbps.
		Off	This port has no connection.
DSL	Green	On	This port has a successful DSL connection.
		Off	This port does not have a DSL connection.

3.2 Front Panel Ports

The following table describes the port labels on the front panel.

Table 2 Front Panel Ports

LABEL	DESCRIPTION
POWER	Connect an appropriate power source to the IES-708-22A.
CONSOLE	Only connect this port if you want to configure the IES-708-22A using the command line interface (CLI) via the console port.
LAN 10/100	Connect these ports to a computer, a hub, an Ethernet switch or router.
USER/CO	Connect the Telco-50 connector to subscribers.

Each port is discussed further in the following sections.

3.2.1 Power Connection

Make sure you are using the correct power source as shown on the panel.

To connect the power to the IES-708-22A, insert the female end of the power cord into the power receptacle. Connect the other end of the supplied power cord to the power source. Make sure that no objects obstruct the airflow of the fans.

3.2.2 Console Port

For local management, you can use a computer with terminal emulation software configured to the following parameters:

- VT100 terminal emulation
- 9600 bps
- No parity, 8 data bits, 1 stop bit
- No flow control

Connect the male 9-pin end of the console cable to the console port of the IES-708-22A. Connect the female end to a serial port (COM1, COM2 or other COM port) of your computer.

3.2.3 LAN (Ethernet) Ports

The factory default negotiation settings for the Ethernet ports on the IES-708-22A are:

- Speed: Auto
- Duplex: Auto

Connect the LAN port of your IES-708-22A to an Ethernet WAN switch using a straight-through Category 5 UTP (Unshielded Twisted Pair) cable with RJ-45 connectors.

You may stack multiple IES-708-22A up to the number of ports available on an Ethernet switch.

3.2.4 USER/CO Ports


Use a Telco-50 connector to connect the USER/CO ports to other SHDSL devices. The rest of this section introduces Telco-50 cables, MDF (Main Distribution Frames), and explains how to connect the USER/CO ports to MDF.

3.2.4.1 Telco-50 Cables

Telco-50 cables are used for data and voice applications with MDFs (Main Distribution Frame), patch panels and distribution boxes. They can also be used as extension cables. Telco-50 cables are made up of 25 twisted-pair copper wires.

Connect a Telco-50 connector to one end of the cable (see the hardware specifications appendix for pin assignments) and connect the other end directly to an MDF, RJ-11 connectors or directly to DSL modem(s).


Figure 8 Telco-50 Cable with RJ-11 Connectors

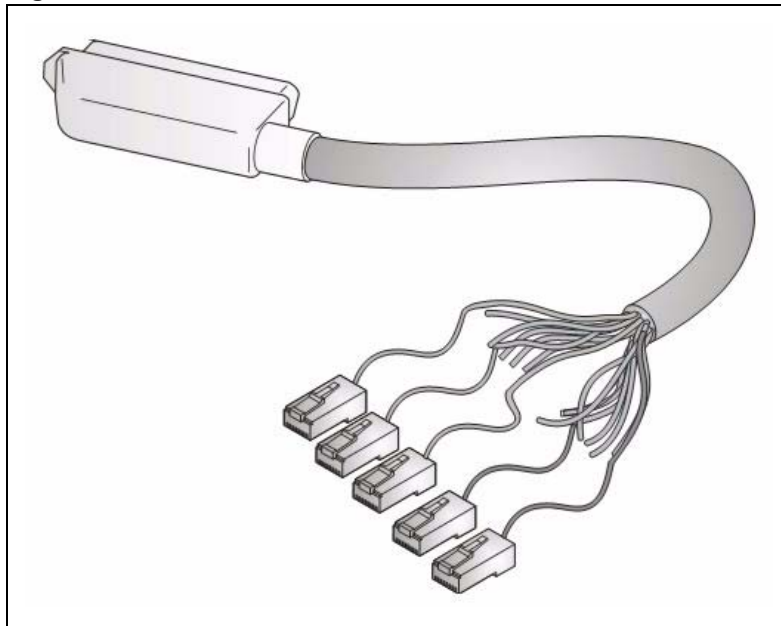

See [Chapter 57 on page 387](#) for pin assignments.

3.2.4.2 Main Distribution Frame (MDF)

An MDF is usually installed between end-users' equipment and the telephone company (CO) in a basement or telephone room. The MDF is the point of termination for the outside telephone company lines coming into a building and the telephone lines in the building.

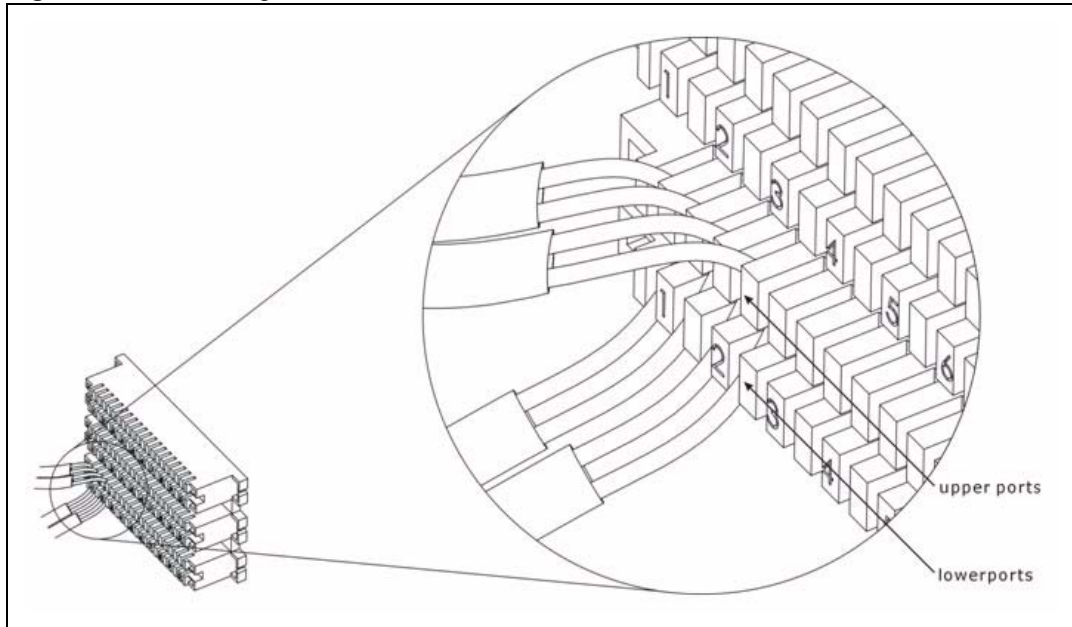
Figure 9 MDF Wiring

- Connect wiring from end-user equipment to the lower ports of an MDF using a telephone wire. Connect wiring from the telephone company to the upper ports of an MDF (see the previous figure).
- Some MDFs have surge protection circuitry built in between the two banks; thus, do not connect telephone wires from the telephone company directly to the IES-708-22A.
- Use a punch-down tool to seat telephone lines between MDF blocks.

3.2.4.3 Typical MDF Scenario

You want to install the IES-708-22A in an environment where there are no previously installed MDFs. There is no phone service and you want to install the IES-708-22A for data-access only. No connections from the **CO** lines are necessary.

You may connect using an MDF or attach RJ-11 connectors to the non-IES-708-22A end of the Telco-50 cable and then connect to DSL modems directly.

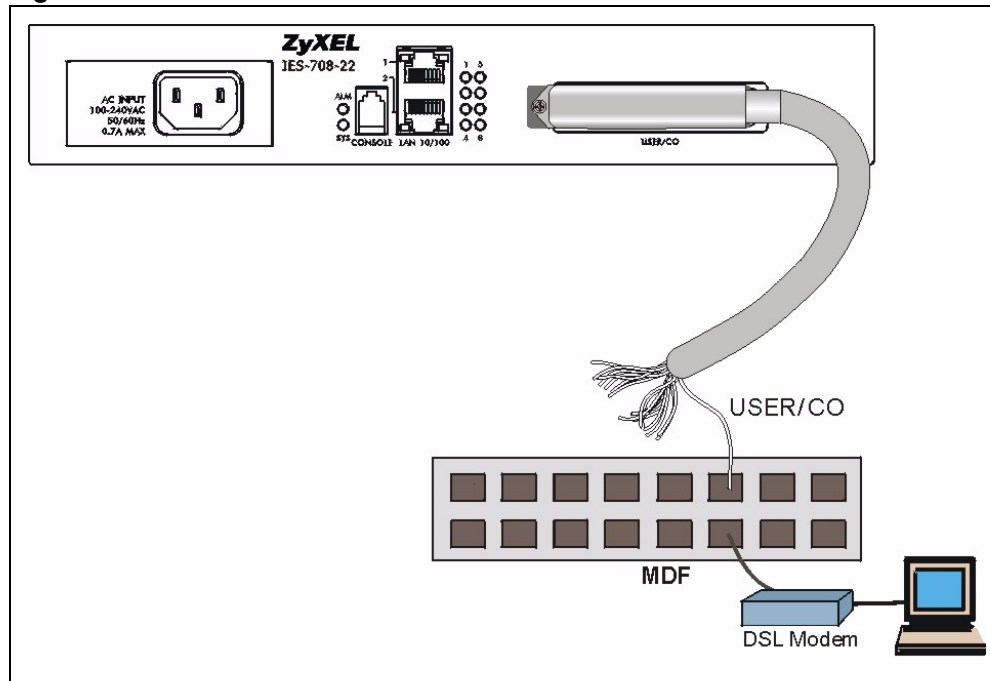Figure 10 MDF Installation Scenario

- 1** Connect the Telco-50 connector end of the cable to the Telco-50 connector.
- 2** Connect the USER/CO wiring on the other end of the Telco-50 cable to the upper ports of the MDF using a punch-down tool.
- 3** Connect the telephone wiring from each end-user's DSL modem to the lower ports of the MDF.

PART III

Web Configurator

Introducing the Web Configurator (57)

Initial Configuration (65)

Home and Port Statistics Screens (71)

System Information (83)

General Setup (87)

User Account (89)

Switch Setup (93)

IP Setup (99)

ENET Port Setup (101)

xDSL Port Setup (103)

xDSL Profiles Setup (117)

xDSL Line Data (131)

Gbond (135)

VLAN (139)

IGMP (147)

Static Multicast (157)

Multicast VLAN (159)

Packet Filtering (165)

MAC Filter (167)

Spanning Tree Protocol (169)

Port Authentication (175)

Port Security (179)

DHCP Relay (181)

DHCP Snoop (185)
2684 Routed Mode (189)
PPPoA to PPPoE (197)
DSCP (203)
TLS PVC (205)
ACL (209)
Downstream Broadcast (215)
SysLog (217)
Access Control (219)
Static Routing (227)
Alarm (229)
Maintenance (235)
Diagnostic (239)
MAC Table (241)
ARP Table (243)

Introducing the Web Configurator

This chapter tells how to access and navigate the web configurator.

4.1 Introduction

The web configurator is an HTML-based management interface that allows easy IES-708-22A setup and management via Internet browser. Use Internet Explorer 6.0 and later or Netscape Navigator 7.0 and later versions. The recommended screen resolution is 1024 by 768 pixels.

In order to use the web configurator you need to allow:

- Web browser pop-up windows from your device. Web pop-up blocking is enabled by default in Windows XP SP (Service Pack) 2.
- JavaScript (enabled by default).
- Java permissions (enabled by default).

4.2 Screen Privilege Levels

There is a high or low privilege level for each screen.

High privilege screens are only available to administrators with high privilege access. High privilege screens include things like creating administrator accounts, restarting the system, saving changes to the nonvolatile memory and resetting to factory defaults. Nonvolatile memory refers to the IES-708-22A's storage that remains even if the IES-708-22A's power is turned off. Administrators with high privilege access can use all screens including the lower privilege screens.

Administrators with the low privilege level are restricted to using only low privilege screens. Low privilege screens are read only.

4.3 System Login

- 1 Start your web browser.
- 2 Type "http://" and the IP address of the IES-708-22A (for example, the default is 192.168.1.1) in the Location or Address field. Press [ENTER].

- The login screen appears. The default username is **admin** and associated default password is **1234**. The date and time display as shown if you have not configured a time server nor manually entered a time and date in the **General Setup** screen.

Figure 11 Login

Enter Network Password

Please type your user name and password.

Site: 172.23.37.206

Realm: IES-708-22A STU-R at Thu Jan 08 21:44:40 1970

User Name:

Password:

☐ Save this password in your password list

OK Cancel

- Click **OK** to view the first web configurator screen.

4.4 Status Screen

The **Status** screen is the first screen that displays when you access the web configurator. The following figure shows the navigating components of a web configurator screen.

Figure 12 Home

ZyXEL

Home Logout

System Up Time: 0(days) : 3:03:16

ENET	Status	Port Name	Media	Duplex	Up Time
1	Up	enet1	100copper	full duplex	3: 3: 7
2	Down	enet2	-	-	--:--:--

xDSL	Status	Actual Rate	Up Time
1	link_down	-	--:--:--
2	link_down	-	--:--:--
3	link_down	-	--:--:--
4	link_down	-	--:--:--
5	link_down	-	--:--:--
6	link_down	-	--:--:--
7	link_down	-	--:--:--
8	link_down	-	--:--:--

Poll Interval(s) 40 Set Interval Stop

Port 1 Clear Counter Reset

©Copyright 1994 - 2007 by ZyXEL Communications Co.

A - Click the menu items to open submenu links, and then click on a submenu link to open the screen in the main window. See [Section 4.5 on page 59](#) for more information.




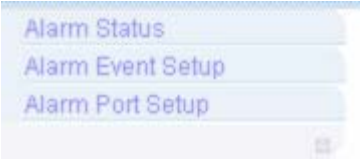

B - Click this to open the **Home** screen. (This is the same screen that is displayed above.) See [Chapter 6 on page 71](#) for more information.

C - Click this to log out of the web configurator.

4.5 Navigation Panel

In the navigation panel, click a menu item to reveal a list of submenu links. Click a submenu link to go to the corresponding screen.

Table 3 Navigation Panel Submenu Links

BASIC SETTING	ADVANCED APPLICATION	ROUTING PROTOCOL
		
ALARM	MANAGEMENT	CONFIG SAVE
		

The following table briefly describes the functions of the screens that you open by clicking the navigation panel's sub-links.

Table 4 Web Configurator Screens

LABEL	DESCRIPTION
Basic Setting	
System Information	Use this screen to display general system and hardware monitoring information.

Table 4 Web Configurator Screens (continued)

LABEL	DESCRIPTION
General Setup	Use this screen to configure general identification information about the device and the time and date settings.
User Account	Use this screen to configure system administrator accounts.
Switch Setup	Use this screen to set up system-wide parameters such as MAC address learning and priority queues.
IP Setup	Use this screen to configure the system and management IP addresses and subnet masks.
ENET Port Setup	Use this screen to configure settings for the Ethernet ports.
xDSL Port Setup	Use these screens for configuring settings for individual DSL ports.
xDSL Profiles Setup	Use these screens for configuring profiles for the DSL ports.
xDSL Line Data	Use these screens for viewing DSL line operating values, bit allocation and performance counters.
G.bond	Use these screens to combine multiple ports into a logical link.
Advanced Application	
VLAN	Use these screens for viewing and configuring the VLAN settings.
IGMP	Use these screens to view IGMP status information and configure IGMP settings and IGMP filters. You can also use these screens to set up bandwidth requirements by multicast group or port and to set up limits on the number of multicast groups to which a port can subscribe.
Static Multicast	Use this screen to configure static multicast entries.
Multicast VLAN	Use these screens to set up multicast VLANs that can be shared among different subscriber VLANs on the network.
Filtering	Use this screen to configure packet filtering.
MAC Filter	Use this screen to configure MAC filtering for each port.
Spanning Tree Protocol	Use these screens to display Rapid Spanning Tree Protocol (RSTP) information and configure RSTP settings.
Port Authentication	Use these screens to configure RADIUS and IEEE 802.1x security settings.
Port Security	Use this screen to limit the number of MAC address that can be learned on a port.
DHCP Relay	Use this screen to configure the DHCP relay settings.
DHCP Snoop	Use these screens to drop traffic from IP addresses not assigned by the DHCP server and to look at a summary of the DHCP packets on each port.
2684 Routed Mode	Use this screen to configure the IES-708-22A to handle 2684 routed mode traffic.
PPPoA to PPPoE	Use this screen to enable PPPoA-to-PPPoE conversions on each port.
DSCP	Use this screen to set up DSCP on each port and to convert DSCP values to IEEE 802.1p values.
TLS PVC	Use this screen to set up Transparent LAN Service (VLAN stacking, Q-in-Q) on each port.
ACL	Use this screen to set up Access Control Logic profiles and to assign them to each PVC.
Downstream Broadcast	Use this screen to block downstream broadcast packets from being sent to specified VLANs on specified ports.
SysLog	Use this screen to configure the syslog settings.

Table 4 Web Configurator Screens (continued)

LABEL	DESCRIPTION
Access Control	Use this screen to configure service access control and configure SNMP and remote management.
Routing Protocol	
Static Routing	Use this screen to configure static routes. A static route defines how the IES-708-22A should forward traffic by configuring the TCP/IP parameters manually.
Alarm	
Alarm Status	Use these screens to view the alarms that are currently in the system.
Alarm Event Setup	Use these screens to view and set the severity levels of the alarms and where the system is to send them.
Alarm Port Setup	Use this screen to set the alarm severity threshold for recording alarms on an individual port(s).
Management	
Maintenance	Use this screen to perform firmware and configuration file maintenance as well as restart the system.
Diagnostic	Use this screen to view system logs and test port(s).
MAC Table	Use this screen to view the MAC addresses of devices attached to what ports.
ARP Table	Use this screen to view the MAC address to IP address resolution table.
Config Save	
Config Save	Use this screen to save the device's configuration into the nonvolatile memory (the IES-708-22A's storage that remains even if the IES-708-22A's power is turned off).

4.6 Changing Your Password

After you log in for the first time, it is recommended you change the default administrator password. Click **Basic Setting** and then **User Account** to display the **User Account** screen.

Figure 13 User Account

User Account Authentication

Enable ☒

Name

Password

Retype Password to confirm

Privilege high

Index	Enable	Name	Privilege	Select
1	V	admin	high	<input type="checkbox"/>

Click the index number **1** to edit the default administrator account settings.

Figure 14 User Account

Index	Enable	Name	Privilege	Select
1	<input checked="" type="checkbox"/>	admin	high	<input type="checkbox"/>

Enter the new password in the **Password** and **Retype Password to confirm** fields, and click **Modify**. Do not forget to click **Config Save** before you exit the web configurator. See [Section 4.7 on page 62](#).

4.7 Saving Your Configuration

Click **Apply** in a configuration screen when you are done modifying the settings in that screen to save your changes back to the run-time memory. Settings in the run-time memory are lost when the IES-708-22A's power is turned off.

Click **Config Save** in the navigation panel to save your configuration to nonvolatile memory. Nonvolatile memory refers to the IES-708-22A's storage that remains even if the IES-708-22A's power is turned off.



Use **Config Save** when you are done with a configuration session.

4.8 Logging out of the Web Configurator

Click **Logout** in any screen to exit the web configurator. You have to log in with your password again after you log out. This is recommended after you finish a management session both for security reasons and so you do not lock out other device administrators.

Figure 15 Logout



Initial Configuration

This chapter describes initial configuration for the IES-708-22A. See [Chapter 57 on page 387](#) for various default settings of the IES-708-22A.

5.1 Initial Configuration Overview

This chapter shows what you first need to do to provide service to DSL subscribers.

5.2 Initial Configuration

This chapter uses the web configurator for initial configuration. See the CLI chapters for information on the commands. Use Internet Explorer 6 and later versions with JavaScript enabled.

- 1 Log in to the web configurator. See [Section 4.3 on page 57](#) for instructions.
- 2 In the navigation panel, click **Basic Setting** > **IP Setup**. The **IP Setup** screen appears.

Figure 16 IP Setup

IP Setup

IP 192.168.1.1

IP mask 255.255.255.0

Apply IP setting Cancel

Default Gateway 192.168.1.254

Apply Gateway setting Cancel

- 3 Use this screen to change the IP address, subnet mask, and default gateway IP address for your network. Apply the settings.



If you change the IP address of the IES-708-22A, after you click **Apply IP setting**, you have to use the new IP address to log into the web configurator again.

- 4 If your subscribers use VPI 0 and VCI 33 (the default for all of the DSL ports), go to step 13. Otherwise, use the following steps to change the VPI and VCI settings for all of the DSL ports.

First, you will delete the default virtual channel from all of the DSL ports. (You cannot edit it). Then, you will configure a new virtual channel for a port and copy it to the other DSL ports.

Adding another virtual channel without deleting the default virtual channel is not recommended since you cannot set the new channel to be the port's super channel. The super channel can forward frames belonging to multiple VLAN groups (that are not assigned to other channels). A channel that is not the super channel can only forward frames with a single VLAN ID (that is configured on that channel). In this case, the IES-708-22A drops any frames received from the subscriber that are tagged with another VLAN ID.

- 5 In the navigation panel, click **Basic Setting** > **xDSL Port Setup**. The **xDSL Port Setup** screen appears.

Figure 17 xDSL Port Setup

Port	Active	Customer Info	Customer Tel	Profile	Mode	Channels
1	enabled			DEFVAL	stuc	1
2	enabled			DEFVAL	stuc	0
3	enabled			DEFVAL	stuc	0
4	enabled			DEFVAL	stuc	1
5	enabled			DEFVAL	stuc	0
6	enabled			DEFVAL	stuc	0
7	disabled			DEFVAL	stuc	1

- 6 Click **VC Setup**. The following screen appears.

Figure 18 VC Setup

VC Setup xDSL Port Setup PPVC Setup

Port: 1 Super Channel: ☐

VPI: 0 VCI: 0

DS VC Profile: DEFVAL

US VC Profile: -

PVID: 1 (1-4094) Priority: 0


Show Port: ALL

Index	Port	VPI/VCI	DS / US VC Profile	PVID	Priority	Select
1	1	0/ 33	DEFVAL/ -	*	*	<input checked="" type="radio"/>
2	4	0/ 33	DEFVAL/ -	*	*	<input type="radio"/>
3	7	0/ 33	DEFVAL/ -	*	*	<input type="radio"/>
4	8	0/ 33	DEFVAL/ -	*	*	<input type="radio"/>

Index -1 selected No Channel copied

7 Select any virtual channel's **Select** radio button, and click **Delete**. The following screen appears.

Figure 19 VC Setup, Delete

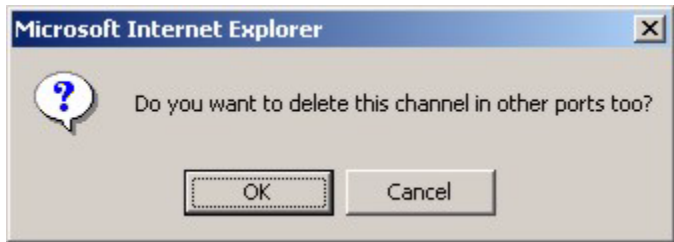

8 Click **OK**. The following screen appears.

Figure 20 Select Ports

Please select ports and click apply button.

1 2 3 4 5 6 7 8

1-8 ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

select

9 Click **All**, and then click **Apply**. The **VC Setup** screen is updated.

Figure 21 VC Setup

VC Setup xDSL Port Setup PPVC Setup

Port 1 Super Channel ☐

VPI 0 VCI 0

DS VC Profile DEFVAL

US VC Profile -

PVID 1 (1-4094) Priority 0

Add Cancel

Show Port ALL

Index	Port	VPI/VCI	DS / US VC Profile	PVID	Priority	Select

Index -1 selected Delete No Channel copied Copy Paste

- 10** Select **Super Channel** to allow the channel to forward frames belonging to multiple VLAN groups (that are not assigned to other channels). Then, enter the VPI and VCI that you use. Leave the other default settings, and click **Add**. The **VC Setup** screen is updated.

Figure 22 VC Setup

VC Setup xDSL Port Setup PPVC Setup

Port 1 Super Channel ☐

VPI 0 VCI 0

DS VC Profile DEFVAL

US VC Profile -

PVID 1 (1-4094) Priority 0

Add Cancel

Show Port ALL

Index	Port	VPI/VCI	DS / US VC Profile	PVID	Priority	Select
1	1	10/43	DEFVAL/-	1	0	<input type="radio"/>

Index -1 selected Delete No Channel copied Copy Paste

- 11** Select the new channel's **Select** radio button. Click **Copy**, and then click **Paste**. The following screen appears. The following screen appears.

Figure 23 Select Ports

Please select ports and click apply button.

1 2 3 4 5 6 7 8

1-8 ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

select **All** **None**

Apply **Cancel**

12 Click **All**, and then click **Apply**. The **VC Setup** screen is updated.

Figure 24 VC Setup

VC Setup [xDSL Port Setup](#) [PPVC Setup](#)

Port Super Channel ☐

VPI VCI

DS VC Profile

US VC Profile

PVID (1-4094) Priority

Add **Cancel**

Show Port

Index	Port	VPI/VCI	DS / US VC Profile	PVID	Priority	Select
<u>1</u>	1	10/ 43	DEFVAL/	1	0	<input type="radio"/>
<u>2</u>	2	10/ 43	DEFVAL/	1	0	<input type="radio"/>
<u>3</u>	3	10/ 43	DEFVAL/	1	0	<input type="radio"/>
<u>4</u>	4	10/ 43	DEFVAL/	1	0	<input type="radio"/>
<u>5</u>	5	10/ 43	DEFVAL/	1	0	<input type="radio"/>

Index -1 selected **Delete** No Channel copied **Copy** **Paste**

13 Click **Config Save > Config Save**. The **Config Save** screen appears.

Figure 25 Config Save

Config Save

According to data entries, Saving process may take 10 seconds to several minutes.

Save

14 Click **Save**. The following screen should appear.

Figure 26 Config Save > Save Successful



You can now use the device (with the other settings set to the defaults) to provide service to DSL subscribers. See [Chapter 57 on page 387](#) for information on other default settings.

Home and Port Statistics Screens

This chapter describes the **Home** (status), **Port Statistics**, and **RMON** screens.

6.1 Home Screen

The **Home** screen of the web configurator displays a port statistical summary with links to each port showing statistical details.

To open this screen, click **Home** in any web configurator screen.

Figure 27 Home

Home
System Up Time: 3(days) : 20:39:31

ENET	Status	Port Name	Media	Duplex	Up Time
1	Up	enet1	100copper	full duplex	92:39:21
2	Down	enet2	-	-	--:--:--

xDSL	Status	Actual Rate	Up Time
1	link_down	-	--:--:--
2	link_down	-	--:--:--
3	link_down	-	--:--:--
4	link_down	-	--:--:--
5	link_down	-	--:--:--

Poll Interval(s)

Port

The following table describes the labels in this screen.

Table 5 Home

LABEL	DESCRIPTION
System up Time	This field shows how long the system has been running since the last time it was started.
	The following fields are related to the Ethernet ports.
ENET	This field displays the number of the Ethernet port. Click a port number to display that port's statistics screen. The Ethernet Port Statistics Screen appears. See Section 6.1.1 on page 72 .
Status	This field displays whether the Ethernet port is connected (Up) or not (Down).
Port Name	This field displays the name of the Ethernet port.

Table 5 Home (continued)

LABEL	DESCRIPTION
Media	This field displays the type of media that this Ethernet port is using for a connection. "-" displays when the port is disabled or not connected.
Duplex	This field displays whether the port is using half or full-duplex communication. "-" displays when the port is disabled or not connected.
Up Time	This field shows the total amount of time in hours, minutes and seconds the port's connection has been up. "--:--:--" displays when the port is disabled or not connected.
	The following fields are related to the xDSL ports.
xDSL	This identifies the xDSL port. Click a port number to display that port's statistics screen. The DSL Port Statistics Screen appears. See Section 6.1.2 on page 75 .
Status	This field shows whether the port is connected (Up) or not (Down).
Actual Rate	This field shows the interface's current bandwidth in kilobits per second. For interfaces that do not vary in bandwidth or for those where no accurate estimation can be made, this object should contain the nominal bandwidth.
Up Time	This field shows the total amount of time in hours, minutes and seconds the port's connection has been up. "-" displays when the port is not connected.
	The following fields and buttons apply to the whole screen.
Poll Interval(s) Set Interval	The text box displays how often (in seconds) this screen refreshes. You may change the refresh interval by typing a new number in the text box and then clicking Set Interval .
Stop	Click Stop to halt system statistic polling.
Port Clear Counter	Select a port from the Port drop-down list box and then click Clear Counter to erase the recorded statistical information for that port.
Reset	Click this to set the Poll Interval(s) and Port fields to their default values and to refresh the screen.

6.1.1 Ethernet Port Statistics Screen

Use this screen to display statistics about an Ethernet port. To open this screen, click an Ethernet port's number in the **Home** screen.

Figure 28 Home > Port Statistics (Ethernet)

Port Statistics [RMON](#) [Up](#)

Port: **ENET1**

Port Name	enet1		
Rx bytes	4583203	Rx packets	32343
Rx error fcs	0	Rx multicast	701
Rx broadcast	12923	Rx mac pause	0
Rx fragments	0	Rx error overrun	0
Rx error mru	0	Rx dropped	0
Rx jabber	0	Rx error alignment	0
Rx oversize	0	Rx undersize	0
Rx discard	550		
Tx bytes	20446027	Tx packets	22999
Tx multicast	0	Tx broadcast	22
Tx mac_pause	0	Tx fragments	0
Tx frames	22999	Tx error underrun	0
Tx undersize	0	Tx jabber	0
Tx oversize	0		
packet(<=64)	28038	packet(65-127)	3660
packet(128-255)	3834	packet(256-511)	3110
packet(512-1023)	4449	packet(1024-1518)	12251
packet(1522)	0		
packet(total)	55342	broadcast(total)	12945
multicast(total)	701	octet(total)	25029230

Poll Interval(s)

Port

The following table describes the labels in this screen.

Table 6 Home > Port Statistics (Ethernet)

LABEL	DESCRIPTION
RMON	Click this to open the RMON Statistics screen.
Up	Click this to go back to the Home screen.
Port	Use this drop-down list box to select a port for which you wish to view statistics. This field identifies the port described in this screen.
Port Name	This field displays the name that you have configured for the port.
Rx bytes	This field shows the number of octets of Ethernet frames received that are from 0 to 1518 octets in size, counting the ones in bad packets, not counting framing bits but counting FCS (Frame Check Sequence) octets. An octet is an 8-bit binary digit (byte).
Rx packets	This field shows the number of packets received on this port (including multicast, unicast, broadcast and bad packets).
Rx error fcs	This field shows the number of frames received with an integral length of 64 to 1518 octets and containing a Frame Check Sequence error.
Rx multicast	This field shows the number of good multicast frames received of 64 to 1518 octets in length (for non VLAN) or 1522 octets (for VLAN), not including Broadcast frames. Frames with range or length errors are also not taken into account.

Table 6 Home > Port Statistics (Ethernet) (continued)

LABEL	DESCRIPTION
Rx broadcast	This field shows the number of good broadcast frames received of 64 to 1518 octets in length (for non VLAN) or 1522 octets (for VLAN), not including multicast frames. Frames with range or length errors are also not taken into account.
Rx mac pause	This field shows the number of valid IEEE 802.3x Pause frames received on this port.
Rx fragments	This field shows the number of frames received that were less than 64 octets long, and contained an invalid FCS, including non-integral and integral lengths.
Rx error overrun	This field shows how many times an Ethernet transmitter overrun occurred.
Rx error mru	This field shows the number of received frames that were dropped due to exceeding the Maximum Receive Unit frame size.
Rx dropped	This field shows the number of received frames that were received into the IES-708-22A, but later dropped because of a lack of system resources.
Rx jabber	This field shows the number of frames received that were longer than 1518 octets (non VLAN) or 1522 octets (VLAN) and contained an invalid FCS, including alignment errors.
Rx error alignment	This field shows the number of frames received that were 64 to 1518 (non VLAN) or 1522 (VLAN) octets long but contained an invalid FCS and a non-integral number of octets.
Rx oversize	This field shows the number of frames received that were bigger than 1518 (non VLAN) or 1522 (VLAN) octets and contained a valid FCS.
Rx undersize	This field shows the number of frames received that were less than 64 octets long and contained a valid FCS.
Rx discard	This field shows the number of frames dropped based on packet filtering.
Tx bytes	This field shows the number of bytes that have been transmitted on this port. This includes collisions but not jam signal or preamble/SFD (Start of Frame Delimiter) bytes.
Tx packets	This field shows the number of packets transmitted on this port.
Tx multicast	This field shows the number of good multicast frames transmitted on this port (not including broadcast frames).
Tx broadcast	This field shows the number of broadcast frames transmitted on this port (not including multicast frames).
Tx mac_pause	This field shows the number of valid IEEE 802.3x Pause frames transmitted on this port.
Tx fragments	This field shows the number of transmitted frames that were less than 64 octets long, and with an incorrect FCS value.
Tx frames	This field shows the number of complete good frames transmitted on this port.
Tx error underrun	This field shows the number of outgoing frames that were less than 64 octets long.
Tx undersize	This field shows the number of frames transmitted that were less than 64 octets long and contained a valid FCS.
Tx jabber	This field shows the number of frames transmitted that were longer than 1518 octets (non VLAN) or 1522 octets (VLAN) and contained an incorrect FCS value.
Tx oversize	This field shows the number of frames transmitted that were bigger than 1518 octets (non VLAN) or 1522 (VLAN) and contained a valid FCS.

Table 6 Home > Port Statistics (Ethernet) (continued)

LABEL	DESCRIPTION
packet(<=64)	This field shows the number of frames received and transmitted (including bad frames) that were 64 octets or less in length (this includes FCS octets but excludes framing bits).
packet(65-127)	This field shows the number of frames received and transmitted (including bad frames) that were 65 to 127 octets in length (this includes FCS octets but excludes framing bits).
packet(128-255)	This field shows the number of frames received and transmitted (including bad frames) that were 128 to 255 octets in length (this includes FCS octets but excludes framing bits).
packet(256-511)	This field shows the number of frames received and transmitted (including bad frames) that were 256 to 511 octets in length (this includes FCS octets but excludes framing bits).
packet(512-1023)	This field shows the number of frames received and transmitted (including bad frames) that were 512 to 1023 octets in length (this includes FCS octets but excludes framing bits).
packet(1024-1518)	This field shows the number of frames received and transmitted (including bad frames) that were 1024 to 1518 octets in length (this includes FCS octets but excludes framing bits).
packet(1522)	This field shows the number of frames received and transmitted (including bad frames) that were 1519 to 1522 octets in length (this includes FCS octets but excludes framing bits).
packet(total)	This field shows the total number of received and transmitted packets.
broadcast(total)	This field shows the total number of received and transmitted broadcast frames.
multicast(total)	This field shows the total number of received and transmitted multicast frames.
octet(total)	This field shows the total number of received and transmitted octets (unicast, multicast and broadcast).
Poll Interval(s) Set Interval	The text box displays how often (in seconds) this screen refreshes. You may change the refresh interval by typing a new number in the text box and then clicking Set Interval .
Stop	Click Stop to halt system statistic polling.
Port Clear Counter	Select a port from the Port drop-down list box and then click Clear Counter to erase the recorded statistical information for that port.
Reset	Click this to set the Poll Interval(s) and Port fields to their default values and to refresh the screen.

6.1.2 DSL Port Statistics Screen

Use this screen to display statistics about a DSL port. To open this screen, click a DSL port's number in the **Home** screen.

Figure 29 Home > Port Statistics (DSL)

Port Statistics [RMON](#) [Up](#)

xDSL Port **1**

Port Name	
Tx packets	10344
Rx packets	918
Tx broadcast packets	9443
Rx broadcast packets	20
Tx discard packets	0
Rx discard packets	0
Errors	0
Tx rate	0
Rx rate	0
Tx bytes	1897453
Rx bytes	252863

VPI/VCI	0/33	-	-	-	-	-	-	-
Tx Packets	10344	-	-	-	-	-	-	-
Rx Packets	918	-	-	-	-	-	-	-
Tx rate	0	-	-	-	-	-	-	-
Rx rate	0	-	-	-	-	-	-	-
Tx cells	35801	-	-	-	-	-	-	-
Rx cells	4771	-	-	-	-	-	-	-
Errors	0	-	-	-	-	-	-	-

Poll Interval(s) [Set Interval](#) [Stop](#)

Port **1** [Clear Counter](#) [Reset](#)

The following table describes the labels in this screen.

Table 7 Home > Port Statistics (DSL)

LABEL	DESCRIPTION
RMON	Click this to open the RMON Statistics screen.
Up	Click this to go back to the Home screen.
xDSL Port	Use this drop-down list box to select a port for which you wish to view statistics. This field identifies the port described in this screen.
Port Name	This field displays the name that you have configured for the port. If you have not configured a name, it is blank.
Tx packets	This field shows the number of packets transmitted on this port.
Rx packets	This field shows the number of packets received on this port.
Tx broadcast packets	This field shows the number of broadcast packets transmitted on this port.
Rx broadcast packets	This field shows the number of broadcast packets received on this port.
Tx discard packets	This field shows the number of outgoing packets that were dropped on this port. The “Tx discard packets” counter always displays “0” because the IES-708-22A does not discard packets that it sends.

Table 7 Home > Port Statistics (DSL) (continued)

LABEL	DESCRIPTION
Rx discard packets	This field shows the number of received packets that were dropped on this port. Some of the possible reasons for the discarding of received (rx) packets are: <ul style="list-style-type: none"> • The packet filter is enabled and the packets matched a packet filter. • The MAC filter is enabled and the IES-708-22A dropped the packets according to the MAC filter's configuration. • The packets contained frames with an invalid VLAN ID.
Errors	This field shows the number of AAL5 frames received with CRC errors.
Tx rate	This field shows the number of kilobytes per second transmitted on this port.
Rx rate	This field shows the number of kilobytes per second received on this port.
Tx bytes	This field shows the number of bytes that have been transmitted on this port.
Rx bytes	This field shows the number of bytes that have been received on this port.
VPI/VCI	This field displays the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) of channels on this port.
Tx Packets	This field shows the number of packets transmitted on each channel.
Rx Packets	This field shows the number of packets received on each channel.
Tx rate	This field shows the number of bytes per second transmitted on each channel.
Rx rate	This field shows the number of bytes per second received on each channel.
Tx cells	This field shows the number of ATM cells transmitted on each channel.
Rx cells	This field shows the number of ATM cells received on each channel.
Errors	This field shows the number of error packets on each channel.
Poll Interval(s) Set Interval	The text box displays how often (in seconds) this screen refreshes. You may change the refresh interval by typing a new number in the text box and then clicking Set Interval .
Stop	Click Stop to halt system statistic polling.
Port Clear Counter	Select a port from the Port drop-down list box and then click Clear Counter to erase the recorded statistical information for that port.
Reset	Click this to set the Poll Interval(s) and Port fields to their default values and to refresh the screen.

6.1.3 RMON Statistics Screen

Use this screen to display RMON statistics about a port. To open this screen, click **RMON** in the **DSL Port Statistics** screen or **Ethernet Port Statistics** screen.

Figure 30 Home > Port Statistics > RMON

RMON		Port Statistics	
	Enet1	Enet2	
etherStatsDropEvents	0	0	
etherStatsOctets	7529467	1461837	
etherStatsPkts	26003	14852	
etherStatsBroadcastPkts	14740	14605	
etherStatsMulticastPkts	1106	100	
etherStatsCRCAlignErrors	0	0	
etherStatsUndersizePkts	0	0	
etherStatsOversizePkts	0	0	
etherStatsFragments	0	0	
etherStatsJabbers	0	0	
etherStatsCollisions	0	0	
etherStats64Octets	14193	8575	
etherStats65to127Octets	3896	3542	
etherStats128to255Octets	2939	2507	
etherStats256to511Octets	1290	223	
etherStats512to1023Octets	391	5	
etherStats1024to1518Octets	3294	0	
Poll Interval(s) <input type="text" value="40"/> <input type="button" value="Set Interval"/> <input type="button" value="Stop"/>			
Port <input type="text" value="1"/> <input type="button" value="Clear Counter"/> <input type="button" value="Reset"/>			

The following table describes the labels in this screen.

Table 8 Home > Port Statistics > RMON

LABEL	DESCRIPTION
Port Statistics	Click this to go back to the previous screen.
Enet1	Click this to look at the RMON history for this port.
Enet2	Click this to look at the RMON history for this port.
EtherStatsDropEvents	This field displays the total number of packets that were dropped on this port.
EtherStatsOctets	This field displays the total number of octets received/transmitted on this port.
EtherStatsPkts	This field displays the total number of good packets received/transmitted on this port.
EtherStatsBroadcastPkts	This field displays the total number of broadcast packets received/transmitted on this port.
EtherStatsMulticastPkts	This field displays the total number of multicast packets received/transmitted on this port.
EtherStatsCRCAlignErrors	This field displays the total number of CRC (Cyclical Redundancy Check) alignment errors on this port.
EtherStatsUndersizePkts	This field displays the total number of packets that were too small received/transmitted on this port.

Table 8 Home > Port Statistics > RMON (continued)

LABEL	DESCRIPTION
EtherStatsOversizePkts	This field displays the total number of packets that were too big received/transmitted on this port.
EtherStatsFragments	This is the number of frames received/transmitted that were less than 64 octets long, and contained an invalid FCS, including non-integral and integral lengths.
EtherStatsJabbers	This is the number of frames received/transmitted that were longer than 1518 octets (non VLAN) or 1522 octets (VLAN) and contained an invalid FCS, including alignment errors.
EtherStatsCollisions	This is the number of frames for which transmission failed due to excessive collisions. Excessive collision is defined as the number of maximum collisions before the retransmission count is reset.
EtherStats64Octets	This is the number of frames received/transmitted (including bad frames) that were 64 octets or less in length (this includes FCS octets but excludes framing bits).
EtherStats65to127Octets	This is the number of frames received/transmitted (including bad frames) that were 65 to 127 octets in length (this includes FCS octets but excludes framing bits).
EtherStats128to255Octets	This is the number of frames received and transmitted (including bad frames) that were 128 to 255 octets in length (this includes FCS octets but excludes framing bits).
EtherStats256to511Octets	This is the number of frames received/transmitted (including bad frames) that were 256 to 511 octets in length (this includes FCS octets but excludes framing bits).
EtherStats512to1023Octets	This is the number of frames received/transmitted (including bad frames) that were 512 to 1023 octets in length (this includes FCS octets but excludes framing bits).
EtherStats1024to1518Octets	This is the number of frames received/transmitted (including bad frames) that were 1024 to 1518 octets in length (this includes FCS octets but excludes framing bits).
Poll Interval(s) Set Interval	The text box displays how often (in seconds) this screen refreshes. You may change the refresh interval by typing a new number in the text box and then clicking Set Interval .
Stop	Click Stop to halt system statistic polling.
Port Clear Counter	Select a port from the Port drop-down list box and then click Clear Counter to erase the recorded statistical information for that port.
Reset	Click this to set the Poll Interval(s) and Port fields to their default values and to refresh the screen.

6.1.4 RMON History Screen

Use this screen to display general information (such as sample time) on history samples. To open this screen, click any port number in the **RMON Statistics** screen.

Figure 31 Home > Port Statistics > RMON > RMON History

Enet1	Index:Interval	1: 30	Seconds	Apply	Refresh
Sample Index	Interval Start	Pkts	BroadcastPkts	MulticastPkts	Utilization
1947	16:13:15	45	45	0	0
1946	16:12:45	85	85	0	0
1945	16:12:15	74	74	0	0
1900	15:49:45	44	44	0	0
1899	15:49:15	62	62	0	0
1898	15:48:45	50	50	0	0

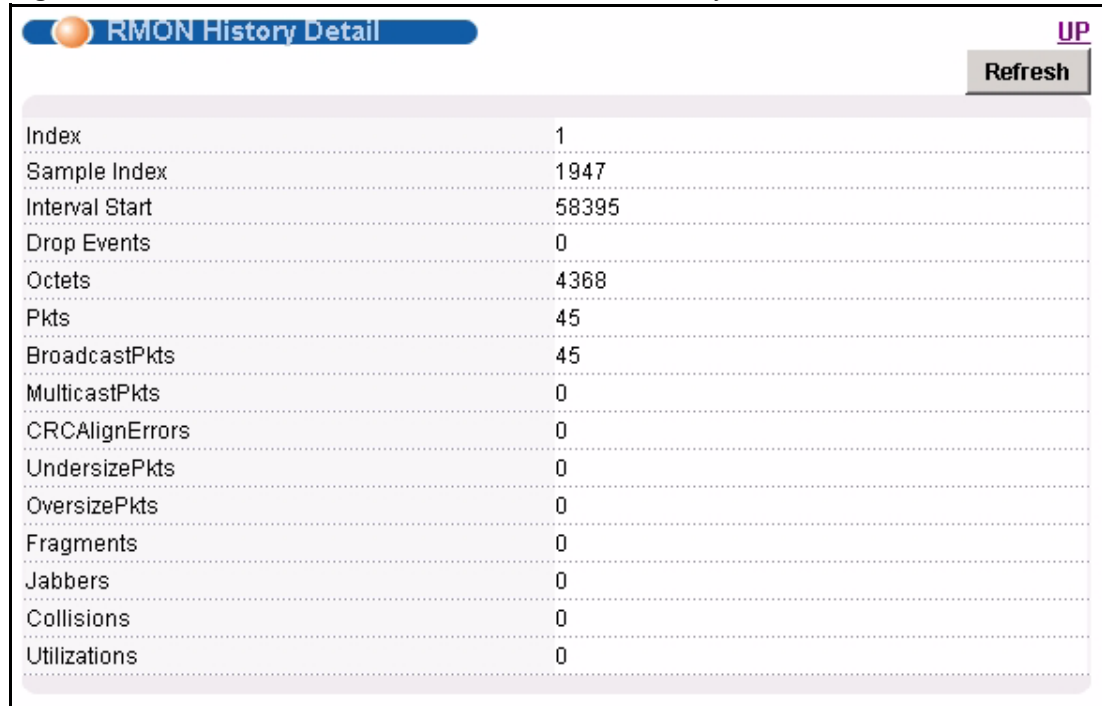
The following table describes the labels in this screen.

Table 9 Home > Port Statistics > RMON > RMON History

LABEL	DESCRIPTION
Index:Interval	Select the index of the sample interval and the desired data sampling time (in seconds).
Apply	Click this to use the selected data sampling time.
Refresh	Click this to update this screen.
Sample Index	This field display the sample number.
Interval Start	This field displays the data sampling time.
Pkts	This field displays the number of packets received or transmitted since the last sample time.
BroadcastPkts	This field displays the number of broadcast packets received or transmitted since the last sample time.
MulticastPkts	This field displays the number of multicast packets received/transmitted since the last sample time.
Utilization	This field displays the port utilization status.

6.1.5 RMON History Detail Screen

Use this screen to display detailed RMON history. To open this screen, click any index number in the **RMON History** screen.

Figure 32 Home > Port Statistics > RMON > RMON History > Detail


Index	1
Sample Index	1947
Interval Start	58395
Drop Events	0
Octets	4368
Pkts	45
BroadcastPkts	45
MulticastPkts	0
CRCAlignErrors	0
UndersizePkts	0
OversizePkts	0
Fragments	0
Jabbers	0
Collisions	0
Utilizations	0

The following table describes the labels in this screen.

Table 10 Home > Port Statistics > RMON > RMON History > Detail

LABEL	DESCRIPTION
UP	Click this to return to the previous screen.
Refresh	Click this to update this screen.
Index	This field displays the index of the sample interval.
Sample Index	This field displays the sample number.
Interval Start	This field displays the data sampling time.
Drop Events	This field displays the total number of packets that were dropped in the sampling period.
Octets	This field displays the total number of octets received/transmitted in the sampling period.
Pkts	This field displays the total number of good packets received/transmitted in the sampling period.
BroadcastPkts	This field displays the total number of broadcast packets received/transmitted in the sampling period.
MulticastPkts	This field displays the total number of multicast packets received/transmitted in the sampling period.
CRCAlignErrors	This field displays the total number of CRC (Cyclical Redundancy Check) alignment errors in the sampling period.
UndersizePkts	This field displays the total number of packets that were too small received/transmitted in the sampling period.
OversizePkts	This field displays the total number of packets that were too big received/transmitted in the sampling period.
Fragments	This is the number of frames received/transmitted that were less than 64 octets long, and contained an invalid FCS, including non-integral and integral lengths.

Table 10 Home > Port Statistics > RMON > RMON History > Detail (continued)

LABEL	DESCRIPTION
Jabbers	This is the number of frames received/transmitted that were longer than 1518 octets (non VLAN) or 1522 octets (VLAN) and contained an invalid FCS, including alignment errors.
Collisions	This is the number of frames for which transmission failed due to excessive collisions. Excessive collision is defined as the number of maximum collisions before the retransmission count is reset.
Utilizations	This field displays the port utilization status in the sampling period.

System Information

The **System Information** screen displays general device information (such as firmware version number) and hardware polling information (such as temperature status). You can check the firmware version number and monitor the hardware status in this screen.

To open this screen, click **Basic Setting > System Information**.

Figure 33 Basic Setting > System Information

System Info

System Name	IES-708-22A STU-R
ZyNOS FW Version	V3.52(AYT.0)b4 09/28/2007
DSL Driver Version	0.9.1.0
DSP Code Version	1.1-1.5.0__004
Hardware Version	AAB
Serial Number	0Z0735039040
Ethernet Address	00:19:cb:4f:0c:50

Hardware Monitor

☒ Enable

Temperature Unit **C**

Temperature- C	Current	MAX	MIN	Average	Threshold(Low)	Threshold(Hi)	Status
1	33	33	30	30	-10	97	Normal
2	34	35	31	32	-10	97	Normal
3	37	38	34	35	-10	97	Normal

Voltage	Current	MAX	MIN	Average	Threshold(Low)	Threshold(Hi)	Status
1	1.797	1.812	1.797	1.797	1.656	1.944	Normal
2	3.394	3.394	3.334	3.391	3.036	3.564	Normal
3	12.144	12.144	12.144	12.144	11.040	12.960	Normal

New threshold **Apply**

Index	Temperature- C (Hi)	Temperature- C (Lo)	Volt. (Hi)	Volt. (Lo)
1	97	-10	1.944	1.656
2	97	-10	3.564	3.036
3	97	-10	12.960	11.040

Poll Interval(s) **Set Interval** **Stop**

The following table describes the labels in this screen.

Table 11 Basic Setting > System Information

LABEL	DESCRIPTION
System Name	This field displays the device's model name, including STU-R/STU-C mode.
ZyNOS F/W Version	This field displays the version number of the device's current firmware including the date created.
DSL Driver Version	This field displays the Digital Subscriber Line firmware version number.
DSP Code Version	This field displays the Digital Signal Processor firmware version number. This is the modem code firmware.
Hardware Version	This is the version of the physical device hardware. This field may be blank.
Serial Number	This is the individual identification number assigned to the device at the factory. This field may be blank.
Ethernet Address	This field refers to the Ethernet MAC (Media Access Control) address of the device.
Hardware Monitor	
Enable	Select this check box to turn the hardware monitor on or clear it to turn the hardware monitor off.
Temperature Unit	Select C to display all temperature measurements in degrees Celsius. Select F to display all temperature measurements in degrees Fahrenheit.
Temperature	Each temperature sensor can detect and report the temperature. Temperature sensor 1 is near the DSL chipset. Temperature sensor 2 is near the central processing unit. Temperature sensor 3 is at the hardware monitor chip.
Current	This shows the current temperature at this sensor.
MAX	This field displays the maximum temperature measured at this sensor.
MIN	This field displays the minimum temperature measured at this sensor.
Average	This field displays the average temperature measured at this sensor.
Threshold (Low)	This field displays the lowest temperature limit at this sensor.
Threshold (Hi)	This field displays the highest temperature limit at this sensor.
Status	This field displays Normal for temperatures below the threshold and Over for those above.
Voltage(V)	The power supply for each voltage has a sensor that can detect and report the voltage.
Current	This is the current voltage reading.
MAX	This field displays the maximum voltage measured at this point.
MIN	This field displays the minimum voltage measured at this point.
Average	This field displays the average voltage measured at this sensor.
Threshold (Low)	This field displays the lowest voltage limit at this sensor.
Threshold (Hi)	This field displays the highest voltage limit at this sensor.
Status	Normal indicates that the voltage is within an acceptable operating range at this point; otherwise Abnormal is displayed.
	Use this section of the screen to configure the hardware monitor threshold settings.
New threshold Apply	Configure new threshold settings in the fields below and click Apply to use them.
Index	This field is a sequential value.

Table 11 Basic Setting > System Information (continued)

LABEL	DESCRIPTION
Temperature (Hi)	Use these fields to configure the highest temperature limit at each sensor.
Temperature (Lo)	Use these fields to configure the lowest temperature limit at each sensor.
Volt. (Hi)	Use these fields to configure the highest voltage limit at each sensor.
Volt. (Lo)	Use these fields to configure the lowest voltage limit at each sensor.
Poll Interval(s) Set Interval	The text box displays how often (in seconds) this screen refreshes. You may change the refresh interval by typing a new number in the text box and then clicking Set Interval .
Stop	Click Stop to halt statistic polling.

General Setup

The **General Setup** screen allows you to configure general device identification information. It also allows you to set the system time manually or get the current time and date from an external server when you turn on your device. The real time is then displayed in the logs.

To open this screen, click **Basic Setting > General Setup**.

Figure 34 Basic Setting > General Setup

The following table describes the labels in this screen.

Table 12 Basic Setting > General Setup

LABEL	DESCRIPTION
Host Name	Choose a descriptive name for identification purposes. This name consists of up to 31 English keyboard characters; spaces are allowed.
Location	Enter the geographic location of your device. You can use up to 31 English keyboard characters; spaces are allowed.
Contact Person's Name	Enter the name of the person in charge of this device. You can use up to 31 English keyboard characters; spaces are allowed.
Model	This field displays your device type, including STU-R/STU-C mode.

Table 12 Basic Setting > General Setup (continued)

LABEL	DESCRIPTION
Use Time Server When Bootup	<p>Select the time service protocol that the timeserver uses. Not all time servers support all protocols, so you may have to use trial and error to find a protocol that works. The main differences between them are the time format.</p> <p>When you select the Daytime (RFC 867) format, the IES-708-22A displays the day, month, year and time with no time zone adjustment. When you use this format it is recommended that you use a Daytime timeserver within your geographical time zone. Time (RFC-868) format displays a 4-byte integer giving the total number of seconds since 1970/1/1 at 0:0:0.</p> <p>NTP (RFC-1305) is similar to Time (RFC-868).</p> <p>None is the default value. Enter the time manually. Each time you turn on the device, the time and date will be reset to 2000-1-1 0:0.</p> <p>The IES-708-22A requests time and date settings from the time server under the following circumstances.</p> <ul style="list-style-type: none"> • When the IES-708-22A starts up. • When you click Apply in this screen. • 24-hour intervals after starting up.
Time Server IP Address	Enter the IP address of your timeserver. The device searches for the timeserver for up to 180 seconds.
Current Time	This field displays the time you open this menu (or refresh the menu).
New Time (hh:min:ss)	Enter the new time in hour, minute and second format. The new time then appears in the Current Time field after you click Apply .
Current Date	This field displays the date you open this menu.
New Date (yyyy-mm-dd)	Enter the new date in year, month and day format. The new date then appears in the Current Date field after you click Apply .
Time Zone	Select the time difference between UTC (Universal Time Coordinated, formerly known as GMT, Greenwich Mean Time) and your time zone from the drop-down list box.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

User Account

The **User Account** screens allows you to set up and configure system administrator accounts for the IES-708-22A. You can also configure the authentication policy for IES-708-22A administrators. This is different than port authentication in [Chapter 24 on page 175](#).

See [Chapter 24 on page 175](#) for background information on authentication.

9.1 User Account Screen

To open this screen, click **Basic Setting > User Account**.

Figure 35 Basic Setting > User Account

The screenshot shows the 'User Account' screen with a blue header bar containing an orange circle icon and the text 'User Account'. To the right of the header is a link labeled 'Authentication'. Below the header, there is a form with the following fields: 'Enable' with a checked checkbox, 'Name' with a text input field, 'Password' with a text input field, 'Retype Password to confirm' with a text input field, and 'Privilege' with a dropdown menu showing 'high'. Below these fields are 'Add' and 'Cancel' buttons. At the bottom of the screen, there is a table with the following data:

Index	Enable	Name	Privilege	Select
1	V	admin	high	<input type="checkbox"/>

Below the table are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 13 Basic Setting > User Account

LABEL	DESCRIPTION
Authentication	Click this to open the Authentication screen. See Section 9.2 on page 90 .
Enable	Select this check box to turn on the administrator account.
Name	Enter a user name for the administrator account.
Password	Enter a password for the administrator account.
Retype Password to confirm	Re-enter the administrator account's password to verify that you have entered it correctly.

Table 13 Basic Setting > User Account (continued)

LABEL	DESCRIPTION
Privilege	Select a privilege level to determine which screens the administrator can use. There is a high, medium or low privilege level for each command. Select high to allow the administrator to use all commands including the lower privilege commands. High privilege commands include things like creating administrator accounts, restarting the system and resetting the factory defaults. Select middle to allow the administrator to use middle or low privilege commands. Select low to allow the administrator to use only low privilege commands. Low privilege commands are read only.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields again.
Index	This field displays the number of the user account. Click an account's index number to use the top of the screen to edit it.
Enable	This field displays a "V" if you have the administrator account turned on. It displays a "-" if the administrator account is turned off.
Name	This field displays the administrator account's user name.
Privilege	This field displays the administrator account's access level (high, middle or low).
Select	Select this check box and click the Delete button to remove an administrator account.
Delete	Select an administrator account's check box and click this button to remove the administrator account.
Cancel	Click Cancel to start configuring the screen afresh.

9.2 Authentication Screen

Use this screen to set up the authentication policies and settings by which administrators can access the IES-708-22A.

To open this screen, click **Basic Setting > User Account > Authentication**.

Figure 36 Basic Setting > User Account > Authentication

The screenshot shows the 'Authentication' configuration screen. The header bar is blue with an orange circle icon on the left and the text 'Authentication'. To the right of the header bar is a link 'User account' in purple. Below the header bar is a form with several fields: 'Authentication Mode' with a dropdown menu showing 'local then radius', 'IP' with a text box containing '127.0.0.254', 'Port' with a text box containing '1812' and a range '(1~65535)', 'Secret' with a text box containing '1234', and 'Default Privilege Level' with a dropdown menu showing 'low'. At the bottom of the form are two buttons: 'Apply' and 'Cancel'.

The following table describes the labels in this screen.

Table 14 Basic Setting > User Account > Authentication

LABEL	DESCRIPTION
User account	Click this to open the User Account screen. See Section 9.1 on page 89 .
Authentication Mode	Select the process by which the IES-708-22A authenticates administrators. local - Search the local database. You maintain this database in the User Account screen. radius - Check an external RADIUS database using the settings below. local then radius - Search the local database; if the user name is not found, check an external RADIUS database using the settings below.
IP	Enter the IP address of the external RADIUS server in dotted decimal notation.
Port	The default UDP port of the RADIUS server for authentication is 1812 . You need not change this value unless your network administrator instructs you to do so.
Secret	Specify a password (up to 31 alphanumeric characters) as the key to be shared between the external RADIUS server and the IES-708-22A. This key is not sent over the network. This key must be the same on the external RADIUS server and the IES-708-22A.
Default Privilege Level	Select the privilege level assigned to administrators in case the external RADIUS database does not provide one. The privilege level determines which screens the administrator can use. There is a high, medium or low privilege level for each command. You can also choose to deny access to the IES-708-22A. Select high to allow the administrator to use all commands including the lower privilege commands. High privilege commands include things like creating administrator accounts, restarting the system and resetting the factory defaults. Select middle to allow the administrator to use middle or low privilege commands. Select low to allow the administrator to use only low privilege commands. Low privilege commands are read only. Select deny to prevent the administrator from accessing the IES-708-22A.

Switch Setup

The **Switch Setup** screen allows you to set up and configure global device features.

10.1 GARP Timer Setup

GARP (Generic Attribute Registration Protocol) allows network devices to register and de-register attribute values with other GARP participants within a bridged LAN. GARP is a protocol that provides a generic mechanism for protocols that serve a more specific application, for example, GVRP (GARP VLAN Registration Protocol). GARP and GVRP are the protocols used to automatically register VLAN membership across switches.

Switches join VLANs by making a declaration. A declaration is made by issuing a **Join** message using GARP. Declarations are withdrawn by issuing a **Leave** message. A **Leave All** message terminates all registrations. GARP timers set declaration timeout values.

10.2 Switch Modes

The IES-708-22A supports standalone and daisychain switch modes.

10.2.1 Standalone Switch Mode

“Standalone switch mode” relates to the IES-708-22A’s operational behavior, not a standalone network topology. The standalone switch mode allows either or both of the IES-708-22A’s Ethernet ports to connect to the backbone Ethernet network. You can also connect one of the IES-708-22A’s Ethernet ports to the Ethernet network and the other to another IES-708-22A (see [Figure 37 on page 94](#) for an example). When the IES-708-22A is in standalone mode, you can use it in a network topology that uses loops (you should also enable RSTP). You can have multiple IES-708-22A connected on the same network and set both of them to use standalone mode in order to use them with a network topology that uses loops.


Standalone switch mode with port isolation enabled blocks communications between subscriber ports on an individual IES-708-22A. However, one IES-708-22A’s subscribers can communicate with another IES-708-22A’s subscribers if the two IES-708-22A’s Ethernet ports are connected to each other (see [Figure 37 on page 94](#) for an example). If you have multiple IES-708-22A connected on the same network and set to standalone mode, they do not all need to have the same port isolation setting.

10.2.2 Port Isolation with Standalone Switch Mode Example

The following graphic shows IES-708-22A **1** and **2** connected to each other and the Ethernet backbone switch (**3**) in a network topology that creates a loop. The IES-708-22A are using the standalone switch mode and have RSTP enabled.

In this example, both IES-708-22A have port isolation turned on. Communications between **A** and **B** must first go through another switch (**3** in the figure). However, **A** and **B** can communicate with **C** without their communications going through another switch or router.

Figure 37 Port Isolation with Standalone Switch Mode Example

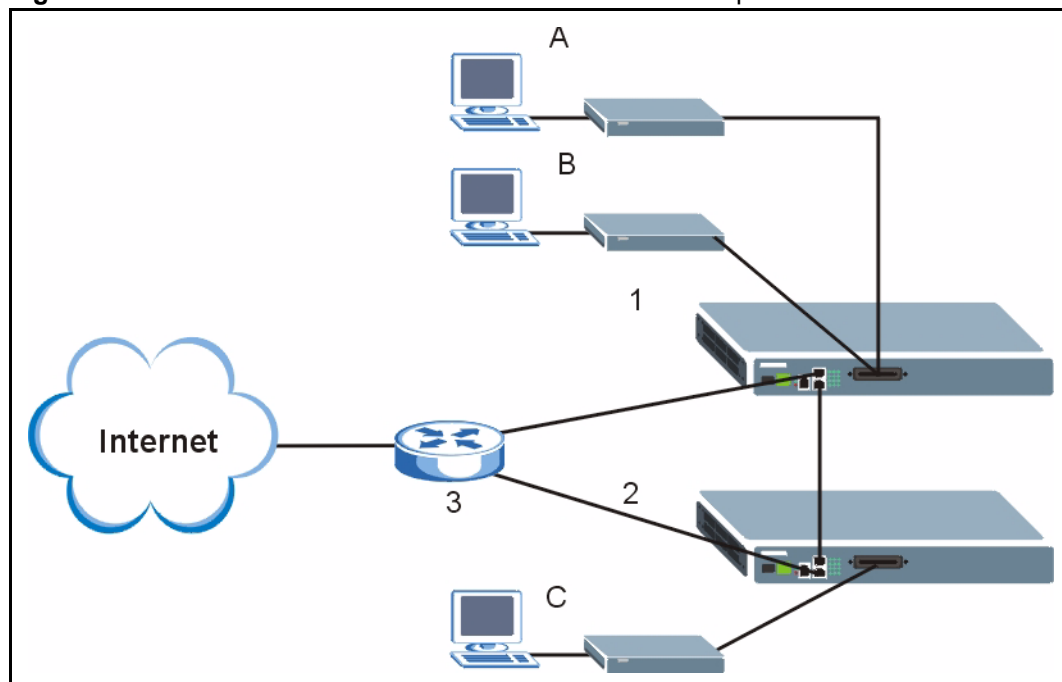

10.2.3 Daisychain Switch Mode

Daisychain switch mode sets the IES-708-22A to use Ethernet port one (ENET 1) as an uplink port to connect to the Ethernet backbone and Ethernet port two (ENET 2) to connect to another (daisychained or subtending) IES-708-22A. The daisychain switch mode is recommended for use in a network topology that does not have loops. When you daisychain multiple IES-708-22A they must all be set to daisychain mode.


Daisychain switch mode with port isolation enabled blocks communications between subscriber ports on an individual IES-708-22A and between the subscribers of any daisychained IES-708-22A (see [Figure 38 on page 95](#) for an example). Use the same port isolation setting on all IES-708-22A that you set up in a daisychain.

10.2.4 Port Isolation with Daisychain Switch Mode Example

In the example below, the IES-708-22A **1** has its Ethernet port one (ENET 1) connected to the Ethernet backbone switch (**3**) and its Ethernet port two (ENET2) connected to Ethernet port one (ENET 1) of the daisychained IES-708-22A (**2**).

With port isolation turned on, communications between **A** and **B** must first go through another switch or router (**3** in the figure). **A** and **B** also cannot communicate with **C** without their communications going through another switch or router.

Figure 38 Port Isolation with Daisychain Switch Mode Example

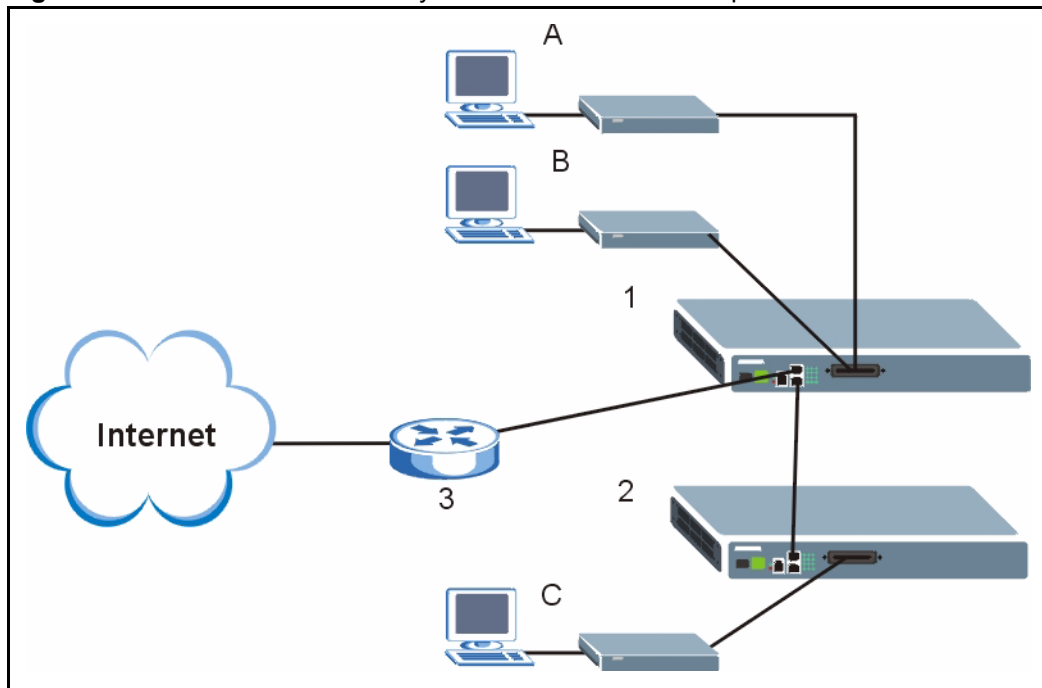

10.3 Switch Setup Screen

To open this screen, click **Basic Setting > Switch Setup**.

Figure 39 Basic Setting > Switch Setup

The following table describes the labels in this screen.

Table 15 Basic Setting > Switch Setup

LABEL	DESCRIPTION
MAC Address Learning Aging Time	Enter a time from 10 to 10,000 seconds. This is how long all dynamically learned MAC addresses remain in the MAC address table before they age out (and must be relearned). Enter 0 to disable the aging out of MAC addresses.
	GARP Timer: Switches join VLANs by making a declaration. A declaration is made by issuing a Join message using GARP. Declarations are withdrawn by issuing a Leave message. A Leave All message terminates all registrations. GARP timers set declaration timeout values. Click here for more information on VLANs.
Join Timer	(STU-C mode only) Join Timer sets the duration of the Join Period timer for GVRP in milliseconds. Each port has a Join Period timer. The allowed Join Time range is between 100 and 65535 milliseconds; the default is 200 milliseconds.
Leave Timer	(STU-C mode only) Leave Timer sets the duration of the Leave Period timer for GVRP in milliseconds. Each port has a single Leave Period timer. Leave Time must be two times larger than Join Timer; the default is 600 milliseconds.
Leave All Timer	(STU-C mode only) Leave All Timer sets the duration of the Leave All Period timer for GVRP in milliseconds. Each port has a single Leave All Period timer. Leave All Timer must be larger than Leave Timer.
Port Isolation Active	(STU-C mode only) Turn on port isolation to block communications between subscriber ports. When you enable port isolation you do not need to configure the VLAN to isolate subscribers.

Table 15 Basic Setting > Switch Setup (continued)

LABEL	DESCRIPTION
MAC Anti-Spoofing	(STU-C mode only) Select this if you want the IES-708-22A to generate an alarm and issue a SNMP trap when an existing MAC address appears on another port.
Switch Mode	<p>(STU-C mode only) Select Standalone to use both of the IES-708-22A's Ethernet ports (ENET 1 and ENET 2) as uplink ports.</p> <p>Note: Standalone mode is recommended for network topologies that use loops.</p> <p>Use Daisychain mode to cascade (daisychain) multiple IES-708-22A. The IES-708-22A uses Ethernet port one (ENET 1) as an uplink port to connect to the Ethernet backbone and uses Ethernet port two (ENET 2) to connect to another (daisychained or subtending) IES-708-22A.</p> <p>Note: Daisychain mode is recommended for network topologies that do not use loops.</p>
Priority Queue Assignment	<p>IEEE 802.1p defines up to 8 separate traffic types by inserting a tag into a MAC-layer frame that contains bits to define class of service. Frames without an explicit priority tag are given the default priority of the ingress port. Use the following fields to configure the priority level-to-physical queue mapping.</p> <p>The device has 4 physical queues that you can map to the 8 priority levels for outgoing Ethernet traffic. The device has 8 physical queues that you can map to the 8 priority levels for outgoing DSL traffic. Traffic assigned to higher index queues gets through the device faster while traffic in lower index queues is dropped if the network is congested.</p>
Priority Level	The following descriptions are based on the traffic types defined in the IEEE 802.1d standard (which incorporates IEEE 802.1p).
Priority 7	Typically used for network control traffic such as router configuration messages.
Priority 6	Typically used for voice traffic that is especially sensitive to jitter (jitter is the variations in delay).
Priority 5	Typically used for video that consumes high bandwidth and is sensitive to jitter.
Priority 4	Typically used for controlled load, latency-sensitive traffic such as SNA (Systems Network Architecture) transactions.
Priority 3	Typically used for "excellent effort" or better than best effort and would include important business traffic that can tolerate some delay.
Priority 2	This is for "spare bandwidth".
Priority 1	This is typically used for non-critical "background" traffic such as bulk transfers that are allowed but that should not affect other applications and users.
Priority 0	Typically used for best-effort traffic.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.

IP Setup

The **IP Setup** screen allows you to configure a device IP address, subnet mask and DNS (domain name server) for management purposes.

To open this screen, click **Basic Setting > IP Setup**.

Figure 40 Basic Setting > IP Setup

The following table describes the labels in this screen.

Table 16 Basic Setting > IP Setup

LABEL	DESCRIPTION
IP	Enter the IP address of your IES-708-22A in dotted decimal notation for example 1.2.3.4.
IP Mask	Enter the IP subnet mask of your IES-708-22A in dotted decimal notation for example 255.255.255.0.
Apply IP setting	Click Apply IP setting to save your changes to the device's IP address and/or subnet mask to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields again.
Default Gateway	Enter the IP address of the default outgoing gateway in dotted decimal notation.
Apply Gateway setting	Click Apply Gateway setting to save your changes to the device's IP address and/or subnet mask to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields again.

ENET Port Setup

The **ENET Port Setup** screen allows you to configure settings for the Ethernet ports.

To open this screen, click **Basic Setting > ENET Port Setup**.

Figure 41 Basic Setting > ENET Port Setup

Port	Active	Name	Speed Mode	Duplex
ENET1	<input checked="" type="checkbox"/>	enet1	Auto	Full Duplex
ENET2	<input checked="" type="checkbox"/>	enet2	Auto	Full Duplex

The following table describes the labels in this screen.

Table 17 Basic Setting > ENET Port Setup

LABEL	DESCRIPTION
Port	This is the port index number.
Active	Select the check box to turn on the port. Clear it to disable the port.
Name	Enter a descriptive name that identifies this port. You can use up to 31 English keyboard characters; spaces are allowed.
Speed Mode	<p>Select the type of Ethernet connection for this port. When you don't use auto-negotiation, you must make sure that the settings of the peer Ethernet port are the same in order to connect.</p> <p>Select Auto (auto-negotiation) to have the IES-708-22A automatically determine the type of connection that the Ethernet port has. When the peer Ethernet device has auto-negotiation turned on, the IES-708-22A negotiates with the peer to determine the connection speed. If the peer Ethernet port does not have auto-negotiation turned on, the IES-708-22A determines the connection speed by detecting the signal on the cable and using full duplex.</p> <p>Select 10 Copper if the Ethernet port has a 10 MB electrical connection.</p> <p>Select 100 Copper if the Ethernet port has a 100 MB electrical connection.</p>
Duplex	The IES-708-22A uses full duplex Ethernet connections by default.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.

xDSL Port Setup

This chapter explains how to configure settings for profiles and individual DSL ports. It also covers how to configure virtual channels and virtual channel profiles.

13.1 DSL Profiles

A DSL profile is a table that contains a list of pre-configured DSL settings. Each DSL port has one (and only one) profile assigned to it at any given time. You can configure multiple profiles, including profiles for troubleshooting. Profiles allow you to configure DSL ports efficiently. You can configure all of the DSL ports with the same profile, thus removing the need to configure the DSL ports one-by-one. You can also change an individual DSL port by assigning it a different profile.

For example, you could set up different profiles for different kinds of accounts (for example, economy, standard and premium). Assign the appropriate profile to a DSL port and it takes care of a large part of the port's configuration maximum and minimum transfer rates. You still get to individually enable or disable each port, as well as configure its channels and operational mode.

13.2 Alarm Profiles

Alarm profiles define DSL port alarm thresholds. The IES-708-22A sends an alarm trap and generates a syslog entry when the thresholds of the alarm profile are exceeded. See [Section 14.8 on page 124](#) for how to configure alarm profiles.

13.3 Downstream and Upstream

Downstream refers to traffic going out from the IES-708-22A to the subscriber's DSL modem or router. Upstream refers to traffic coming into the IES-708-22A from the subscriber's DSL modem or router.

13.4 Default Settings

The default profile always exists and all of the DSL ports use the default profile settings when the IES-708-22A is shipped. The default profile's name is set to `DEFVAL`.

See [Chapter 57 on page 387](#) for the settings of the default profile and DSL port default settings.

13.5 xDSL Port Setup Screen

To open this screen, click **Basic Setting > xDSL Port Setup**.

Figure 42 Basic Setting > xDSL Port Setup

Port	Active	Customer Info	Customer Tel	Profile	Mode	Channels
1	enabled			DEFVAL	stuc	1
2	enabled			DEFVAL	stuc	0
3	enabled			DEFVAL	stuc	0
4	enabled			DEFVAL	stuc	1
5	enabled			DEFVAL	stuc	0
6	enabled			DEFVAL	stuc	0
7	disabled			DEFVAL	stuc	1
8	enabled			DEFVAL	stuc	1

The following table describes the labels in this screen.

Table 18 Basic Setting > xDSL Port Setup

LABEL	DESCRIPTION
VC Setup	Click VC Setup to open the VC Setup screen where you can configure VC settings for the DSL ports (see Section 13.7 on page 108).
PPVC Setup	(STU-C mode only) Click PPVC Setup to open the PPVC Setup screen where you can configure priority PVC settings for the DSL ports (see Section 13.9 on page 113).
Copy Port Paste	<p>Do the following to copy settings from one DSL port to another DSL port or ports.</p> <ol style="list-style-type: none"> 1. Select the number of the DSL port from which you want to copy settings. 2. Select the settings that you want to copy. 3. Click Paste and the following screen appears. 4. Select to which ports you want to copy the settings. Use All to select every port. Use None to clear all of the check boxes. 5. Click Apply to paste the settings. <p>Figure 43 Select Ports</p>

Table 18 Basic Setting > xDSL Port Setup (continued)

LABEL	DESCRIPTION
Active	Select this check box to copy this port's active setting. This is configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
Customer Info	Select this check box to copy this port's subscriber information. This is configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
Customer Tel	Select this check box to copy this port's subscriber's telephone number. This is configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
SHDSL Features	Select this check box to copy this port's SHDSL feature settings. These are configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
Profile	Select this check box to copy this port's port profile settings. These are configured in the xDSL Port Profile Setup screens (see Chapter 14 on page 117).
IGMP Filter	(STU-C mode only) Select this check box to copy this port's IGMP filter settings. These are configured in the IGMP Filter Profile screen (see Section 14.10 on page 127).
Security	Select this check box to copy this port's security settings. This is configured in the Port Security screen (see Section 25.2 on page 179).
Frame Type	Select this check box to copy this port's allowed frame type. This is configured in the Static VLAN Setting screen (see Section 17.4 on page 142).
Virtual Channels	Select this check box to copy this port's virtual channel settings. These are configured in the VC Setup screen (see Section 13.7 on page 108).
Alarm Profile	Select this check box to copy this port's alarm profile. This is configured in the Alarm Profile Setup screen (see Section 14.8 on page 124).
PVID&Priority	Select this check box to copy this port's PVID and priority settings. These are configured in the VLAN Port Setting screen (see Chapter 17 on page 139).
Packet Filter	(STU-C mode only) Select this check box to copy this port's packet filter settings. These are configured in the Packet Filtering screen (see Section 21.1 on page 165).
Paste	See Copy Port .
Port	This field shows each DSL port number.
Active	This field shows the active status of this port. The port may be enabled or disabled . This is configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
Customer Info	This field shows the customer information provided for this port. This is configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
Customer Tel	This field shows the customer telephone number provided for this port. This is configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
Profile	This field shows which profile is assigned to this port. This is configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
Mode	This field shows which DSL operational mode the port is set to use. This is configured in the xDSL Port Setting screen (see Section 13.5.1 on page 105).
Channels	This field displays the number of PVCs (Permanent Virtual Circuits) that are configured for this port. This is configured in the VC Setup screen (see Section 13.7 on page 108).

13.5.1 xDSL Port Setting Screen

To open this screen, click **Basic Setting > xDSL Port Setup**, and then click a port's index number.

Figure 44 Basic Setting > xDSL Port Setup > xDSL Port Setting

The following table describes the labels in this screen.

Table 19 Basic Setting > xDSL Port Setup > xDSL Port Setting

LABEL	DESCRIPTION
Last Page	Click this to return to the previous screen.
General Setup	
Active	Select this check box to turn on this DSL port.
Customer Info	Enter information to identify the subscriber connected to this DSL port. You can use up to 31 printable English keyboard characters (including spaces and hyphens).
Customer Tel	Enter information to identify the telephone number of the subscriber connected to this DSL port. You can use up to 15 English keyboard characters (including spaces and hyphens).
Profile	Select a profile of DSL settings (such as the transfer rate, wire pair and signal to noise ratio settings) to assign to this port. Use the Port Profile screen to configure port profiles (see Chapter 14 on page 117)
Span Alarm Profile	Select an alarm profile to define the thresholds that trigger an alarm on the port when exceeded. This alarm profile is for the whole span. This is the entire connection including any SHDSL regenerators that might be located between the STU-C (SHDSL Termination Unit - Central) and STU-R (SHDSL Termination Unit - Remote) end points. An SHDSL regenerator amplifies the SHDSL signal in order to increase the connection distance. Use the Alarm Profile screen to configure alarm profiles. (See Section 14.8 on page 124).
PAM	Specify the type of Trellis Coded Pulse Amplitude Modulation (TC-PAM) the IES-708-22A uses. Auto: The IES-708-22A selects the type of TC-PAM automatically. PAM16: The IES-708-22A uses 16-TCPAM. PAM32: The IES-708-22A uses 32-TCPAM.
Stuc Alarm Profile	Select an alarm profile to define the thresholds that trigger an alarm on the port when exceeded. This alarm profile is for the STU-C (SHDSL Termination Unit - Central) end point. Use the Alarm Profile screen to configure alarm profiles. (See Section 14.8 on page 124).

Table 19 Basic Setting > xDSL Port Setup > xDSL Port Setting (continued)

LABEL	DESCRIPTION
Stur Alarm Profile	Select an alarm profile to define the thresholds that trigger an alarm on the port when exceeded. This alarm profile is for the STU-R (SHDSL Termination Unit - Remote) end point. Use the Alarm Profile screen to configure alarm profiles. (See Section 14.8 on page 124).
IGMP Filter Profile	(STU-C mode only) The IGMP filter profile defines which multicast groups a port can join. Select a profile of IGMP filter settings to assign to this port. Use the IGMP Filter Profile screen to configure IGMP filter profiles (see Section 14.10 on page 127).
SHDSL feature	
Power Backoff	<p>Power backoff calculates how much power is needed for the connection. This allows the STU-C and STU-R to use only enough power for the port's maximum transmission rate (configured in the DSL profile). You can normally just leave the default setting (normal_epl). You only need to use this if the STU-R does not support EPL or you need to configure the port to use a specific power backoff setting.</p> <p>Select normal_epl to use power backoff with EPL (Estimated Power Loss). Each end calculates an EPL and uses it in determining a power backoff value for the other end to use.</p> <p>Select forced_epl to use forced power backoff with EPL. The STU-C calculates an EPL and uses it in determining the power backoff values for both ends. This can be used when the STU-R device does not support EPL.</p> <p>Select forced_no_epl to use forced power backoff without EPL. The STU-C uses the value you specify in determining the power backoff values for both ends. This can be used when you have prior knowledge about the physical line (loop).</p> <p>Set the power backoff value (0~31 in dBm).</p> <p>When using normal_epl or forced_epl, this sets the maximum power backoff value.</p> <p>When using forced_no_epl, this sets the power backoff value.</p>
PMMS	<p>Specify how the target noise margin value is acquired.</p> <p>Select normal to have each end of the connection determine the target noise margin to be used by the other end.</p> <p>Select forced to set the upstream and downstream parameters according to the target noise margin value set in the DSL profile.</p>
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields again.

13.6 Virtual Channels

Defining virtual channels (also called Permanent Virtual Circuits or PVCs) allows you to set priorities for different services or subscribers. You can define up to eight channels on each DSL port and use them for different services or levels of service. You set the PVID that is assigned to untagged frames received on each channel. You also set an IEEE 802.1p priority for each of the PVIDs. In this way you can assign different priorities to different channels (and consequently the services that get carried on them or the subscribers that use them).

For example, you want to give high priority to voice service on one of the DSL ports.

Use the **Edit Static VLAN** screen to configure a static VLAN on the IES-708-22A for voice on the port.

Use the **DSL Edit Port Channel Setup** screen to:

- Configure a channel on the port for voice service.
- Set the channel to use the PVID of the static VLAN you configured.
- Assign the channel a high priority.

13.6.1 Super Channel

The IES-708-22A forwards frames belonging to VLAN groups that are not assigned to specific channels to the super channel. Enable the super channel option to allow a channel forward frames belonging to multiple VLAN groups (that are not assigned to other channels). The super channel functions in the same way as the channel in a single channel environment. One port can have only one super channel.

13.6.2 LLC

LLC is a type of encapsulation where one VC (Virtual Circuit) carries multiple protocols with each packet header containing protocol identifying information. Despite the extra bandwidth and processing overhead, this method may be advantageous if it is not practical to have a separate VC for each carried protocol, for example, if charging heavily depends on the number of simultaneous VCs.

13.6.3 VC Mux

VC Mux is a type of encapsulation where, by prior mutual agreement, each protocol is assigned to a specific virtual circuit, for example, VC1 carries IP, VC2 carries IPX, and so on. VC-based multiplexing may be dominant in environments where dynamic creation of large numbers of ATM VCs is fast and economical.

13.6.4 Virtual Channel Profile

Virtual channel profiles allow you to configure the virtual channels efficiently. You can configure all of the virtual channels with the same profile, thus removing the need to configure the virtual channels one-by-one. You can also change an individual virtual channel by assigning it a different profile.

The IES-708-22A provides two default virtual channel profiles: **DEFVAL** (for LLC encapsulation) and **DEFVAL_VC** (for VC encapsulation). By default, all virtual channels are associated to **DEFVAL**.

13.7 VC Setup Screen

Use this screen to view and configure a port's channel (PVC) settings.

To open this screen, click **Basic Setting > xDSL Port Setup > VC Setup**.

Figure 45 Basic Setting > xDSL Port Setup > VC Setup

VC Setup [xDSL Port Setup](#) [PPVC Setup](#)

Port: 1
 VPI: 0
 VCI: 0
 DS VC Profile: DEFVAL
 US VC Profile: -
 PVID: 1 (1-4094)
 Priority: 0

Show Port: ALL

Index	Port	VPI/VCI	DS/US VC Profile	PVID	Priority	Select
1	1	0/33	DEFVAL/ -	*	*	<input type="radio"/>
2	4	0/33	DEFVAL/ -	*	*	<input type="radio"/>
3	7	0/33	DEFVAL/ -	*	*	<input type="radio"/>
4	8	0/33	DEFVAL/ -	*	*	<input type="radio"/>

Index -1 selected No Channel copied

The following table describes the labels in this screen.

Table 20 Basic Setting > xDSL Port Setup > VC Setup

LABEL	DESCRIPTION
xDSL Port Setup	Click xDSL Port Setup to go to the screen where you can configure DSL port settings (see Section 13.5 on page 104).
PPVC Setup	(STU-C mode only) Click PPVC Setup to open the PPVC Setup screen where you can configure priority PVC settings for the DSL ports (see Section 13.9 on page 113).
Port	Use this drop-down list box to select a port for which you wish to view or configure settings. This field is read-only once you click on a port number below.
Super Channel	The IES-708-22A forwards frames belonging to VLAN groups that are not assigned to specific channels to the super channel. Enable the super channel option to have this channel forward frames belonging to multiple VLAN groups (that are not assigned to other channels). The super channel functions in the same way as the channel in a single channel environment.
VPI	Type the Virtual Path Identifier for a channel on this port.
VCI	Type the Virtual Circuit Identifier for a channel on this port.
DS VC Profile	Use the drop-down list box to select a VC profile to use for this channel's downstream traffic shaping.
US VC Profile	Use the drop-down list box to select a VC profile to use for this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile. Note: Upstream traffic policing should be used in conjunction with the ATM shaping feature on the subscriber's device. If the subscriber's device does not apply the appropriate ATM shaping, all upstream traffic will be discarded due to upstream traffic policing.

Table 20 Basic Setting > xDSL Port Setup > VC Setup (continued)

LABEL	DESCRIPTION
PVID	Type a PVID (Port VLAN ID) to assign to untagged frames received on this channel.
Priority	Use the drop-down list box to select the priority value (0 to 7) to add to incoming frames without a (IEEE 802.1p) priority tag. An asterisk (*) denotes a super channel.
Add Apply	Click this to add or save channel settings on the selected port. (The name of the button depends on whether or not you have clicked on a PVC number in the Index column.) This saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.
Show Port	Select the number of a DSL port for which to display VC settings (or display all of them).
Index	This field displays the number of the PVC. Click a PVC's index number to use the top of the screen to edit the PVC. Note: At the time of writing, you cannot edit the VPI and VCI. If you want to change them, add a new PVC with the desired settings. Then you can delete any unwanted PVCs.
Port	This field displays the number of the DSL port on which the PVC is configured.
VPI/VCI	This field displays the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port.
US / DS VC Profile	This shows which VC profile this channel uses for downstream traffic shaping. The VC profile for upstream policing also displays if the channel is configured to use one.
PVID	This is the PVID (Port VLAN ID) assigned to untagged frames or priority frames (0 VID) received on this channel. An asterisk (*) denotes a super channel.
Priority	This is the priority value (0 to 7) added to incoming frames without a (IEEE 802.1p) priority tag. An asterisk (*) denotes a super channel.

Table 20 Basic Setting > xDSL Port Setup > VC Setup (continued)

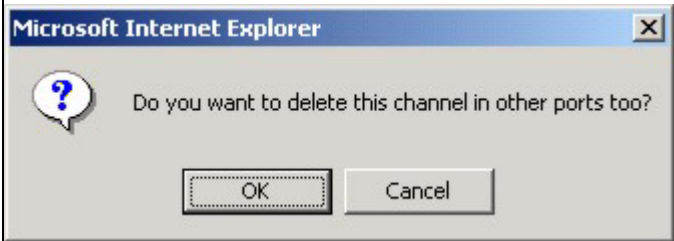
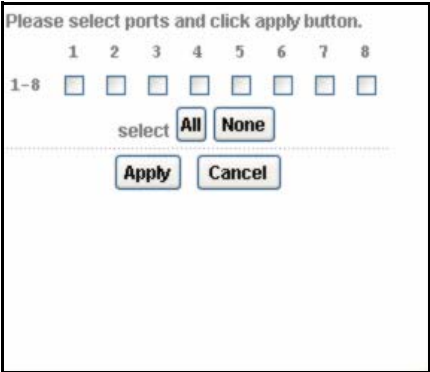
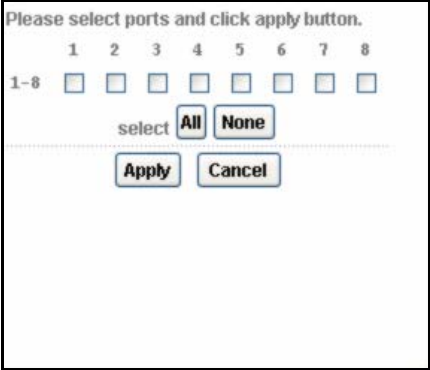
LABEL	DESCRIPTION
<p>Select</p> <p>Delete</p>	<p>Do the following to remove one or more PVCs.</p> <ol style="list-style-type: none"> 1. Select a PVC's Select radio button. 2. Click Delete. 3. Click OK if you want to remove the PVC from other ports. Click Cancel to only remove the one you selected. <p>Figure 46 Basic Setting, xDSL Port Setup, VC Setup, Delete</p>  <ol style="list-style-type: none"> 4. If you clicked OK, the following screen appears. 5. Select to which ports you want to copy the settings. Use All to select every port. Use None to clear all of the check boxes. 6. Click Apply to delete the channels. <p>Figure 47 Select Ports</p> 

Table 20 Basic Setting > xDSL Port Setup > VC Setup (continued)

LABEL	DESCRIPTION
Select Copy Paste	<p>Do the following to copy settings from one PVC to another port or ports.</p> <ol style="list-style-type: none"> 1. Click the Select radio button of the PVC from which you want to copy settings. 2. Click Paste. 3. The following screen appears. 4. Select to which ports you want to copy the settings. Use All to select every port. Use None to clear all of the check boxes. 5. Click Apply to copy the settings. <p>Figure 48 Select Ports</p> 

13.8 Priority-based PVCs

This feature is available in STU-C mode only.

A PPVC (Priority-based PVC) allows you to give different priorities to PVCs that are members of the same VLAN.

The IES-708-22A uses eight priority queues (also called levels) for the member PVCs. The system maps frames with certain IEEE 802.1p priorities to a PVC with a particular priority queue. The following table gives the factory default mapping.

Table 21 IEEE 802.1p Priority to PPVC Mapping

IEEE 802.1 PRIORITY	MAPS TO:	PPVC 0/33, PRIORITY QUEUE
7	->	level 7
6	->	level 6
5	->	level 5
4	->	level 4
3	->	level 3
2	->	level 2
1	->	level 1
0	>	level 0

13.9 PPVC Setup Screen

Use this screen to view and configure PPVCs.

To open this screen, click **Basic Setting > xDSL Port Setup > PPVC Setup**.

Figure 49 Basic Setting > xDSL Port Setup > PPVC Setup

Index	Port	VPI/VCI	Encap	PVID	Priority	Members	Delete
1	1	0/ 32	llc	2	0	2	Delete
2	1	0/ 34	vc	1	1	0	Delete
3	2	0/ 36	llc	1	2	0	Delete
4	3	0/ 35	vc	1	0	0	Delete

The following table describes the labels in this screen.

Table 22 Basic Setting > xDSL Port Setup > PPVC Setup

LABEL	DESCRIPTION
xDSL Port Setup	Click xDSL Port Setup to go to the screen where you can configure DSL port settings (see Section 13.5 on page 104).
VC Setup	Click VC Setup to open the VC Setup screen where you can configure VC settings for the DSL ports (see Section 13.7 on page 108).
Port	Use this drop-down list box to select a port for which you wish to configure settings.
Encap.	Select the encapsulation type (llc or vc) for this PPVC.
VPI	Type the Virtual Path Identifier for this PPVC.
VCI	Type the Virtual Circuit Identifier for this PPVC. The IES-708-22A uses this PVC channel internally. This PVC is not needed on the subscriber's device. This PVC cannot overlap with any existing PVCs on this port.
PVID	Type a PVID (Port VLAN ID) to assign to untagged frames received on this PPVC.
Priority	Use the drop-down list box to select the priority value (0 to 7) to add to incoming frames without a (IEEE 802.1p) priority tag.
Add / Modify	Click Add / Modify to save PPVC settings for a port. In order to change a port's PPVC settings, just select the port from the Port drop-down list box and then configure the settings you want. These settings replace the port's old settings when you click Add / Modify . Clicking Add / Modify saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

Table 22 Basic Setting > xDSL Port Setup > PPVC Setup (continued)

LABEL	DESCRIPTION
Show Port	Select the number of a DSL port for which to display PPVC settings (or display all of them).
Index	This field displays the number of the PPVC.
Port	This field displays the number of the DSL port on which the PPVC is configured.
VPI/VCI	This field displays the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port. The IES-708-22A uses this PVC channel internally. This PVC is not needed on the subscriber's device.
Encap	This field displays the PPVC's type of encapsulation (llc or vc).
PVID	This is the PVID (Port VLAN ID) assigned to untagged frames or priority frames (0 VID) received on this channel.
Priority	This is the priority value (0 to 7) added to incoming frames without a (IEEE 802.1p) priority tag.
Members	This field displays how many PVCs belong to this PPVC has. Click the number to open a screen where you can configure the PPVC's member PVCs.
Delete	Click Delete to remove a PPVC. Clicking Delete saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

13.9.1 PPVC Setup Members Screen

Use this screen to add and remove member PVCs.



The member PVCs must be created on the subscriber's device.

To open this screen, click **Basic Setting > xDSL Port Setup > PPVC Setup**. Then, click a PPVC's member number to open the **PPVC Setup Members** screen.

Figure 50 Basic Setting > xDSL Port Setup > PPVC Setup > Edit

Index	VPI/VCI	VC Profile	Level	Delete
1	1 / 32	DEFVAL/ DEFVAL	3	delete
2	1 / 34	DEFVAL/ DEFVAL	0	delete

Add VPI VCI DS VC Profile

US VC Profile Level

The following table describes the labels in this screen.

Table 23 Basic Setting > xDSL Port Setup > PPVC Setup > Edit

LABEL	DESCRIPTION
Port	This is the port for which you are viewing or configuring settings.
Index	This field displays the number of the member PVC.
VPI/VCI	This field displays the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port. The subscriber's device must create this PVC.
VC Profile	This shows which VC profile this channel uses for downstream traffic shaping. The VC profile for upstream policing also displays if the channel is configured to use one.
Level	This field displays the number of the member PVC's priority queue.
Delete	Click Delete to remove a member PVC from the PPVC. Clicking Delete saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Add	Use this section of the screen to add or modify a member PVC.
VPI	Type the Virtual Path Identifier for this member PVC.
VCI	Type the Virtual Circuit Identifier for this member PPVC. This PVC cannot overlap with any existing PVC's on this port.
DS VC Profile	Use the drop-down list box to select a VC profile to use for this channel's downstream traffic shaping.
US VC Profile	Use the drop-down list box to select a VC profile to use for this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.
Level	Use the drop-down list box to select the priority queue (0 to 7) to add to use for the PVC. 7 is the highest level.
Add / Modify	Click Add / Modify to save member PVC settings for a PPVC. In order to change a member PVC 's settings, just enter the PVC's VPI and VCI, and configure the settings you want. These settings replace the PVC's old settings when you click Add / Modify . Clicking Add / Modify saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Close	Click Close to exit the screen without saving your changes.

xDSL Profiles Setup

A profile is a list of settings that you define. Then you can assign them to one or more individual ports. For background information about many of these settings, see [Chapter 13 on page 103](#).

14.1 Configured Versus Actual SHDSL Rates

You configure the maximum and minimum rates of individual SHDSL ports using the set profile command. However, due to noise and other factors on the line, the actual rate may not reach the maximum that you specify.

Even though you can specify arbitrary numbers in the set profile command, the actual rate is always a multiple of 64 Kbps. If you enter a rate that is not a multiple of 64 Kbps, the actual value will be the next lower multiple of 64Kbps. For instance, if you specify 2100 Kbps for a port, the actual value will be 2048 Kbps, and if you specify 2120 Kbps, the actual value will be 2112 Kbps.

Note that when you configure a DSL profile, the upstream and downstream speeds are the same. The minimum rate must be less than or equal to the maximum rate.

14.2 N-wire Mode

The n-wire mode allows you to physically bundle two SHDSL ports into a single 4-wire connection. The 4-wire mode is described in ITU-T G.991.2. You can use it to connect to SHDSL modems or routers that also support 4-wire mode. N-wire mode also allows you to physically bundle four SHDSL ports into a single 8-wire connection. The 8-wire group is called mpair4.

N-wire mode can increase the reach of a particular data rate without having to regenerate the signal. It can also give increased bandwidth for LAN-to-LAN applications.

When using 4 or 8-wire groups, you must apply the same DSL profile to every port in a specific set of ports. For example, a profile for a 4-wire group can be used with ports 1,2 or 3,4 but not with ports 2,3 or 4,5. A profile for an 8-wire group can be used with ports 1,2,3,4 or 5,6,7,8 but not with ports 2,3,4,5 or 4,5,6,7.

After you assign the same DSL profile to all the ports in the set, you only have to configure the one with the highest port number. Its settings apply to all the ports in the set. For example, if you create an 8-wire group with ports 5, 6, 7, and 8, all the settings for port 8 apply to ports 5, 6, and 7 (regardless of whatever settings might already exist for ports 5, 6, and 7).

14.3 Port Profile Screen

To open this screen, click **Basic Setting** > **xDSL Profiles Setup**.

Figure 51 Basic Setting > xDSL Profiles Setup

The screenshot shows the 'Port Profile' screen. At the top, there are tabs for 'Port Profile' (selected), 'VC Profile', 'Alarm Profile', and 'IGMP Filter Profile'. Below the tabs is a table with the following data:

Index	Name	Max/Min Rate(kbps)	Wire Pair	Select
1	DEFVAL	2304/192	2wire	<input checked="" type="radio"/>
2	4096	4096/192	mpair4	<input type="radio"/>
3	test	5696/5696	mpair4	<input type="radio"/>

Below the table are 'Modify' and 'Delete' buttons. The configuration form below has the following fields:

- Name:
- Max Rate: (192~5696)kbps
- Min Rate: (192~5696)kbps
- Annex Mode:
- Wire Pair:
- Line Probing Enable Mode:
- Current Condition SNR Margin: (-10~21) dB
- Worst Case SNR Margin: (-10~21) dB

At the bottom of the form are 'Add' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 24 Basic Setting > xDSL Profiles Setup

LABEL	DESCRIPTION
VC Profile	Click VC Profile to open the VC Profile screen where you can configure virtual channel profiles (see Section 14.7 on page 123).
Alarm Profile	Click Alarm Profile to open the Alarm Profile screen where you can configure limits that trigger an alarm when exceeded (see Section 14.8 on page 124).
IGMP Filter Profile	(STU-C mode only) Click IGMP Filter Profile to open the IGMP Filter Profile screen where you can configure IGMP multicast filter profiles (see Section 14.10 on page 127).
Index	This is the port profile index number.
Name	These are the names of individual profiles. The DEFVAL profile always exists and all of the DSL ports have it assigned to them by default. You can use up to 31 English keyboard characters; spaces are not allowed.
Max/Min Rate	This field displays the maximum and minimum transfer rate for this profile.
Wire Pair	This field displays how many pairs of wires the profile uses.
Select	Select a profile's Select radio button and click Modify to edit the profile.
Delete	Select a profile's Select radio button and click Delete to remove the profile.
	The rest of the screen is for profile configuration.
Name	When editing a profile, this is the name of this profile. When adding a profile, type a name (up to 31 characters) for the profile.
Max Rate	Type a maximum transfer rate for this profile.

Table 24 Basic Setting > xDSL Profiles Setup (continued)

LABEL	DESCRIPTION
Min Rate	Type the minimum upstream transfer rate for this profile.
Annex Mode	Select the region setting. Select annex_a to use DSL over POTS (G.992.1 Annex A). Select annex_b to use DSL over ISDN (G.992.1 Annex B).
Wire Pair	Select a wire pair number. Select 2wire for a normal connection using a single SHDSL port's two wires, this is the default. Select 4wire for a 4-wire n-wire group (two SHDSL ports grouped together). Select mpair4 for an 8-wire n-wire group (four SHDSL ports grouped together).
Line Probing Enable Mode	The IES-708-22A and subscriber modem use line probes to determine the best possible transmission rate. This is used in rate adaptation. Select lp_off to have the IES-708-22A skip the rate adaptation phase to shorten connection set up time. Select lp_on_cur to enable line probing using the current target Signal to Noise Ratio margin. Select lp_on_wc to enable line probing using the worst case target Signal to Noise Ratio margin.
Current Condition SNR Margin	Type the current condition target Signal to Noise Ratio margin, -10 ~ 21 in dB.
Worst Case SNR Margin	Type the worst case Signal to Noise Ratio margin, -10 ~ 21 in dB.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

14.4 ATM QoS

ATM Quality of Service (QoS) mechanisms provide the best service on a per-flow guarantee. ATM network infrastructure was designed to provide QoS. It uses fixed cell sizes and built-in traffic management (see [Section 14.5 on page 119](#)). This allows you to fine-tune the levels of services on the priority of the traffic flow.

14.5 Traffic Shaping

Traffic shaping is an agreement between the carrier and the subscriber to regulate the average rate and fluctuations of data transmission over an ATM network. This agreement helps eliminate congestion, which is important for transmission of real time data such as audio and video connections.



Traffic shaping controls outgoing (downstream) traffic, not incoming (upstream).

14.5.1 ATM Traffic Classes

These are the basic ATM traffic classes defined by the ATM Forum Traffic Management 4.0 Specification.

14.5.1.1 Constant Bit Rate (CBR)

Constant Bit Rate (CBR) is an ATM traffic class that provides fixed bandwidth. CBR traffic is generally time-sensitive (doesn't tolerate delay). CBR is used for connections that continuously require a specific amount of bandwidth. Examples of connections that need CBR would be high-resolution video and voice.

14.5.1.2 Variable Bit Rate (VBR)

The Variable Bit Rate (VBR) ATM traffic class is used with bursty connections. Connections that use the Variable Bit Rate (VBR) traffic class can be grouped into real time (rt-VBR) or non-real time (nrt-VBR) connections.

The rt-VBR (real-time Variable Bit Rate) type is used with bursty connections that require closely controlled delay and delay variation. An example of an rt-VBR connection would be video conferencing. Video conferencing requires real-time data transfers and the bandwidth requirement varies in proportion to the video image's changing dynamics.

The nrt-VBR (non real-time Variable Bit Rate) type is used with bursty connections that do not require closely controlled delay and delay variation. An example of an nrt-VBR connection would be non-time sensitive data file transfers.

14.5.1.3 Unspecified Bit Rate (UBR)

The Unspecified Bit Rate (UBR) ATM traffic class is similar to the ABR traffic class for bursty data transfers. However, while ABR gives subscribers a set amount of bandwidth, UBR doesn't guarantee any bandwidth and only delivers traffic when the network has spare bandwidth.

14.5.2 Traffic Parameters

These are the parameters that control the flow of ATM traffic.

14.5.2.1 Peak Cell Rate (PCR)

Peak Cell Rate (PCR) is the maximum rate at which the sender can send cells. This parameter may be lower (but not higher) than the maximum line speed. 1 ATM cell is 53 bytes (424 bits), so a maximum speed of 832Kbps gives a maximum PCR of 1962 cells/sec. This rate is not guaranteed because it is dependent on the line speed.

14.5.2.2 Sustained Cell Rate (SCR)


Sustained Cell Rate (SCR) is the mean cell rate of each bursty traffic source. It specifies the maximum average rate at which cells can be sent over the virtual connection. SCR may not be greater than the PCR.

14.5.2.3 Maximum Burst Size (MBS)

Maximum Burst Size (MBS) is the maximum number of cells that can be sent at the PCR. After MBS is reached, cell rates fall below SCR until cell rate averages to the SCR again. At this time, more cells (up to the MBS) can be sent at the PCR again.

The following figure illustrates the relationship between PCR, SCR and MBS.

Figure 52 PCR, SCR and MBS in Traffic Shaping

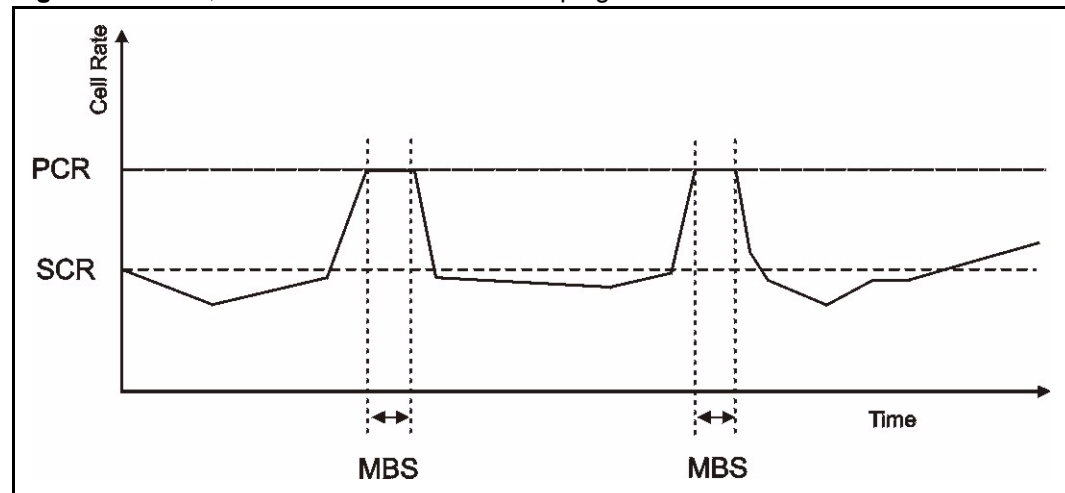

14.5.2.4 Cell Delay Variation Tolerance (CDVT)

Cell Delay Variation Tolerance (CDVT) is the accepted tolerance of the difference between a cell's transfer delay and the expected transfer delay. CDVT controls the time scale over which the PCR is enforced. CDVT is used to determine if a cell arrived too early in relation to PCR.


14.5.2.5 Burst Tolerance (BT)

Burst Tolerance (BT) is the maximum number of cells that the port is guaranteed to handle without any discards. BT controls the time scale over which the SCR is enforced. BT is used to determine if a cell arrived too early in relation to SCR. Use this formula to calculate BT: $(MBS - 1) \times (1 / SCR - 1 / PCR) = BT$.

14.5.2.6 Theoretical Arrival Time (TAT)

The Theoretical Arrival Time (TAT) is when the next cell (in an ATM connection's stream of cells) is expected to arrive. TAT is calculated based on the PCR or SCR.

The following figure illustrates the relationship between TAT, CDVT and BT. If a cell arrives at time A, then according to PCR or SCR, the next cell is expected to arrive at time B. If the next cell arrives earlier than time C, it is discarded or tagged for not complying with the TAT. Time C is calculated based on the CDVT or BT.

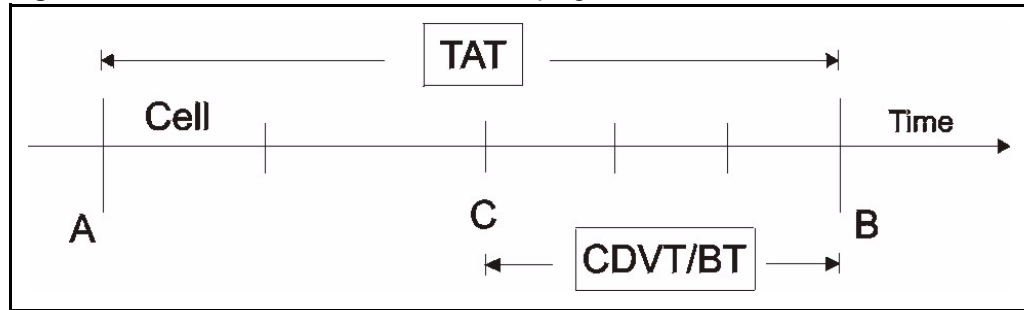Figure 53 TAT, CDVT and BT in Traffic Shaping

14.6 Upstream Policing

Upstream policing is an agreement between the carrier and the subscriber to regulate the average rate and fluctuations of data transmission coming from the subscriber's device to the IES-708-22A.



Upstream policing controls incoming (upstream) traffic, not outgoing (downstream).

The ATM traffic classes and parameters are identical with downstream shaping.

Upstream policing can control the upstream incoming traffic rate on specific PVCs. Upstream ATM cell traffic that violates the policing profile will be discarded. Traffic shaping must also be enabled on the subscriber's device in order to use upstream policing. If a subscriber attempts to enlarge his device's PVC shaping parameters in order to get more upstream traffic bandwidth, it will violate the IES-708-22A's upstream policing profile and the traffic will be discarded. Operators can use this feature to prevent subscribers from changing their device settings.



Traffic shaping must also be enabled on the subscriber's device in order to use upstream policing.

Note that since the IES-708-22A uses ATM QoS, if the subscriber device's upstream shaping rate is larger than the IES-708-22A's upstream policing rate, some ATM cells will be discarded. In the worst case, none of the Ethernet packets from the CPE will be able to be reassembled from AAL5, so no packets from the subscriber's device can be received by the IES-708-22A.

The upstream policing feature can be enabled/disabled per PVC. No matter which ATM traffic class is used for the PVC's upstream traffic (CBR, VBR, or UBR), the IES-708-22A will drop any upstream traffic that violates the specified ATM VC profile.

14.7 VC Profile Screen

To open this screen, click **Basic Setting > xDSL Profiles Setup > VC Profile**.

Figure 54 Basic Setting > xDSL Profiles Setup > VC Profile

Index	Name	Encap	AAL	Class	PCR	CDVT	SCR	BT	Select
1	DEFVAL	ilc	aal5	ubr	300000	0	-	-	<input checked="" type="radio"/>
2	DEFVAL_VC	vc	aal5	ubr	300000	0	-	-	<input type="radio"/>

Modify Delete

Name

Encap

Class

PCR (150-300000)cell/sec = (8-15527)kbyte/sec

CDVT (0-255)

SCR (150-300000)cell/sec = (8-15527)kbyte/sec

BT (0-255)

Add Cancel

The following table describes the labels in this screen.

Table 25 Basic Setting > xDSL Profiles Setup > VC Profile

LABEL	DESCRIPTION
Port Profile	Click Port Profile to configure port profiles and assign them to individual ports (see Section 14.3 on page 118).
Alarm Profile	Click Alarm Profile to open the Alarm Profile screen where you can configure limits that trigger an alarm when exceeded (see Section 14.8 on page 124).
IGMP Filter Profile	Click IGMP Filter Profile to open the IGMP Filter Profile screen where you can configure IGMP multicast filter profiles (see Section 14.10 on page 127).
Index	This is the number of the VC profile.
Name	This name identifies the VC profile.
Encap	This field displays the profile's type of encapsulation (ilc or vc).
AAL	This field displays the ATM adaptation layer used by the VC profile. aal5 - The VC profile uses ATM adaptation layer 5.
Class	This field displays the type of ATM traffic class: cbr (constant bit rate), vbr (real-time variable bit rate), nrt-vbr (non-real time variable bit rate) or ubr (unspecified bit rate).
PCR	This is the Peak Cell Rate (PCR), the maximum number of cells that the sender can send per second.
CDVT	This field displays the accepted tolerance of the difference between a cell's transfer delay and the expected transfer delay.
SCR	The Sustained Cell Rate (SCR) sets the average cell rate (long-term) in cells per second that can be transmitted. SCR applies with the vbr traffic class.
BT	Burst Tolerance (BT) is the maximum number of cells that the port is guaranteed to handle without any discards. BT applies with the vbr traffic class.
Select	Select a VC profile's Select radio button and click Modify to edit the VC profile
Delete	Select a VC profile's Select radio button and click Delete to remove the VC profile

Table 25 Basic Setting > xDSL Profiles Setup > VC Profile (continued)

LABEL	DESCRIPTION
	The rest of the screen is for PVC configuration.
Name	When editing a profile, this is the name of this profile. When adding a profile, type a name for the profile. You can use up to 31 English keyboard characters; spaces are not allowed.
Encap	Select the encapsulation type (LLC or VC) for this port.
Class	Select CBR (constant bit rate) to specify fixed (always-on) bandwidth for voice or data traffic. Select UBR (unspecified bit rate) for applications that are non-time sensitive, such as e-mail. Select VBR (real time variable bit rate) or NRT-VBR (non real time variable bit rate) for bursty traffic and bandwidth sharing with other applications.
PCR	The Peak Cell Rate (PCR) is the maximum rate at which the sender can send cells. PCR applies with all of the ATM traffic classes. You can type a number of (ATM) cells per second in the first field or type a number of kilobytes per second in the second field to have the system automatically compute the number of ATM cells per second.
CDVT	Cell Delay Variation Tolerance (CDVT) is the accepted tolerance of the difference between a cell's transfer delay and the expected transfer delay. CDVT applies with all of the ATM traffic classes. Type the CDVT here.
SCR	The Sustained Cell Rate (SCR) sets the average cell rate (long-term) that can be transmitted. Type the SCR, which must be less than the PCR. SCR applies with the VBR traffic classes. You can type a number of (ATM) cells per second in the first field or type a number of kilobytes per second in the second field to have the system automatically compute the number of ATM cells per second.
BT	Burst Tolerance (BT) sets a maximum number of cells that the port is guaranteed to handle without any discards. Type the BT here. BT applies with the VBR traffic classes.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

14.8 Alarm Profile Screen

Alarm profiles define DSL port alarm thresholds. The IES-708-22A sends an alarm trap and generates a syslog entry when the thresholds of the alarm profile are exceeded.

To open this screen, click **Basic Setting > xDSL Profiles Setup > Alarm Profile**.

Use the top part of the screen (with the **Add** and **Cancel** buttons) to add or edit alarm profiles. The rest of the screen displays the configured alarm profiles.

Figure 55 Basic Setting > xDSL Profiles Setup > Alarm Profile

Alarm Profile [Port Profile](#) [VC Profile](#) [IGMP Filter Profile](#)

Name:

Threshold

Loop Attenuation (0~127)dB

SNR Margin (0~15)dB

ES (0~900)seconds

SES (0~900)seconds

CRC anomalies (0~2147483647)

LOWS (0~900)seconds

UAS (0~900)seconds

Index	Name	Select
1	DEFVAL	<input type="radio"/>

The following table describes the labels in this screen.

Table 26 Basic Setting > xDSL Profiles Setup > Alarm Profile

LABEL	DESCRIPTION
Port Profile	Click Port Profile to open the Port Profile screen (see Section 14.3 on page 118). Use the Port Profile screen to configure profiles of DSL port settings (such as the transfer rate, interleave delay and signal to noise ratio settings).
VC Profile	Click VC Profile to open the VC Profile screen where you can configure virtual channel profiles (see Section 14.7 on page 123).
IGMP Filter Profile	Click IGMP Filter Profile to open the IGMP Filter Profile screen where you can configure IGMP multicast filter profiles (see Section 14.10 on page 127).
Name	This field is read-only if you click Modify to edit a port profile. Type a name to identify the alarm profile (you cannot change the name of the DEFVAL profile). You can use up to 31 English keyboard characters; spaces are not allowed.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.
Threshold	Specify limits for the individual performance counters. The IES-708-22A sends an alarm trap and generates a syslog entry when one of these thresholds is exceeded. A value of 0 disables the alarm threshold.
Loop Attenuation	The permitted attenuation (reduction of signal amplitude) of a port's connection.
SNR Margin	The permitted signal to noise ratio margin.
ES	The number of Errored Seconds (0~900) that are permitted to occur within 15 minutes.
SES	The number of Severely Errored Seconds (0~900) that are permitted to occur within 15 minutes.
CRC anomalies	The number of Cyclic Redundancy Checking anomalies that are permitted to occur within 15 minutes.
LOWS	The number of Loss Of Sync Word Seconds (0~900) that are permitted to occur within 15 minutes.

Table 26 Basic Setting > xDSL Profiles Setup > Alarm Profile (continued)

LABEL	DESCRIPTION
UAS	The number of UnAvailable Seconds (0~900) that are permitted to occur within 15 minutes.
Index	This is the index number of the alarm profile.
Name	This is the name of the alarm profile.
Show Map	
Select Modify	Select a profile's Select radio button and click Modify to edit the profile
Delete	Select a profile's Select radio button and click Delete to remove the profile

14.8.1 Alarm Profile Map Screen

Use this screen to look at and to assign the ports to which alarm profiles are assigned. The IES-708-22A loses these changes if it is turned off or loses power, so use the **Config Save** link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

To open this screen, click **Basic Setting > xDSL Profiles Setup > Alarm Profile > Show Map**.

Figure 56 Basic Setting > xDSL Profiles Setup > Alarm Profile > Map

Port	Stuc	Stur	Span
1	-	-	V
2	-	-	V
3	-	-	V
4	-	-	V
5	-	-	V

Close

The following table describes the labels in this screen.

Table 27 Basic Setting > xDSL Profiles Setup > Alarm Profile > Map

LABEL	DESCRIPTION
Alarm Profile Name	This field displays the name of the alarm profile displayed in this screen.
Port	This field displays the DSL port number.
Stuc	This field displays whether or not the alarm profile is assigned to this port as the alarm profile for the STU-C end point. It displays V if it is assigned, and it displays - if it is not assigned. Click - to assign this profile to the port for the STU-C end point.
Stur	This field displays whether or not the alarm profile is assigned to this port as the alarm profile for the STU-R end point. It displays V if it is assigned, and it displays - if it is not assigned. Click - to assign this profile to the port for the STU-R end point.

Table 27 Basic Setting > xDSL Profiles Setup > Alarm Profile > Map (continued)

LABEL	DESCRIPTION
Span	This field displays whether or not the alarm profile is assigned to this port as the alarm profile for the whole span. It displays V if it is assigned, and it displays - if it is not assigned. Click - to assign this profile to the port for the whole span.
Close	Click Close to close this screen.

14.9 IGMP Filtering

This feature is available in STU-C mode only.

With the IGMP filtering feature, you can limit the multicast channel number of IGMP groups a subscriber on a port can join. This allows you to control the distribution of multicast services (such as content information distribution) based on service plans and types of subscription.

You can set the device to filter the multicast group join reports on a per-port basis by configuring an IGMP filtering profile and associating the profile to a port.

14.10 IGMP Filter Profile Screen

An IGMP filtering profile specifies a range of multicast groups that clients connected to the IES-708-22A are allowed to join. A profile contains a range of multicast IP addresses (multicast groups) which you want clients to be able to join. Profiles are assigned to ports (in the **xDSL Port Setting** screen). Clients connected to those ports are then permitted to join the multicast groups specified in the profile. Each port can be assigned a single profile only. A profile can be assigned to multiple ports.

The **DEFVAL** IGMP filter profile is assigned to all of the DSL ports by default. It allows a port to join all multicast IP addresses (224.0.0.0~239.255.255.255). If you want to allow a DSL subscriber access to only specific IGMP multicast groups, use the **IGMP Filter Profile** screen to configure a different profile and then assign it to the subscriber's DSL port in the **XDSL Port Setting** screen (see [Section 13.5.1 on page 105](#)).

To open this screen, click **Basic Setting > xDSL Profiles Setup > IGMP Filter Profile**.

The top of the screen displays the configured IGMP filter profiles. Use the bottom part of the screen (with the **Add** and **Cancel** buttons) to add or edit alarm profiles.

Figure 57 Basic Setting > xDSL Profiles Setup > IGMP Filter Profile

Index	Name	Delete
1	DEFVAL	<input type="checkbox"/>

Delete

Name

1	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
2	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
3	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
4	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
5	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
6	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
7	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
8	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
9	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
10	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
11	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
12	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
13	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
14	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
15	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>
16	Start IP	<input type="text" value="0.0.0.0"/>	End IP	<input type="text" value="0.0.0.0"/>

Add **Cancel**

The following table describes the labels in this screen.

Table 28 Basic Setting > xDSL Profiles Setup > IGMP Filter Profile

LABEL	DESCRIPTION
Port Profile	Click Port Profile to configure port profiles and assign them to individual ports (see Section 14.3 on page 118).
VC Profile	Click VC Profile to open the VC Profile screen where you can configure virtual channel profiles (see Section 14.7 on page 123).
Alarm Profile	Click Alarm Profile to open the Alarm Profile screen where you can configure limits that trigger an alarm when exceeded (see Section 14.8 on page 124).
Index	This is the number of the IGMP filter profile. Click a profile's index number to edit the profile. You cannot edit the DEFVAL profile.
Name	This name identifies the IGMP filter profile.
Delete	Select the Delete check box and click Delete to remove an IGMP filter profile. You cannot delete the DEFVAL profile.
Name	Type a name to identify the IGMP filter profile (you cannot change the name of the DEFVAL profile). You can use up to 31 English keyboard characters; spaces are not allowed.
Start IP	Enter the starting multicast IP address for a range of multicast IP addresses to which you want this IGMP filter profile to allow access.

Table 28 Basic Setting > xDSL Profiles Setup > IGMP Filter Profile (continued)

LABEL	DESCRIPTION
End IP	Enter the ending multicast IP address for a range of IP addresses to which you want this IGMP filter profile to allow access. If you want to add a single multicast IP address, enter it in both the Start IP and End IP fields.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

xDSL Line Data

15.1 xDSL Line Rate Info Screen

This screen displays a DSL port's line operating values. Information obtained prior to training to steady state transition will not be valid or will be old information.

To open this screen, click **Basic Setting** > **xDSL Line Data**.

Figure 58 Basic Setting > xDSL Line Data

xDSL Line Rate Info		Line Performance
Port	1	<button>Refresh</button>
Port Name	Link : link_up	
Rate	Min Rate(kbps) : 5696	
	Max Rate(kbps) : 5696	
	Actual Rate(kbps) : 3776	
	Noise Margin(dB) : 26	
	Attenuation(dB) : 1	
Info	Stuc shdsl version : 10	
	Stuc vendor list :	
	Stuc vendor issue :	
	Stuc vendor id : IFX	
	Stuc vendor model : SOC16-SDFE4	
	Stuc vendor serial : 003	
	Stuc vendor other :	
	Stuc software version : 091000	
	Stuc equipment code :	

The following table describes the labels in this screen.

Table 29 Basic Setting > xDSL Line Data

LABEL	DESCRIPTION
Line Performance	Click Line Performance to display a DSL port's line performance counters (see Section 15.2 on page 132).
Port	Use this drop-down list box to select a port for which you wish to view information.
Refresh	Click Refresh to display updated information.
Port Name	This section displays the name of the port.
Rate	The rate fields display the transmission rates. "Line Down" indicates that the DSL port is not connected to a subscriber.
Link	This displays the connection status of the DSL link.
Min Rate(kbps)	This is the minimum rate (in Kbps) of the DSL line.
Max Rate(kbps)	This is the maximum rate (in Kbps) of the DSL line.

Table 29 Basic Setting > xDSL Line Data (continued)

LABEL	DESCRIPTION
Actual Rate(kbps)	This is the rate (in Kbps) at which the port has been sending and receiving data.
Noise Margin(dB)	This is the DSL line's noise margin measured in decibels (dB).
Attenuation(dB)	This is the reduction in amplitude of the DSL signals, measured in decibels (dB).
Info	This section displays the information that is reported by the remote device in an Inventory Response message. If information is not provided, the field is blank.
Stur/Stuc shdsl version	This field displays the version of the HDSL2/SHDSL standard implemented.
Stur/Stuc vendor list	This field displays the vendor list number.
Stur/Stuc vendor issue	This field displays the vendor issue number.
Stur/Stuc vendor id	This field displays the vendor ID.
Stur/Stuc vendor model	This field displays the vendor model number.
Stur/Stuc vendor serial	This field displays the vendor serial number.
Stur/Stuc vendor other	This field displays the other vendor information.
Stur/Stuc software version	This field displays the vendor software version.
Stur/Stuc equipment code	This field displays the equipment code conforming to ANSI T1.213, Coded Identification of Equipment Entities.

15.2 xDSL Performance Screen

These counters display line performance data that has been accumulated since the system started. To open this screen, click **Basic Setting > xDSL Line Data > Line Performance**.

Figure 59 Basic Setting > xDSL Line Data > Line Performance

xDSL Performance [Line Rate](#)

Port 1 **Refresh**

Port Name

Init : 1

Performance (since last boot up)

Stuc/Stur ES(secs)	: 0 / 0
Stuc/Stur SES(secs)	: 0 / 0
Stuc/Stur CRCanomalies	: 0 / 0
Stuc/Stur LOSWS(secs)	: 0 / 0
Stuc/Stur UAS(secs)	: 0 / 0

Performance (since last link up)

ES(secs)	: 0
SES(secs)	: 0
CRCanomalies	: 0
LOWS(secs)	: 0
UAS(secs)	: 0
Segment Anomaly	: 0
Segment Defect	: 0

15 min history		crc	es	ses	losws	uas
Current	STUC	0	0	0	0	0
	STUR	0	0	0	0	0
Previous 1	STUC	0	0	0	0	0
	STUR	0	0	0	0	0
Previous 2	STUC	0	0	0	0	0
	STUR	0	0	0	0	0
Previous 3	STUC	0	0	0	0	0
	STUR	0	0	0	0	0

1 day history		crc	es	ses	losws	uas
Current	STUC	0	0	0	0	0
	STUR	0	0	0	0	0

The following table describes the labels in this screen.

Table 30 Basic Setting > xDSL Line Data > Line Performance

LABEL	DESCRIPTION
Line Rate	Click Line Rate to display a DSL port's line operating values (see Section 15.1 on page 131).
Port	Use this drop-down list box to select a port for which you wish to view information.
Refresh	Click Refresh to display updated information.
Port Name	This section displays the name of the port.
Performance (since last boot up)	There is a mechanism in SHDSL for the STU-C and STU-R to exchange information about line performance. As a result, the IES-708-22A can report the errors detected by the STU-C and the STU-R. Stuc: This refers to what is detected by the Central Office (CO) end point. Stur: This refers to what is detected by the Remote (R) end point.
Init	This field displays the number of link-ups and link-downs.
Stuc/Stur ES	The number of Errored Seconds detected by the STU-C and the STU-R on this DSL port. An Errored Second is defined as a count of 1-second intervals during which one or more CRC anomalies are declared and/or one or more LOSW defects are declared.

Table 30 Basic Setting > xDSL Line Data > Line Performance (continued)

LABEL	DESCRIPTION
Stuc/Stur SES	The number of Severely Errored Seconds detected by the STU-C and the STU-R on this DSL port. A Severely Errored Second is defined as a count of 1-second intervals during which at least 50 CRC anomalies are declared or one or more LOSW defects are declared. (50 CRC anomalies during a 1-second interval is equivalent to a 30% errored frame rate for a nominal frame length.)
Stuc/Stur CRCanomalies	The number of CRC anomalies detected by the STU-C and the STU-R on this DSL port.
Stuc/Stur LOSWS	The number of Loss of Sync Word Failure Seconds detected by the STU-C and the STU-R on this DSL port.
Stuc/Stur UAS	The number of UnAvailable Seconds detected by the STU-C and the STU-R on this DSL port. An UnAvailable Second is a count of 1-second intervals for which the SHDSL line is unavailable. The SHDSL line becomes unavailable at the onset of 10 contiguous SESSs. The 10 SESSs are included in the unavailable time. Once unavailable, the SHDSL line becomes available at the onset of 10 contiguous seconds with no SESSs. The 10 s with no SESSs are excluded from unavailable time.
Performance (since last link up)	
ES	The number of Errored Seconds that have occurred since the last connection was established.
SES	The number of Severely Errored Seconds that have occurred since the last connection was established.
CRCanomalies	The number of CRC anomalies that have occurred since the last connection was established.
LOSWs	The number of Loss of Sync Word Seconds that have occurred since the last connection was established.
UAS	The number of UnAvailable Seconds that have occurred since the last connection was established.
Segment Anomaly	The number of Segment Anomalies that have occurred since the last connection was established. A segment anomaly indicates that a regenerator operating on a segment has received corrupted data and therefore the regenerated data is unreliable.
Segment Defect	The number of Segment Defects that have occurred since the last connection was established. A segment defect indicates that a regenerator has lost SHDSL synchronization and therefore the regenerated data is unavailable.
15 min, 1day history	This section of the screen displays line performance statistics for the current and previous 15-minute periods, as well as for the current and previous 24 hours. STUC: This refers to what is detected by the Central Office (CO) end point. STUR: This refers to what is detected by the Remote (R) end point.
crc	The number of CRC anomalies detected within the period.
es	The number of Errored Seconds detected within the period.
ses	The number of Severely Errored Seconds detected within the period.
losws	The number of Loss of Sync Word Seconds detected within the period.
uas	The number of UnAvailable Seconds detected within the period.

G.bond

This chapter explains how to combine multiple ports into a logical link.

16.1 Bonding Overview

Bonding combines multiple ports into a logical link. This lets the IES-708-22A transmit at higher bandwidths over longer distances. In addition, bonding is a cheaper alternative than installing fiber.

Bonding can occur at the physical level or at the cell/packet level. The IES-708-22A can bond ports at the ATM-cell level.

16.1.1 Cell-level Bonding Process

This process depends on an 8-bit or 12-bit sequence ID (SID). If the SID is eight bits, it uses the first eight bits of the VCI field. If the SID is twelve bits, it uses the GFC field and the first eight bits of the VCI field.

This process consists of these steps.

- 1 The sender breaks up the message into several segments and assigns a sequence ID to each segment.
- 2 Each segment is transmitted over one of the ports in the bond.
- 3 The receiver uses the sequence ID to reconstruct the original message.

16.1.2 Bonding Standards

ITU G.998.1 defines bonding standards for ATM networks.

16.2 G.bond Setup Screen

Use this screen to bond one or more ports into a logical link.

To open this screen, click **Basic Setting** > **G.bond**.

Figure 60 Basic Setting > G.bond

The following table describes the labels in this screen.

Table 31 Basic Setting > G.bond

LABEL	DESCRIPTION
G.bond Status	Click G.bond Status to look at the status of each port in each bond (see Section 16.2.1 on page 137).
Index	This is the number of the bond. Click a profile's index number to edit the profile. You cannot edit the DEFVAL profile.
Bond Name (STUC)	This is the name of the bond.
SID	This is the length of the sequence ID used in this bond.
US/DS (kbps)	This is the maximum upstream bandwidth and maximum downstream bandwidth available through this bond. This is calculated from the maximum rate available through each port.
Delete	Select the check box for one or more bonds, and click Delete to remove the selected bond(s).
Cancel	Select this to clear the fields in this screen without saving any changes.
Bond Name	Enter the name of the bond. You can use up to 31 English keyboard characters; double quotation marks (") and spaces are not allowed.
SID	Select the length of the sequence ID used in this bond. The STU-C specifies this value. sid8 : The sequence ID is 8 bits long. sid12 : The sequence ID is 12 bits long.
Port	This field displays the DSL port number.
Member	Select this to include this port in the bond. Clear this to remove this port from the bond. Select All to include all of the ports in the bond. Select None to include none of the ports in the bond.

Table 31 Basic Setting > G.bond (continued)

LABEL	DESCRIPTION
Add Apply	Select this to add or update the bond.
Cancel	Select this to clear the fields in this screen without saving any changes.

16.2.1 G.bond Status Screen

Use this screen to look at the status of each port in each bond.

To open this screen, click **Basic Setting > G.bond > G.bond Status**.

Figure 61 Basic Setting > G.bond > G.bond Status

Index	Bond Name(STUC)	SID	US/DS (kbps)
1	ex1	sid8	0/0
	- - X X - - - -		

The following table describes the labels in this screen.

Table 32 Basic Setting > G.bond > G.bond Status

LABEL	DESCRIPTION
G.bond Setup	Click G.bond Setup to bond one or more ports into a logical link (see Section 16.2 on page 135).
Index	This is the number of the bond.
Bond Name (STUC/STUR)	This is the name of the bond.
SID	This is the length of the sequence ID used in this bond. The STU-C specifies this value.
US/DS (kbps)	This is the current upstream bandwidth and current downstream bandwidth used in this bond.
	<p>This field displays the role of each port in the bond.</p> <p>-: This port is not a member of the bond.</p> <p>V: This port is sending and receiving information in the bond.</p> <p>T: This port is only sending information in the bond.</p> <p>R: This port is only receiving information in the bond.</p> <p>X: This port does not have a DSL connection.</p>

This chapter shows you how to configure IEEE 802.1Q tagged VLANs.

17.1 Introduction to VLANs

A VLAN (Virtual Local Area Network) allows a physical network to be partitioned into multiple logical networks. Devices on a logical network belong to one group. A device can belong to more than one group. With VLAN, a device cannot directly talk to or hear from devices that are not in the same group(s); the traffic must first go through a router.

In MTU (Multi-Tenant Unit) applications, VLAN is vital in providing isolation and security among the subscribers. When properly configured, VLAN prevents one subscriber from accessing the network resources of another on the same LAN, thus a user will not see the printers and hard disks of another user in the same building.

VLAN also increases network performance by limiting broadcasts to a smaller and more manageable logical broadcast domain. In traditional switched environments, all broadcast packets go to each and every individual port. With VLAN, all broadcasts are confined to a specific broadcast domain.

Note that a VLAN is unidirectional, it only governs outgoing traffic.

17.2 Introduction to IEEE 802.1Q Tagged VLAN

Tagged VLAN uses an explicit tag (VLAN ID) in the MAC header to identify the VLAN membership of a frame across bridges - they are not confined to the device on which they were created. The VLANs can be created statically by hand or configured dynamically using GVRP.¹ The VLAN ID associates a frame with a specific VLAN and provides the information that devices need to process the frame across the network. A tagged frame is four bytes longer than an untagged frame and contains two bytes of TPID (Tag Protocol Identifier, residing within the type/length field of the Ethernet frame) and two bytes of TCI (Tag Control Information, starts after the source address field of the Ethernet frame).

The CFI (Canonical Format Indicator) is a single-bit flag, always set to zero for Ethernet switches. If a frame received at an Ethernet port has a CFI set to 1, then that frame should not be forwarded as it is to an untagged port. The remaining twelve bits define the VLAN ID, giving a possible maximum number of 4,096 (2^{12}) VLANs. Note that user priority and VLAN ID are independent of each other. A frame with VID (VLAN Identifier) of null (0) is called a

1. GVRP (GARP VLAN Registration Protocol) defines a way for switches to automatically configure switches in a VLAN network.

priority frame, meaning that only the priority level is significant and the default VID of the ingress port is given as the VID of the frame. Of the 4096 possible VIDs, a VID of 0 is used to identify priority frames and value 4095 (FFF) is reserved, so the maximum possible VLAN configurations are 4,094.

TPID 2 Bytes	User Priority 3 Bits	CFI 1 Bit	VLAN ID 12 bits
-----------------	-------------------------	--------------	--------------------

The IES-708-22A handles up to 4094 VLANs (VIDs 1-4094). The device accepts incoming frames with VIDs 1-4094.

17.2.1 Forwarding Tagged and Untagged Frames

Each port on the device is capable of passing tagged or untagged frames. To forward a frame from an 802.1Q VLAN-aware switch to an 802.1Q VLAN-unaware switch, the IES-708-22A first decides where to forward the frame and then strips off the VLAN tag. To forward a frame from an 802.1Q VLAN-unaware switch to an 802.1Q VLAN-aware switch, the IES-708-22A first decides where to forward the frame, and then inserts a VLAN tag reflecting the ingress port's default VID. The default PVID is VLAN 1 for all ports, but this can be changed.

The egress (outgoing) port(s) of a frame is determined on the combination of the destination MAC address and the VID of the frame. For a unicast frame, the egress port (based on the destination MAC address) must be a member of the VID, also; otherwise, the frame is blocked. For a broadcast frame, it is duplicated only on ports (except the ingress port itself) that are members of the VID, thus confining the broadcast to a specific domain.

Whether to tag an outgoing frame depends on the setting of the egress port on a per-VLAN, per-port basis (recall that a port can belong to multiple VLANs). If the tagging on the egress port is enabled for the VID of a frame, then the frame is transmitted as a tagged frame; otherwise, it is transmitted as an untagged frame.

17.3 VLAN Status Screen

To open this screen, click **Advanced Application > VLAN**.

Figure 62 Advanced Application > VLAN

VLAN Status [Static VLAN Setting](#) [VLAN Port Setting](#)

The Number Of VLAN = 1
Page 1 of 1

Index	Status	Name / VID									
Elapsed Time	1	2	3	4	5	6	7	8	enet1	enet2	
1	Static	DEFAULT / 1									
0(days) : 3:44:52	U	U	U	U	U	U	U	U	U	U	

Poll Interval(s)

Change Pages

The following table describes the labels in this screen.

Table 33 Advanced Application > VLAN

LABEL	DESCRIPTION
Static VLAN Setting	Click Static VLAN Setting to configure ports to dynamically join a VLAN group or permanently assign ports to a VLAN group or prohibit ports from joining a VLAN group (see Section 17.4 on page 142).
VLAN Port Setting	Click VLAN Port Setting to specify Port VLAN IDs (PVIDs). See Section 17.5 on page 143 .
The Number of VLAN	This is the number of VLANs configured on the IES-708-22A.
Page X of X	This identifies which page of VLAN status information is displayed and how many total pages of VLAN status information there are.
	The first table displays the names of the fields. The subsequent tables show the settings of the VLANs.
Index	This is the VLAN index number.
Name / VID	The name identifies an individual VLAN. The vid is the PVID, the Port VLAN ID assigned to untagged frames or priority-tagged frames received on this port.
1~8, enet1, enet2	These columns display the VLAN's settings for each port. A tagged port is marked as T , an untagged port is marked as U and ports not participating in a VLAN are marked as "–".
Elapsed Time	This field shows how long it has been since a normal VLAN was registered or a static VLAN was set up.
Status	This field shows that this VLAN was added to the IES-708-22A statically, that is, added as a permanent entry.
Poll Interval(s) Set Interval	The text box displays how often (in seconds) this screen refreshes. You may change the refresh interval by typing a new number in the text box and then clicking Set Interval .

Table 33 Advanced Application > VLAN (continued)

LABEL	DESCRIPTION
Stop	Click Stop to halt polling statistics.
Previous Page Next Page	Click one of these buttons to show the preceding/following screen if the information cannot be displayed in one screen.

17.4 Static VLAN Setting Screen

You can assign a port to be a member of a VLAN group or prohibit a port from joining a VLAN group in this screen. This is an IEEE 802.1Q VLAN.

To open this screen, click **Advanced Application > VLAN > Static VLAN Setting**.

Figure 63 Advanced Application > VLAN > Static VLAN Setting

The following table describes the labels in this screen.

Table 34 Advanced Application > VLAN > Static VLAN Setting

LABEL	DESCRIPTION
VLAN Status	Click VLAN Status to see which of the IES-708-22A's ports are members of which VLANs (see Section 17.3 on page 140)
VLAN Port Setting	Click VLAN Port Setting to specify Port VLAN IDs (PVIDs). See Section 17.5 on page 143 .
VID	This field displays the ID number of the VLAN group. Click the number to edit the VLAN settings.
Active	This field indicates whether the VLAN settings are enabled (Yes) or disabled (No).

Table 34 Advanced Application > VLAN > Static VLAN Setting (continued)

LABEL	DESCRIPTION
Name	This field displays the descriptive name for this VLAN group.
Delete	Select the check boxes of the rule(s) that you want to remove in the Delete column and then click the Delete button. You cannot delete a VLAN if any PVIDs are set to use the VLAN or the VLAN is the CPU (management) VLAN.
Cancel	Click Cancel to clear the Delete check boxes.
Active	Select this check box to enable the VLAN. You cannot disable a VLAN if any PVIDs are set to use the VLAN or the VLAN is the CPU (management) VLAN.
Name	Enter a descriptive name for this VLAN group for identification purposes. Spaces are not allowed.
VLAN ID	Enter the VLAN ID for this static VLAN entry; the valid range is between 1 and 4094.
Port	The port numbers identify the IES-708-22A's ports.
Control	Select Fixed for the port to be a permanent member of this VLAN group. Use the Select All button to include every port. Select Forbidden if you want to prohibit the port from joining this VLAN group. Use the Select All button to include every port.
Tagging	Select TX Tagging if you want the port to tag all outgoing frames transmitted with this VLAN ID. Use the All button to include every port. Use the None button to clear all of the ports check boxes.
Add	Click Add to save your settings. The VLAN then displays in the summary table at the top of the screen. Clicking Add saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields afresh.

17.5 VLAN Port Setting Screen

Use this screen to specify port VLAN IDs and to set whether or not Ethernet ports propagate VLAN information to other devices.

To open this screen, click **Advanced Application > VLAN > VLAN Port Setting**.

Figure 64 Advanced Application > VLAN > VLAN Port Setting

Port	PVID	Priority	GVRP	Acceptable Frame Type
ENET1	1 (1-4094)	0	<input type="checkbox"/>	ALL
ENET2	1 (1-4094)	0	<input type="checkbox"/>	ALL
1	1 (1-4094)	0		ALL
2	1 (1-4094)	0		ALL
3	1 (1-4094)	0		ALL
4	1 (1-4094)	0		ALL
5	1 (1-4094)	0		ALL


Apply Cancel Copy port 1 Paste

The following table describes the labels in this screen.

Table 35 Advanced Application > VLAN > VLAN Port Setting

LABEL	DESCRIPTION
VLAN Status	Click VLAN Status to see which of the IES-708-22A's ports are members of which VLANs (see Section 17.3 on page 140).
Static VLAN	Click Static VLAN to configure ports to dynamically join a VLAN group or permanently assign ports to a VLAN group or prohibit ports from joining a VLAN group (see Section 17.4 on page 142).
Port	The port numbers identify the IES-708-22A's ports.
PVID	Type the Port VLAN ID (PVID) from 1 to 4094. The IES-708-22A assigns the PVID to untagged frames or priority frames (0 VID) received on this port.
Priority	Select an IEEE 802.1p priority to assign to untagged frames or priority frames (0 VID) received on this port.
GVRP	(STU-C mode only) Select this check box if the IES-708-22A should use GVRP to automatically register and configure VLAN membership.
Acceptable Frame Type	Select All to have the port accept both tagged and untagged incoming frames. ^A Select Tag Only to have the port only accept incoming frames that have a VLAN tag.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

Table 35 Advanced Application > VLAN > VLAN Port Setting (continued)

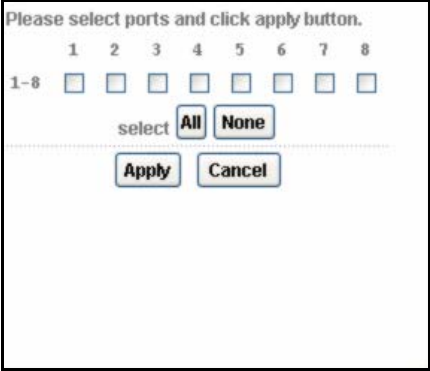LABEL	DESCRIPTION
Cancel	Click Cancel to begin configuring this screen afresh.
Copy port Paste	<p>Do the following to copy settings from one port to another port or ports.</p> <ol style="list-style-type: none">1. Select the number of the port from which you want to copy settings.2. Click Paste and the following screen appears.3. Select to which ports you want to copy the settings. Use All to select every port. Use None to clear all of the check boxes.4. Click Apply to paste the settings. <p>Figure 65 Select Ports</p> 

A. At the time of writing, the **VLAN Acceptable Frame Type** field is read-only for the Ethernet ports. The IES-708-22A accepts both tagged and untagged incoming frames on the Ethernet ports.

This chapter describes the **IGMP** screens.

18.1 IGMP

Traditionally, IP packets are transmitted in one of either two ways - Unicast (1 sender to 1 recipient) or Broadcast (1 sender to everybody on the network). Multicast delivers IP packets to just a group of hosts on the network.

IGMP (Internet Group Management Protocol) is a network-layer protocol used to establish membership in a multicast group - it is not used to carry user data. See RFC 1112 and RFC 2236 for information on IGMP versions 1 and 2, respectively.

18.2 IP Multicast Addresses

In IPv4, a multicast address allows a device to send packets to a specific group of hosts (multicast group) in a different sub-network. A multicast IP address represents a traffic receiving group, not individual receiving devices. IP addresses in the Class D range (224.0.0.0 to 239.255.255.255) are used for IP multicasting. Certain IP multicast numbers are reserved by IANA for special purposes (see the IANA web site for more information).

18.2.1 IGMP Snooping

A layer-2 switch can passively snoop on IGMP Query, Report and Leave (IGMP version 2) packets transferred between IP multicast routers/switches and IP multicast hosts to learn the IP multicast group membership. It checks IGMP packets passing through it, picks out the group registration information, and configures multicasting accordingly. IGMP snooping allows the IES-708-22A to learn multicast groups without you having to manually configure them.

The IES-708-22A forwards multicast traffic destined for multicast groups (that it has learned from IGMP snooping or that you have manually configured) to ports that are members of that group. The IES-708-22A discards multicast traffic destined for multicast groups that it does not know. IGMP snooping generates no additional network traffic, allowing you to significantly reduce multicast traffic passing through your device.


18.2.2 IGMP Proxy

To allow better network performance, you can use IGMP proxy instead of a multicast routing protocol in a simple tree network topology.

In IGMP proxy, an upstream interface is the port that is closer to the source (or the root of the multicast tree) and is able to receive multicast traffic. There should only be one upstream interface (also known as the query port) for one query VLAN on the IES-708-22A. A downstream interface is a port that connects to a host (such as a computer).

The following figure shows a network example where A is the multicast source while computers 1, 2 and 3 are the receivers. In the figure A is connected to the upstream interface and 1, 2 and 3 are connected to the downstream interface.

Figure 66 IGMP Proxy Network Example

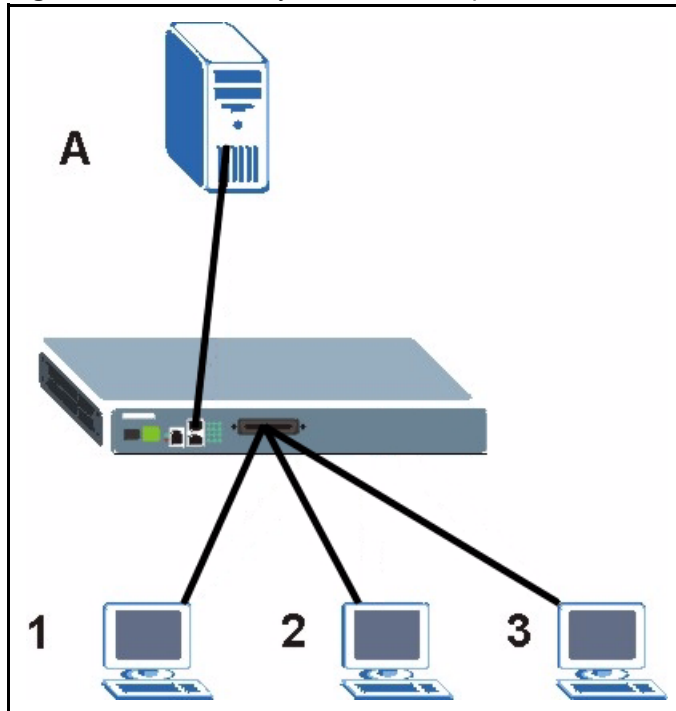

The IES-708-22A will not respond to IGMP join and leave messages on the upstream interface. The IES-708-22A only responds to IGMP query messages on the upstream interface. The IES-708-22A sends IGMP query messages to the hosts that are members of the query VLAN.

The IES-708-22A only sends an IGMP leave messages via the upstream interface when the last host leaves a multicast group.

In daisychain mode, Ethernet interface 1 is set as the upstream interface and Ethernet interface 2 and the DSL ports are set as downstream interfaces.

18.3 IGMP Status Screen

Use this screen to view current IGMP information.

To open this screen, click **Advanced Application > IGMP**.

Figure 67 Advanced Application > IGMP

The following table describes the labels in this screen.

Table 36 Advanced Application > IGMP

LABEL	DESCRIPTION
Bandwidth Setup	(STU-C mode only) Click Bandwidth Setup to open the IGMP Bandwidth screen where you can set up bandwidth requirements for multicast channels (see Section 18.4 on page 150). You can also open the Bandwidth Port Setup screen to set up multicast bandwidth requirements for selected ports (see Section 18.4.1 on page 151).
IGMP Setup	Click IGMP Setup to open the IGMP Setup screen where you can configure IGMP settings (see Section 18.5 on page 152).
Filter Setup	(STU-C mode only) Click Filter Setup to open the IGMP Filter Profile screen where you can configure IGMP multicast filter profiles (see Section 18.6 on page 153).
Count Setup	(STU-C mode only) Click Count Setup to open the IGMP Count screen where you can limit the number of IGMP groups a subscriber on a port can join (see Section 18.7 on page 153).
IGMP Port Info	Click IGMP Port Info to open the IGMP Port Info screen where you can look at the current number of IGMP-related packets received on each port (see Section 18.8 on page 154).
IGMP Port Group	Click IGMP Port Group to open the IGMP Port Group screen where you can look at the current list of multicast groups each port has joined (see Section 18.9 on page 155).
Clear	Click Clear to delete the information the IES-708-22A has learned about multicast groups. This resets every counter in this screen.
Query	This is the total number of Query packets received.
Report	This is the total number of Report packets received.
Leave	This is the total number of Leave packets received.
Number of IGMP Groups	This is how many IGMP groups the IES-708-22A has identified on the local network.
Previous Next	Click one of these buttons to show the previous/next screen if all of the information cannot be seen in one screen.
Reload	Click this button to refresh the screen.
Page X of X	This identifies which page of information is displayed and the total number of pages of information.
	The first table displays the names of the fields. The subsequent tables show the settings of the IGMP groups.

Table 36 Advanced Application > IGMP (continued)

LABEL	DESCRIPTION
Index	This is the IGMP group index number.
VID	The VID is the VLAN ID on which the IGMP group is created.
IP Address	This is the IP address of an IP multicast group member.
1~8, enet1, enet2	These columns indicate whether or not each port is a member of the IGMP snooping group.

18.4 IGMP Bandwidth Screen

This feature is available in STU-C mode only.

Use this screen to set up bandwidth requirements for multicast channels. To open this screen, click **Advanced Application > IGMP > Bandwidth Setup**.

Figure 68 Advanced Application > IGMP > Bandwidth Setup

IGMP Bandwidth [Port Setup](#)

Default Bandwidth: (1~100,000)Kbps

Index	Start Multicast IP	End Multicast IP	Bandwidth	Select
1	0.0.0.0	0.0.0.0	512	<input type="button" value="Select"/>

The following table describes the labels in this screen.

Table 37 Advanced Application > IGMP > Bandwidth Setup

LABEL	DESCRIPTION
Port Setup	Click Port Setup to open the Bandwidth Port Setup screen where you can set up multicast bandwidth requirements on specified ports (see Section 18.4.1 on page 151).
Default Bandwidth	Enter the default bandwidth for multicast channels for which you have not configured bandwidth requirements.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

Table 37 Advanced Application > IGMP > Bandwidth Setup (continued)

LABEL	DESCRIPTION
Index	Select a unique number for this setting. If you select a number that is already used, the new setting overwrites the old one when you click Apply .
Start Multicast IP	Enter the beginning of the multicast range.
End Multicast IP	Enter the end of the multicast range. For one multicast address, enter the start of the multicast range again.
Bandwidth	Enter the bandwidth requirement for the specified multicast range.
Apply	Click Apply to save the filter settings. The settings then display in the summary table at the bottom of the screen. Clicking Apply saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields afresh.
	This table shows the multicast range settings.
Index	This field displays the number that identifies this setting.
Start Multicast IP	This field displays the beginning of the multicast range.
End Multicast IP	This field displays the end of the multicast range.
Bandwidth	This field displays the allowed bandwidth for the specified multicast range.
Select	Select this, and click Delete to remove the setting.
Delete	Click this to remove the selected settings.
Select All	Click this to select all entries in the table.
Select None	Click this to un-select all entries in the table.

18.4.1 Bandwidth Port Setup Screen

Use this screen to set up multicast bandwidth requirements for specific ports. To open this screen, click **Advanced Application > IGMP > Bandwidth Setup > Port Setup**.

Figure 69 Advanced Application > IGMP > Bandwidth Setup > Port Setup

Port	Active	Bandwidth	Select
1	-	4096 (1~100,000)Kbps	<input type="checkbox"/>
2	-	4096 (1~100,000)Kbps	<input type="checkbox"/>
3	-	4096 (1~100,000)Kbps	<input type="checkbox"/>
4	-	4096 (1~100,000)Kbps	<input type="checkbox"/>
5	-	4096 (1~100,000)Kbps	<input type="checkbox"/>

Active Inactive Select All None

The following table describes the labels in this screen.

Table 38 Advanced Application > IGMP > Bandwidth Setup > Port Setup

LABEL	DESCRIPTION
Bandwidth Setup	Click Bandwidth Setup to open the IGMP Bandwidth screen where you can set up bandwidth requirements for multicast channels (see Section 18.4 on page 150).
Port	This field shows each DSL port number.
Active	This field shows whether or not multicast bandwidth requirements are enabled on this port. "V" displays if it is enabled and "-" displays if it is disabled.
Bandwidth	Enter the maximum acceptable multicast bandwidth for this port. This has no effect if bandwidth requirements are disabled.
Select	Select this, and click Active or Inactive to enable or disable the specified multicast bandwidth requirements on this port.
Active	Click this to enable the specified multicast bandwidth requirements on the selected port.
Inactive	Click this to disable the specified multicast bandwidth requirements on the selected port.
Select All	Click this to select all entries in the table.
Select None	Click this to un-select all entries in the table.

18.5 IGMP Setup Screen

Use this screen to configure your IGMP settings.

To open this screen, click **Advanced Application > IGMP > IGMP Setup**.

Figure 70 Advanced Application > IGMP > IGMP Setup



The following table describes the labels in this screen.

Table 39 Advanced Application > IGMP > IGMP Setup

LABEL	DESCRIPTION
IGMP Status	Click IGMP Status to open the IGMP Setup screen where you can view current IGMP information (see Section 18.3 on page 148).
Filter Setup	(STU-C mode only) Click Filter Setup to open the IGMP Filter Profile screen where you can configure IGMP multicast filter profiles (see Section 18.6 on page 153).

Table 39 Advanced Application > IGMP > IGMP Setup (continued)

LABEL	DESCRIPTION
IGMP Mode	(STU-R mode only) Select Enable to have the device use IGMP snooping. Select Disable to have the device not use IGMP snooping. (STU-C mode only) Select Proxy to have the device use IGMP proxy. Select Snooping to have the device passively learn multicast groups. Select Disable to have the device not use either IGMP proxy or snooping.
Apply	Click Apply to save your IGMP mode settings. Clicking Apply saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

18.6 IGMP Filter Setup Screen

This feature is available in STU-C mode only.

To open this screen, click **Advanced Application > IGMP > Filter Setup**. This screen is discussed in [Section 14.9 on page 119](#).

18.7 IGMP Count Screen

This feature is available in STU-C mode only.

Use this screen to limit the number of IGMP groups a subscriber on a port can join. This allows you to control the distribution of multicast services (such as content information distribution) based on service plans and types of subscription.

IGMP count is useful for ensuring the service quality of high bandwidth services like video or Internet Protocol television (IPTV). IGMP count can limit how many channels (IGMP groups) the subscriber connected to a DSL port can use at a time. If each channel requires 4~5 Mbps of download bandwidth, and the subscriber's connection supports 11 Mbps, you can use IGMP count to limit the subscriber to using just 2 channels at a time. This also effectively limits the subscriber to using only two IPTVs with the DSL connection.

To open this screen, click **Advanced Application > IGMP > Count Setup**.

Figure 71 Advanced Application > IGMP > Count Setup

Port	Active	Count	Select
1	-	5 (0~16)	<input type="checkbox"/>
2	-	5 (0~16)	<input type="checkbox"/>
3	-	5 (0~16)	<input type="checkbox"/>
4	-	5 (0~16)	<input type="checkbox"/>
5	-	5 (0~16)	<input type="checkbox"/>

Active Inactive Select All None

The following table describes the labels in this screen.

Table 40 Advanced Application > IGMP > Count Setup

LABEL	DESCRIPTION
IGMP Status	Click IGMP Status to open the IGMP Setup screen where you can view current IGMP information (see Section 18.3 on page 148).
Port	This field shows each DSL port number.
Active	This field shows whether or not the IGMP count limit is enabled on this port. "V" displays if it is enabled and "-" displays if it is disabled.
Count	Enter the maximum number of IGMP groups a subscriber on this port can join. This has no effect if the IGMP count limit is disabled.
Select	Select this, and click Active or Inactive to enable or disable the specified IGMP count limit on this port.
Active	Click this to enable the specified IGMP count limits on the selected ports.
Inactive	Click this to disable the specified IGMP count limits on the selected ports.
Select All	Click this to select all entries in the table.
Select None	Click this to un-select all entries in the table.

18.8 IGMP Port Info Screen

Use this screen to display the current number of IGMP-related packets received on each port. To open this screen, click **Advanced Application > IGMP > IGMP Port Info**.

Figure 72 Advanced Application > IGMP > IGMP Port Info

Port	Group Count	Query Count	Join Count	Leave Count
1	0	0	0	0
2	0	0	0	0
3	0	0	0	0
4	0	0	0	0
5	0	0	0	0
enet1	0	0	0	0
enet2	0	0	0	0

Clear

The following table describes the labels in this screen.

Table 41 Advanced Application > IGMP > IGMP Port Info

LABEL	DESCRIPTION
IGMP Status	Click IGMP Status to open the IGMP Setup screen where you can view current IGMP information (see Section 18.3 on page 148).
Show Port	Select a port for which you wish to view information.
Port	This field shows each port number.
Group Count	This is the total number of Group packets received on this port.
Query Count	This is the total number of Query packets received on this port.
Join Count	This is the total number of Join packets received on this port.
Leave Count	This is the total number of Leave packets received on this port.
Clear	Click Clear to delete the information the IES-708-22A has learned about multicast groups. This resets every counter in this screen.

18.9 IGMP Port Group Screen

Use this screen to display the current list of multicast groups each port joins. To open this screen, click **Advanced Application > IGMP > IGMP Port Group**.

Figure 73 Advanced Application > IGMP > IGMP Port Group

The screenshot shows the 'IGMP Port Group' screen. At the top, there's a blue header with an orange circle icon and the text 'IGMP Port Group'. To the right of the header is a link labeled 'IGMP Status'. Below the header, there's a 'Show Port' label followed by a dropdown menu showing '1'. Below this is a table with four columns: 'Port', 'VID', 'Multicast IP', and 'Source IP'. The table is currently empty. Below the table is a 'Refresh' button.

The following table describes the labels in this screen.

Table 42 Advanced Application > IGMP > IGMP Port Group

LABEL	DESCRIPTION
IGMP Status	Click IGMP Status to open the IGMP Setup screen where you can view current IGMP information (see Section 18.3 on page 148).
Show Port	Select a port for which you wish to view information.
Port	This field shows each port number.
VID	This field shows the associated VLAN ID.
Multicast IP	This field shows the IP address of the multicast group joined by this port.
Source IP	This field shows the IP address of the client that joined the multicast group on this port.
Refresh	Click Refresh to display updated information.

Static Multicast

This chapter describes the **Static Multicast** screen.

19.1 Static Multicast

Use static multicast to allow incoming frames based on multicast MAC address(es) that you specify. This feature can be used in conjunction with IGMP snooping to allow multicast MAC address(es) that are not learned by IGMP snooping. Use static multicast to pass routing protocols, such as RIP and OSPF.

19.2 Static Multicast Screen

To open this screen, click **Advanced Application > Static Multicast**.

Figure 74 Advanced Application > Static Multicast

The following table describes the labels in this screen.

Table 43 Advanced Application > Static Multicast

LABEL	DESCRIPTION
The Number of Static Multicast	This is the number of static multicast entries configured on the IES-708-22A.
Page X of X	This identifies which page of information is displayed and the total number of pages of information.
Previous Next	Click one of these buttons to show the previous/next screen if all status information cannot be seen in one screen.
Reload	Click this button to refresh the screen.
	The first table displays the names of the fields. The subsequent tables show the settings of the IGMP groups.

Table 43 Advanced Application > Static Multicast (continued)

LABEL	DESCRIPTION
Index	This is the static multicast group index number.
MAC Address	This is the multicast MAC address.
1~8	These fields display the static multicast group membership status of the DSL ports. “V” displays for members and “-” displays for non-members. Click a DSL port’s status to change it (clicking a “V” changes it to “-” and vice versa).
Join All	Click Join All to make all of the DSL ports members of the static multicast group.
Leave All	Click Leave All to remove all of the DSL ports from the static multicast group.
Delete	Click Delete to remove a static multicast group.
Adding new entry Add	Type a multicast MAC address in the field, and click the Add button to create a new static multicast entry. Multicast MAC addresses must be 01:00:5E:xx:xx:xx, where x is a “don’t care” value. For example, 01:00:5E:10:10:10 is a valid multicast MAC address. Clicking Add saves your changes to the IES-708-22A’s volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

Multicast VLAN

This feature is available in STU-C mode only.

This chapter describes the **Multicast VLAN** screens.

20.1 Multicast VLAN Overview

Multicast VLAN allows one single multicast VLAN to be shared among different subscriber VLANs on the network. This improves bandwidth utilization by reducing multicast traffic in the subscriber VLANs and simplifies multicast group management.

When the IES-708-22A forwards traffic to a subscriber port, it tries to forward traffic to a normal PVC with the same VLAN ID. If this PVC does not exist, the IES-708-22A uses the super channel instead. This applies to all downstream traffic, not just multicast traffic.

It is suggested to use a super channel for multicast VLAN. If a normal PVC is used and the multicast VLAN ID is not the same as the PVC's VID, the IES-708-22A does not forward traffic to this PVC even if the subscriber's port has joined the multicast VLAN.

Since the IES-708-22A might change the subscriber's VLAN ID to the multicast VLAN ID, both the subscriber's port and the Ethernet port should join the multicast VLAN.

20.2 MVLAN Status Screen

Use this screen to look at a summary of all multicast VLAN on the IES-708-22A. To open this screen, click **Advanced Application > Multicast VLAN**.

Figure 75 Advanced Application > Multicast VLAN

MVLAN Status									
The Number Of MVLAN = 0									
Index	Status			Name / VID					
	1	2	3	4	5	6	7	8	ENET1 ENET2

The following table describes the labels in this screen.

Table 44 Advanced Application > Multicast VLAN

LABEL	DESCRIPTION
MVLAN Setup	Click MVLAN Setup to open the MVLAN Setup screen where you can configure basic settings and port members for each multicast VLAN (see Section 20.3 on page 160).
MVLAN Group	Click MVLAN Group to open the MVLAN Group screen where you can configure ranges of multicast IP addresses for each multicast VLAN (see Section 20.4 on page 162).
The Number of MVLAN	This is the number of multicast VLAN configured on the IES-708-22A.
	The first table displays the names of the fields. The subsequent tables show the settings for each multicast VLAN.
Index	This is a sequential value and is not associated with this multicast VLAN.
Name / VID	This field shows the name and VLAN ID of this multicast VLAN.
1~8 ENET1-2	These fields display whether or not each port is a member of this multicast VLAN. "V" displays for members and "-" displays for non-members. You can change these settings in the MVLAN Setup screen.
Status	This field shows whether this multicast VLAN is active (Enable) or inactive (Disable).

20.3 MVLAN Setup Screen

Use this screen to configure basic settings and port members for each multicast VLAN. To open this screen, click **Advanced Application > Multicast VLAN > MVLAN Setup**.

Figure 76 Advanced Application > Multicast VLAN > MVLAN Setup

VID	Active	Name	Delete
5	Yes	example	<input type="checkbox"/>

Active ☐
 Name
 VLAN ID (1~4094)

Port	Control		Tagging	
	Select All	Select All	Select	All None
ENET1	<input checked="" type="radio"/> Fixed	<input type="radio"/> Forbidden	<input type="checkbox"/> Tx Tagging	
ENET2	<input checked="" type="radio"/> Fixed	<input type="radio"/> Forbidden	<input type="checkbox"/> Tx Tagging	
1	<input checked="" type="radio"/> Fixed	<input type="radio"/> Forbidden	<input type="checkbox"/> Tx Tagging	
2	<input checked="" type="radio"/> Fixed	<input type="radio"/> Forbidden	<input type="checkbox"/> Tx Tagging	
3	<input checked="" type="radio"/> Fixed	<input type="radio"/> Forbidden	<input type="checkbox"/> Tx Tagging	
4	<input checked="" type="radio"/> Fixed	<input type="radio"/> Forbidden	<input type="checkbox"/> Tx Tagging	
5	<input checked="" type="radio"/> Fixed	<input type="radio"/> Forbidden	<input type="checkbox"/> Tx Tagging	

The following table describes the labels in this screen.

Table 45 Advanced Application > Multicast VLAN > MVLAN Setup

LABEL	DESCRIPTION
MVLAN Status	Click MVLAN Status to open the MVLAN Status screen where you can view a summary of all multicast VLAN on the IES-708-22A (see Section 20.2 on page 159).
MVLAN Group	Click MVLAN Group to open the MVLAN Group screen where you can configure ranges of multicast IP addresses for each multicast VLAN (see Section 20.4 on page 162).
VID	This field shows the VLAN ID of each multicast VLAN. Click it to edit its basic settings and port members in the fields below.
Active	This field shows whether this multicast VLAN is active (Yes) or inactive (No).
Name	This field shows the name of this multicast VLAN.
Delete	Select the check boxes of the rule(s) that you want to remove in the Delete column and then click the Delete button. You cannot delete a VLAN if any PVIDs are set to use the VLAN or the VLAN is the CPU (management) VLAN.
Cancel	Click Cancel to begin configuring the fields afresh.
Active	Select this if you want the multicast VLAN to be active. Clear this if you want the multicast VLAN to be inactive.
Name	Enter a descriptive name for the multicast VLAN. The name can be 1-31 printable English keyboard characters long. Spaces are not allowed.
VLAN ID	Enter the VLAN ID of the multicast VLAN; the valid range is between 1 and 4094.
Port	This field displays each port number.

Table 45 Advanced Application > Multicast VLAN > MVLAN Setup (continued)

LABEL	DESCRIPTION
Control	Select Fixed for the port to be a permanent member of this multicast VLAN. Use the Select All button to include every port. Select Forbidden if you want to prohibit the port from joining this multicast VLAN. Use the Select All button to include every port.
Tagging	Select TX Tagging if you want the port to tag all outgoing frames transmitted with this VLAN ID. Use the All button to include every port. Use the None button to clear all of the ports check boxes.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields afresh.

20.4 MVLAN Group Screen

Use this screen to configure ranges of multicast IP addresses for each multicast VLAN. To open this screen, click **Advanced Application > Multicast VLAN > MVLAN Group**.

Figure 77 Advanced Application > Multicast VLAN > MVLAN Group

The following table describes the labels in this screen.

Table 46 Advanced Application > Multicast VLAN > MVLAN Group

LABEL	DESCRIPTION
MVLAN Status	Click MVLAN Status to open the MVLAN Status screen where you can view a summary of all multicast VLAN on the IES-708-22A (see Section 20.2 on page 159).
MVLAN Setup	Click MVLAN Setup to open the MVLAN Setup screen where you can configure basic settings and port members for each multicast VLAN (see Section 20.3 on page 160).

Table 46 Advanced Application > Multicast VLAN > MVLAN Group (continued)

LABEL	DESCRIPTION
MVLAN ID	Select the VLAN ID of the multicast VLAN for which you want to configure a range of multicast IP addresses.
Index	Select the index number of the multicast VLAN group (the range of multicast IP addresses) you want to configure for this multicast VLAN. If you want to change the current settings, select an index number that already exists. If you want to add a new multicast VLAN group, select an index number that does not exist.
Start Multicast IP	Enter the beginning of the range of multicast IP addresses. The IP address must be a valid multicast IP address, between 224.0.0.0 and 239.255.255.255.
End Multicast IP	Enter the end of the range of multicast IP addresses. The IP address must be a valid multicast IP address, between 224.0.0.0 and 239.255.255.255.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields afresh.
MVLAN ID	Select the VLAN ID of the multicast VLAN for which you want to look at or remove the multicast IP addresses currently added to it.
Name	This field displays the name of this multicast VLAN.
State	This field shows whether this multicast VLAN is active (Enable) or inactive (Disable).
Entry Index	This field displays the index number of each multicast VLAN group (the range of multicast IP addresses) configured for this multicast VLAN.
Start Multicast IP	This field displays the beginning of this range of multicast IP addresses.
End Multicast IP	This field displays the end of this range of multicast IP addresses.
Select	Select this, and click Delete to remove the multicast VLAN group.
Delete	Click this to remove the selected multicast VLAN groups.
Cancel	Click Cancel to begin configuring the fields afresh.

Packet Filtering

This feature is available in STU-C mode only.

This chapter describes how to configure the **Packet Filter** screen.

21.1 Packet Filter Screen

Use this screen to set which types of packets the IES-708-22A accepts on individual DSL ports.

To open this screen, click **Advanced Application > Filtering**.

Figure 78 Advanced Application > Filtering

Port: 1 PPPoE Only: ☐

☒ Pass through ☒ Pass through
☒ Pass through ☒ Pass through
☒ Pass through ☒ Pass through
☒ Pass through ☒ Pass through

Add Cancel

V : Pass through - : Filter out # : Don't care

Port	PPPoE	IP	ARP	NetBios	DHCP	EAPOL	IGMP	PPPoE Only
1	V	V	V	V	V	V	V	-
2	V	V	V	V	V	V	V	-
3	V	V	V	V	V	V	V	-
4	V	V	V	V	V	V	V	-
5	V	V	V	V	V	V	V	-

The following table describes the labels in this screen.

Table 47 Advanced Application > Filtering

LABEL	DESCRIPTION
Port	Use this drop-down list box to select a DSL port for which you wish to configure packet type filtering. This box is read-only after you click on one of the port numbers in the table below.
PPPoE Only	Select this to allow only PPPoE traffic. This will gray out the check boxes for other packet types and the system will drop any non-PPPoE packets.
	Select the check boxes of the types of packets to accept on the DSL port. When you clear one of these check boxes, the field label changes to Filter Out and the system drops the corresponding type of packets

Table 47 Advanced Application > Filtering (continued)

LABEL	DESCRIPTION
PPPoE Pass through	Point-to-Point Protocol over Ethernet relies on PPP and Ethernet. It is a specification for connecting the users on an Ethernet to the Internet through a common broadband medium, such as a single DSL line, wireless device or cable modem.
IP Pass through	Internet Protocol. The underlying protocol for routing packets on the Internet and other TCP/IP-based networks.
ARP Pass through	Address Resolution Protocol is a protocol for mapping an Internet Protocol address (IP address) to a physical computer address that is recognized in the local network.
NetBios Pass through	NetBIOS (Network Basic Input/Output System) are TCP or UDP packets that enable a computer to find other computers.
DHCP Pass through	Dynamic Host Configuration Protocol automatically assigns IP addresses to clients when they log on. DHCP centralizes IP address management on central computers that run the DHCP server program. DHCP leases addresses, for a period of time, which means that past addresses are “recycled” and made available for future reassignment to other systems.
EAPOL Pass through	EAP (Extensible Authentication Protocol, RFC 2486) over LAN. EAP is used with IEEE 802.1x to allow additional authentication methods (besides RADIUS) to be deployed with no changes to the access point or the wireless clients.
IGMP Pass through	Internet Group Management Protocol is used when sending packets to a specific group of hosts.
Add Apply	Click Add or Apply to save the filter settings. The settings then display in the summary table at the bottom of the screen. Clicking Add or Apply saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring the fields afresh.
	This table shows the DSL port packet filter settings.
Port	These are the numbers of the DSL ports. Click this number to edit the port's filter settings in the section at the top.
PPPoE, IP, ARP, NetBios, DHCP, EAPOL, IGMP, PPPoE Only	These are the packet filter settings for each port. “V” displays for the packet types that the IES-708-22A is to accept on the port. “-” displays for packet types that the IES-708-22A is to reject on the port (packet types that are not listed are accepted). When you select PPPoE Only , “#” appears for all of the packet types. With PPPoE Only , the IES-708-22A rejects all packet types except for PPPoE (packet types that are not listed are also rejected).

MAC Filter

This feature is available in STU-C mode only.

This chapter introduces the MAC filter.

22.1 MAC Filter Introduction

Use the MAC filter to control from which MAC (Media Access Control) addresses frames can (or cannot) come in through a port.

22.2 MAC Filter Screen

To open this screen, click **Advanced Application > MAC Filter**.

Figure 79 Advanced Application > MAC Filter

MAC Filter

Accept Mode: accept specified MACs but deny others.
Deny Mode: deny specified MACs but accept others.

Port 1 MAC

Add **Cancel**

Port	Mode	Active	MAC	Delete
1	Accept	<input type="checkbox"/>		
2	Accept	<input type="checkbox"/>		
3	Accept	<input type="checkbox"/>		
4	Accept	<input type="checkbox"/>		
5	Accept	<input type="checkbox"/>		

Apply

The following table describes the labels in this screen.

Table 48 Advanced Application > MAC Filter

LABEL	DESCRIPTION
Port	Use this drop-down list box to select a DSL port for which you wish to configure MAC filtering.
MAC	Type a device's MAC address in hexadecimal notation (xx:xx:xx:xx:xx:xx, where x is a number from 0 to 9 or a letter from a to f) in this field. The MAC address must be a valid MAC address.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.
Port	These are the numbers of the DSL ports.
Mode	Select Accept to only allow frames from MAC addresses that you specify and block frames from other MAC addresses. Select Deny to block frames from MAC addresses that you specify and allow frames from other MAC addresses.
Active	Select this check box to turn on MAC filtering for a port.
MAC	This field lists the MAC addresses that are set for this port.
Delete	Click Delete to remove a MAC address from the list.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

Spanning Tree Protocol

This feature is available in STU-C mode only.

This chapter introduces the Spanning Tree Protocol (STP) and Rapid Spanning Tree Protocol (RSTP).

23.1 RSTP and STP

RSTP adds rapid reconfiguration capability to STP. The IES-708-22A supports RSTP and the earlier STP. RSTP and STP detect and break network loops and provide backup links between switches, bridges or routers. They allow a device to interact with other RSTP or STP-aware devices in your network to ensure that only one path exists between any two stations on the network. The IES-708-22A uses RSTP by default but can still operate with STP switches (although without RSTP's benefits).

The root bridge is the base of the spanning tree; it is the bridge with the lowest identifier value (MAC address). Path cost is the cost of transmitting a frame onto a LAN through that port. It is assigned according to the speed of the link to which a port is attached. The slower the media, the higher the cost, as illustrated in the following table.

Table 49 Path Cost


	LINK SPEED	RECOMMENDED VALUE	RECOMMENDED RANGE	ALLOWED RANGE
Path Cost	4Mbps	250	100 to 1000	1 to 65535
Path Cost	10Mbps	100	50 to 600	1 to 65535
Path Cost	16Mbps	62	40 to 400	1 to 65535
Path Cost	100Mbps	19	10 to 60	1 to 65535
Path Cost	1Gbps	4	3 to 10	1 to 65535
Path Cost	10Gbps	2	1 to 5	1 to 65535

On each bridge, the root port is the port through which this bridge communicates with the root. It is the port on this IES-708-22A with the lowest path cost to the root (the root path cost). If there is no root port, then this IES-708-22A has been accepted as the root bridge of the spanning tree network.

For each LAN segment, a designated bridge is selected. This bridge has the lowest cost to the root among the bridges connected to the LAN.

After a bridge determines the lowest cost-spanning tree with RSTP, it enables the root port and the ports that are the designated ports for the connected LANs, and disables all other ports that participate in RSTP. Network packets are therefore only forwarded between enabled ports, eliminating any possible network loops.

Figure 80 STP Root Ports and Designated Ports

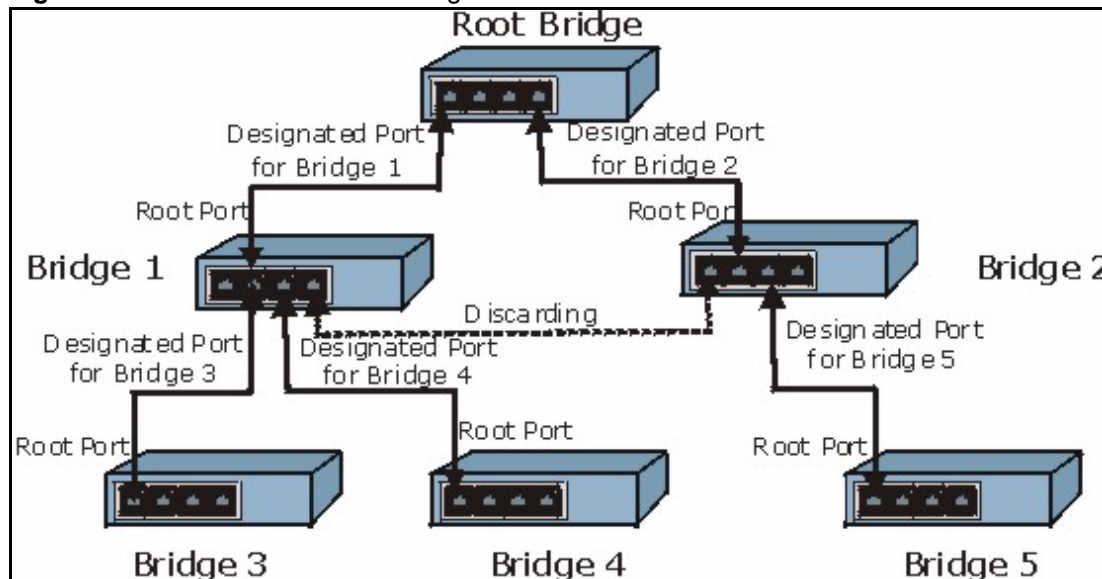

RSTP-aware devices exchange Bridge Protocol Data Units (BPDUs) periodically. When the bridged LAN topology changes, a new spanning tree is constructed.

In RSTP, the devices send BPDUs every Hello Time. If an RSTP-aware device does not get a Hello BPDU after three Hello Times pass (or the Max Age), the device assumes that the link to the neighboring bridge is down. This device then initiates negotiations with other devices to reconfigure the network to re-establish a valid network topology.

In STP, once a stable network topology has been established, all devices listen for Hello BPDUs transmitted from the root bridge. If an STP-aware device does not get a Hello BPDU after a predefined interval (Max Age), the device assumes that the link to the root bridge is down. This device then initiates negotiations with other devices to reconfigure the network to re-establish a valid network topology.

RSTP assigns three port states to eliminate packet looping while STP assigns five (see [Table 50 on page 170](#)). A device port is not allowed to go directly from blocking state to forwarding state so as to eliminate transient loops.

Table 50 RSTP Port States

RSTP PORT STATE	STP PORT STATE	DESCRIPTION
Discarding	Disabled	RSTP or STP is disabled (default).
Discarding	Blocking	In RSTP, BPDUs are discarded. In STP, only configuration and management BPDUs are received and processed.
Discarding	Listening	In RSTP, BPDUs are discarded. In STP, all BPDUs are received and processed.

Table 50 RSTP Port States (continued)

RSTP PORT STATE	STP PORT STATE	DESCRIPTION
Learning	Learning	All BPDUs are received and processed. Information frames are submitted to the learning process but not forwarded.
Forwarding	Forwarding	All BPDUs are received and processed. All information frames are received and forwarded.

See the IEEE 802.1w standard for more information on RSTP. See the IEEE 802.1D standard for more information on STP.

23.2 Spanning Tree Protocol Status Screen

To open this screen, click **Advanced Application > Spanning Tree Protocol**.

Figure 81 Advanced Application > Spanning Tree Protocol

Spanning Tree Protocol Status [STP Config](#)

Spanning Tree Protocol : On

Bridge Status	
Our bridge ID	8000-001349000001
Designated root ID	8000-001349000001
Topology change times	0
Time since change	0:00:04
Cost to root	0
Root port ID	0x0000
Root max age (second)	20
Root hello time (second)	2
Root forward delay (second)	15
Max age (second)	20
Hello time (second)	2
Forward delay (second)	15

Port Status	ENET1	ENET2
State	Disabled	discarding
Port ID	-	0x8032
Path cost	-	4
Cost to root	-	0
Designated bridge	-	0000-000000000000
Designated port	-	0x0000

Poll Interval(s) Set Interval Stop

The following table describes the labels in this screen.

Table 51 Advanced Application > Spanning Tree Protocol

LABEL	DESCRIPTION
STP Config	Click STP Config to modify the IES-708-22A's STP settings (see Section 23.3 on page 173).
Spanning Tree Protocol	This field displays On if STP is activated. Otherwise, it displays Off .

Table 51 Advanced Application > Spanning Tree Protocol (continued)

LABEL	DESCRIPTION
Bridge Status	If STP is activated, the following fields appear. If STP is not activated, Disabled appears.
Our bridge ID	This is the unique identifier for this bridge, consisting of bridge priority plus MAC address. This ID is the same in Designated root ID if the IES-708-22A is the root switch.
Designated root ID	This is the unique identifier for the root bridge, consisting of bridge priority plus MAC address. This ID is the same in Our bridge ID if the IES-708-22A is the root switch.
Topology change times	This is the number of times the spanning tree has been reconfigured.
Time since change	This is the time since the spanning tree was last reconfigured.
Cost to root	This is the path cost from the root port on the IES-708-22A to the root switch.
Root port ID	This is the priority and number of the port on the IES-708-22A through which the IES-708-22A must communicate with the root of the Spanning Tree. "0x0000" displays when the IES-708-22A is the root switch.
Root max age (second)	This is the maximum time (in seconds) the root switch can wait without receiving a configuration message before attempting to reconfigure.
Root hello time (second)	This is the time interval (in seconds) at which the root switch transmits a configuration message. The root bridge determines Hello Time , Max Age and Forwarding Delay .
Root forward delay (second)	This is the time (in seconds) the root switch will wait before changing states (that is, listening to learning to forwarding).
Max age (second)	This is the maximum time (in seconds) the IES-708-22A can wait without receiving a configuration message before attempting to reconfigure.
Hello time (second)	This is the time interval (in seconds) at which the IES-708-22A transmits a configuration message. The root bridge determines Hello Time , Max Age and Forwarding Delay .
Forward delay (second)	This is the time (in seconds) the IES-708-22A will wait before changing states (that is, listening to learning to forwarding).
Port Status	This identifies the IES-708-22A's ports that support the use of STP. If STP is activated, the following fields appear. If STP is not activated, Disabled appears.
State	This field displays the port's RSTP (or STP) state. With RSTP, the state can be discarding , learning or forwarding . With STP, the state can be disabled , blocking , listening , learning , or forwarding . Disabled appears when RSTP has not been turned on for the individual port or the whole device.
Port ID	This is the priority and number of the port on the IES-708-22A through which the IES-708-22A must communicate with the root of the Spanning Tree. "0x0000" displays when the IES-708-22A is the root switch.
Path cost	This is the path cost from this port to the root switch.
Cost to root	This is the path cost from the root port on the IES-708-22A to the root switch.
Designated bridge	This is the unique identifier for the bridge that has the lowest path cost to reach the root bridge, consisting of bridge priority plus MAC address.
Designated port	This is the port on the designated bridge that has the lowest path cost to reach the root bridge, consisting of bridge priority.

Table 51 Advanced Application > Spanning Tree Protocol (continued)

LABEL	DESCRIPTION
Poll Interval(s) Set Interval	The text box displays how often (in seconds) this screen refreshes. You may change the refresh interval by typing a new number in the text box and then clicking Set Interval .
Stop	Click Stop to halt STP statistic polling.

23.3 Spanning Tree Protocol Screen

To open this screen, click **Advanced Application > Spanning Tree Protocol > STP Config**.

Figure 82 Advanced Application > Spanning Tree Protocol > STP Config

Spanning Tree Protocol **STP Status**

Active ☐

Bridge Priority (0-65535)

Hello Time (1-10) seconds

MAX Age (6-40) seconds

Forwarding Delay (4-30) seconds

Port	Active	Priority(0-255)	Path Cost(1-65535)
ENET1	<input type="checkbox"/>	<input type="text" value="128"/>	<input type="text" value="4"/>
ENET2	<input type="checkbox"/>	<input type="text" value="128"/>	<input type="text" value="4"/>

Apply **Cancel**

The following table describes the labels in this screen.

Table 52 Advanced Application > Spanning Tree Protocol > STP Config

LABEL	DESCRIPTION
STP Status	Click STP Status to display the IES-708-22A's STP status (see Section 23.2 on page 171).
Active	Select this check box to turn on RSTP. Note: It is recommended that you only use STP when you use the IES-708-22A in standalone mode with a network topology that has loops.
Bridge Priority	Bridge priority is used in determining the root switch, root port and designated port. The switch with the highest priority (lowest numeric value) becomes the STP root switch. If all switches have the same priority, the switch with the lowest MAC address will then become the root switch. The allowed range is 0 to 61440. The lower the numeric value you assign, the higher the priority for this bridge. Bridge Priority determines the root bridge, which in turn determines Hello Time, Max Age and Forwarding Delay.

Table 52 Advanced Application > Spanning Tree Protocol > STP Config (continued)

LABEL	DESCRIPTION
Hello Time	This is the time interval in seconds between BPDU (Bridge Protocol Data Units) configuration message generations by the root switch. The allowed range is 1 to 10 seconds.
MAX Age	This is the maximum time (in seconds) the IES-708-22A can wait without receiving a BPDU before attempting to reconfigure. All ports (except for designated ports) should receive BPDUs at regular intervals. Any port that ages out STP information (provided in the last BPDU) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the IES-708-22A ports attached to the network. The allowed range is 6 to 40 seconds.
Forwarding Delay	<p>This is the maximum time (in seconds) the IES-708-22A will wait before changing states. This delay is required because every switch must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a blocking state; otherwise, temporary data loops might result. The allowed range is 4 to 30 seconds.</p> <p>As a general rule:</p> <p>Note: $2 * (\text{Forward Delay} - 1) \geq \text{Max Age} \geq 2 * (\text{Hello Time} + 1)$</p>
Port	This field identifies the Ethernet port.
Active	Select this check box to activate STP on this port.
Priority	<p>Configure the priority for each port here.</p> <p>Priority decides which port should be disabled when more than one port forms a loop in a switch. Ports with a higher priority numeric value are disabled first. The allowed range is between 0 and 255 and default value is 128.</p>
Path Cost	Path cost is the cost of transmitting a frame on to a LAN through that port. It is assigned according to the speed of the bridge. The slower the media, the higher the cost.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.

Port Authentication

This feature is available in STU-C mode only.

This chapter describes the 802.1x authentication method and RADIUS server connection setup.


24.1 Introduction to Authentication

IEEE 802.1x is an extended authentication protocol² that allows support of RADIUS (Remote Authentication Dial In User Service, RFC 2138, 2139) for centralized user profile management on a network RADIUS server.

24.1.1 RADIUS

RADIUS (Remote Authentication Dial-In User Service) authentication is a popular protocol used to authenticate users by means of an external server instead of (or in addition to) an internal device user database that is limited to the memory capacity of the device. In essence, RADIUS authentication allows you to validate an unlimited number of users from a central location.

Figure 83 RADIUS Server

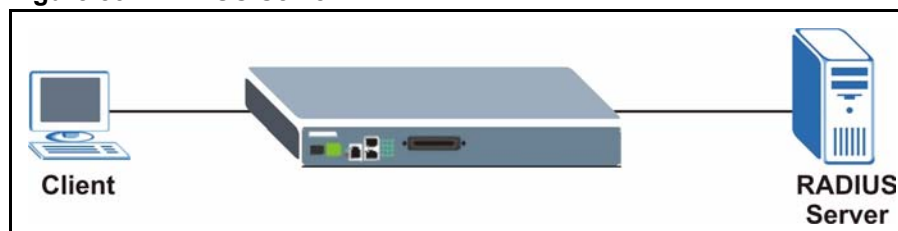

24.1.2 Introduction to Local User Database

By storing user profiles locally on the IES-708-22A, your IES-708-22A is able to authenticate users without interacting

2. At the time of writing, Windows XP of the Microsoft operating systems supports 802.1x. See the Microsoft web site for information on other Windows operating system support. For other operating systems, see its documentation. If your operating system does not support 802.1x, then you may need to install 802.1x client software.

24.2 RADIUS Screen

To open this screen, click **Advanced Application > Port Authentication**.

Figure 84 Advanced Application > Port Authentication

RADIUS 802.1x

☒ **Enable Authentication Server**

IP address:

UDP Port: (1-65535)

Shared Secret:

Apply

☐ **Enable Local Profile Setting (Support up to 64 profiles)**

Name:

Password:

Retype Password to confirm:

Add **Cancel**

Index	Name	Delete
1	admin	<input type="checkbox"/>

Delete **Cancel**

The following table describes the labels in this screen.

Table 53 Advanced Application > Port Authentication

LABEL	DESCRIPTION
802.1x	Click 802.1x to configure individual port authentication settings (see Section 24.3 on page 177).
Enable Authentication Server	Select this check box to have the IES-708-22A use an external RADIUS server to authenticate users.
IP Address	Enter the IP address of the external RADIUS server in dotted decimal notation.
UDP Port	The default port of the RADIUS server for authentication is 1812 . You need not change this value unless your network administrator instructs you to do so.
Shared Secret	Specify a password (up to 31 alphanumeric characters) as the key to be shared between the external RADIUS server and the IES-708-22A. This key is not sent over the network. This key must be the same on the external RADIUS server and the IES-708-22A.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Enable Local Profile Setting	Select this check box to have the IES-708-22A use its internal database of user names and passwords to authenticate users.
Name	Type the user name of the user profile.
Password	Type a password up to 31 characters long for this user profile.

Table 53 Advanced Application > Port Authentication (continued)

LABEL	DESCRIPTION
Retype Password to confirm	Type the password again to make sure you have entered it properly.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.
	This table displays the configured user profiles.
Index	These are the numbers of the user profiles. Click this number to edit the user profile.
Name	This is the user name of the user profile.
Delete	Select a user profile's Delete check box and click Delete to remove the user profile.
Cancel	Click Cancel to begin configuring this screen afresh and clear any selected Delete check boxes.

24.3 802.1x Screen

To open this screen, click **Advanced Application > Port Authentication > 802.1x**.

Figure 85 Advanced Application > Port Authentication > 802.1x

Port	Enable	Control	Reauthentication	Reauthentication Period(s)
1	<input type="checkbox"/>	AUTO	On	3600 (60~65535)
2	<input type="checkbox"/>	AUTO	On	3600 (60~65535)
3	<input type="checkbox"/>	AUTO	On	3600 (60~65535)
4	<input type="checkbox"/>	AUTO	On	3600 (60~65535)
5	<input type="checkbox"/>	AUTO	On	3600 (60~65535)

The following table describes the labels in this screen.

Table 54 Advanced Application > Port Authentication > 802.1x

LABEL	DESCRIPTION
RADIUS/Local Profile	Click this link to configure the RADIUS server or local profile settings (see Section 24.2 on page 176).
Enable	Select this check box to turn on IEEE 802.1x authentication on the IES-708-22A.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

Table 54 Advanced Application > Port Authentication > 802.1x (continued)

LABEL	DESCRIPTION
Cancel	Click Cancel to begin configuring this screen afresh.
Port	This field displays a port number.
Enable	Select this check box to turn on IEEE 802.1x authentication on this port.
Control	Select AUTO to authenticate all subscribers before they can access the network through this port. Select FORCE AUTHORIZED to allow all connected users to access the network through this port without authentication. Select FORCE UNAUTHORIZED to deny all subscribers access to the network through this port.
Reauthentication	Specify if a subscriber has to periodically re-enter his or her username and password to stay connected to the port.
Reauthentication Period(s)	Specify how often a client has to re-enter his or her username and password to stay connected to the port.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.

Port Security

This feature is available in STU-C mode only.

This chapter shows you how to set up port security.

25.1 Port Security Overview

Port security allows you to restrict the number of MAC addresses that can be learned on a port.

25.2 Port Security Screen

To open this screen, click **Advanced Application > Port Security**.

Figure 86 Advanced Application > Port Security

Port	Enable	Limited Number of Learned MAC Address
1	<input type="checkbox"/>	5 (1-128)
2	<input type="checkbox"/>	5 (1-128)
3	<input type="checkbox"/>	5 (1-128)
4	<input type="checkbox"/>	5 (1-128)
5	<input type="checkbox"/>	5 (1-128)


Apply Cancel Copy port 1 Paste

The following table describes the labels in this screen.

Table 55 Advanced Application > Port Security

LABEL	DESCRIPTION
Port	This field displays a port number.
Enable	Select this check box to restrict the number of MAC addresses that can be learned on the port. Clear this check box to not limit the number of MAC addresses that can be learned on the port.
Limited Number of Learned MAC Address	Specify how many MAC addresses the IES-708-22A can learn on this port. The range is 1~128. Note: If you also use MAC filtering on a port, it is recommended that you set this limit to be equal to or greater than the number of MAC filter entries you configure.

Table 55 Advanced Application > Port Security (continued)

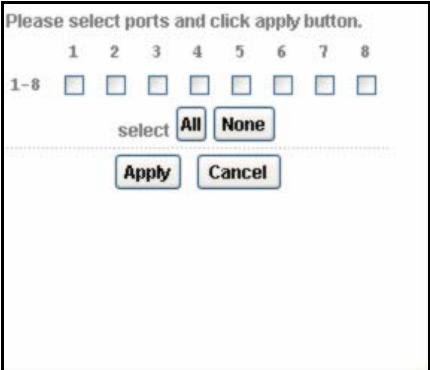LABEL	DESCRIPTION
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.
Copy port Paste	<p>Do the following to copy settings from one port to another port or ports.</p> <ol style="list-style-type: none"> 1 Select the number of the port from which you want to copy settings. 2 Click Paste and the following screen appears. 3 Select to which ports you want to copy the settings. Use All to select every port. Use None to clear all of the check boxes. 4 Click Apply to paste the settings. <p>Figure 87 Select Ports</p> 

DHCP Relay

This feature is available in STU-C mode only.

This chapter shows you how to set up DHCP relays for each VLAN.

26.1 DHCP Relay

DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients to obtain TCP/IP configuration at start-up from a DHCP server. You can configure the IES-708-22A to relay DHCP requests to one or more DHCP servers and the server's responses back to the clients. You can specify default DHCP servers for all VLAN, and you can specify DHCP servers for each VLAN.

26.2 DHCP Relay Agent Information Option (Option 82)

The IES-708-22A can add information to DHCP requests that it relays to a DHCP server. This helps provide authentication about the source of the requests. You can also specify additional information for the IES-708-22A to add to the DHCP requests that it relays to the DHCP server. Please see RFC 3046 for more details.

26.2.1 DHCP Relay Agent Circuit ID and Remote ID Sub-option Formats


The DHCP relay agent information feature adds an Agent Information field to the option 82 field of the DHCP headers of DHCP request frames that the IES-708-22A relays to a DHCP server. The Agent Information field that the IES-708-22A adds contains an "Agent Circuit-ID sub-option" that includes the port number, VLAN ID and optional information about the port where the DHCP request was received.

The following figure shows the format of the Agent Circuit ID sub-option. The 1 in the first field identifies this as an Agent Circuit ID sub-option. The length N gives the total number of octets in the Agent Information Field. If the configuration request was received on a DSL port, a 2-byte Port No field specifies the ingress port number (the first byte is always 0, the second byte is in hexadecimal format). The next field is 2 bytes and displays the DHCP request packet's VLAN ID. The last field (A) can range from 0 to 24 bytes and is optional information (that you specify) about this relay agent.

Figure 88 DHCP Relay Agent Circuit ID Sub-option Format

The Agent Information field that the IES-708-22A adds also contains an “Agent Remote-ID sub-option” of information that you specify.

The following figure shows the format of the Agent Remote ID sub-option. The 2 in the first field identifies this as an Agent Remote ID sub-option. The length N gives the total number of octets in the Agent Information Field. Then there is the number of the port (in plain text format) upon which the DHCP client request was received. The next field (B in the figure) is 0 to 23 bytes of optional information that you specify. This is followed by the name and telephone number configured for the DSL port. The port number, optional information (B in the figure), DSL name and DSL telephone number fields are separated by forward slashes.

 Figure 89 DHCP Relay Agent Remote ID Sub-option Format

26.3 DHCP Relay Screen

To open this screen, click **Advanced Application > DHCP Relay**.

Figure 90 Advanced Application > DHCP Relay

DHCP Relay

Enable DHCP Relay ☒

Relay Mode Auto

Enable Option82 Sub-option1 ☐

Sub-option1 (Circuit ID)

Enable Option82 Sub-option2 ☐

Sub-option2 (Remote ID)

Apply **Cancel**

VLAN ID 0 (1~4094, 0: for the default server)

Primary Server IP 0.0.0.0

Secondary Server IP 0.0.0.0

Active Server Primary

Apply **Cancel**

Server List Note: The server with VLAN ID 0 is the default server. (*): Active server

Index	VLAN ID	Primary Server IP	Secondary Server IP	Select
1	0	(*)172.23.5.2	0.0.0.0	<input type="checkbox"/>

Delete **Select** **All** **None**

The following table describes the labels in this screen.

Table 56 Advanced Application > DHCP Relay

LABEL	DESCRIPTION
Enable DHCP Relay:	Enable DHCP relay to have the IES-708-22A relay DHCP requests to a DHCP server and the server's responses back to the clients.
Relay Mode	Specify how the IES-708-22A relays DHCP requests. Auto - The IES-708-22A routes DHCP requests to the active server for each VLAN. Both - The IES-708-22A routes DHCP requests to the primary and secondary server for each VLAN, regardless of which one is active.
Enable Option82 Sub-option1	Enable DHCP relay info to have the IES-708-22A add the originating port numbers to DHCP requests regardless of whether the DHCP relay is on or off.
Sub-option1 (Circuit ID)	Use this field to specify up to 23 English keyboard characters of additional information for the IES-708-22A to add to the DHCP requests that it relays to a DHCP server. Examples of information you could add would be the chassis number of the IES-708-22A or the ISP's name.
Enable Option82 Sub-option2	Enable DHCP relay info to have the IES-708-22A add the sub-option 2 (Remote ID) to DHCP requests regardless of whether the DHCP relay is on or off.
Sub-option2 (Remote ID)	Use this field to specify up to 23 English keyboard characters of additional information for the IES-708-22A to add to the DHCP requests that it relays to a DHCP server.

Table 56 Advanced Application > DHCP Relay (continued)

LABEL	DESCRIPTION
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.
VLAN ID	Enter the ID of the VLAN served by the specified DHCP relay(s). Enter 0 to set up the IP address(es) of the default DHCP relay(s).
Primary Server IP	Enter the IP address of one DHCP server to which the IES-708-22A should relay DHCP requests for the selected VLAN.
Secondary Server IP	Enter the IP address of a second DHCP server to which the IES-708-22A should relay DHCP requests for the selected VLAN. Enter 0.0.0.0 if there is only one DHCP relay for the selected VLAN.
Active Server	This field has no effect if the Relay Mode is Both . If the Relay Mode is Auto , select which DHCP server (the primary one or the secondary one) to which the IES-708-22A should relay DHCP requests for the selected VLAN.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.
Server List	This section lists the DHCP servers that are already set up for each VLAN. An asterisk in parentheses (*) indicates which DHCP server is active for each VLAN.
Index	This is a sequential value, and it is not associated with any entry. The entries are sorted by VLAN ID.
VLAN ID	This field displays the ID of the VLAN served by the specified DHCP relay(s).
Primary Server IP	This field displays the IP address of one DHCP server to which the IES-708-22A should relay DHCP requests.
Secondary Server IP	This field displays the IP address of a second DHCP server to which the IES-708-22A should relay DHCP requests. This field is 0.0.0.0 if the primary server is the only DHCP relay.
Select Delete	Select the check box in the Select column for an entry, and click Delete to remove the entry.
Select All	Click this to select all entries in the Server List .
Select None	Click this to un-select all entries in the Server List .

DHCP Snoop

This feature is available in STU-C mode only.

This chapter shows you how to set up DHCP snooping settings on the subscriber ports.

27.1 DHCP Snoop Overview

DHCP snooping prevents clients from assigning their own IP addresses. The IES-708-22A can store every (DSL port, MAC address, IP address) tuple offered by the DHCP server. Then, it only forwards packets from clients whose MAC address and IP address are recorded. Packets from unknown IP addresses are dropped.

27.2 DHCP Snoop Screen

Use this screen to activate or deactivate DHCP snooping on each port. To open this screen, click **Advanced Application > DHCP Snoop**.

Figure 91 Advanced Application > DHCP Snoop

Port	Active	Select
1	-	<input type="checkbox"/>
2	-	<input type="checkbox"/>
3	-	<input type="checkbox"/>
4	-	<input type="checkbox"/>
5	-	<input type="checkbox"/>

Active Inactive Select All None

The following table describes the labels in this screen.

Table 57 Advanced Application > DHCP Snoop

LABEL	DESCRIPTION
DHCP Snoop Status	Click DHCP Snoop Status to open the screen where you can look at or clear the current DHCP snooping table on each port (see Section 27.3 on page 186).
DHCP Counter	Click DHCP Counter to open the screen where you can look at a summary of the DHCP packets on each port (see Section 27.4 on page 187).
Port	This field displays each DSL port number.
Active	This field displays whether DHCP snooping is active ("V") or inactive ("-") on this port.

Table 57 Advanced Application > DHCP Snoop (continued)

LABEL	DESCRIPTION
Select	Select this, and click Active or Inactive to enable or disable the DHCP snooping on this port.
Active	Click this to enable DHCP snooping on the selected ports.
Inactive	Click this to disable DHCP snooping on the selected ports.
All	Click this to select all entries in the table.
None	Click this to un-select all entries in the table.

27.3 DHCP Snoop Status Screen

Use this screen to look at or to clear the DHCP snooping table on each port. To open this screen, click **Advanced Application > DHCP Snoop > DHCP Snoop Status**.

Figure 92 Advanced Application > DHCP Snoop > DHCP Snoop Status

Port	Overflow	IP	MAC
1	0	-	-
2	0	-	-
3	0	-	-
4	0	-	-
5	0	-	-

The following table describes the labels in this screen.


Table 58 Advanced Application > DHCP Snoop > DHCP Snoop Status

LABEL	DESCRIPTION
DHCP Snoop	Click DHCP Snoop to open the screen where you can activate or deactivate DHCP snooping on each port (see Section 27.2 on page 185).
DHCP Counter	Click DHCP Counter to open the screen where you can look at a summary of the DHCP packets on each port (see Section 27.4 on page 187).
Show Port	Select a port for which you wish to view information.
Port	This field displays the selected DSL port number(s).
Overflow	The DHCP server can assign up to 32 IP addresses at one time to each port. This field displays the number of requests from DHCP clients above this limit.
IP	This field displays the IP address assigned to a client on this port.
MAC	This field displays the MAC address of a client on this port to which the DHCP server assigned an IP address.
Flush	Click Flush to remove all of the entries from the DHCP snooping table for the selected port(s).

27.4 DHCP Counter Screen

Use this screen to look at a summary of the DHCP packets on each port. To open this screen, click **Advanced Application > DHCP Snoop > DHCP Counter**.

Figure 93 Advanced Application > DHCP Snoop > DHCP Counter

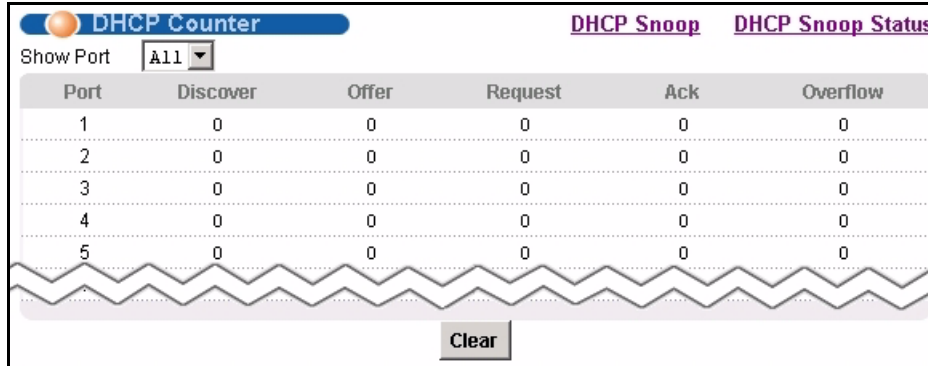

Port	Discover	Offer	Request	Ack	Overflow
1	0	0	0	0	0
2	0	0	0	0	0
3	0	0	0	0	0
4	0	0	0	0	0
5	0	0	0	0	0

The following table describes the labels in this screen.

Table 59 Advanced Application > DHCP Snoop > DHCP Counter

LABEL	DESCRIPTION
DHCP Snoop	Click DHCP Snoop to open the screen where you can activate or deactivate DHCP snooping on each port (see Section 27.2 on page 185).
DHCP Snoop Status	Click DHCP Snoop Status to open the screen where you can look at or clear the current DHCP snooping table on each port (see Section 27.3 on page 186).
Show Port	Select a port for which you wish to view information.
Port	This field displays the selected DSL port number(s).
Discover	This field displays the number of DHCP Discover packets on this port.
Offer	This field displays the number of DHCP Offer packets on this port.
Request	This field displays the number of DHCP Request packets on this port.
Ack	This field displays the number of DHCP Acknowledge packets on this port.
Overflow	The DHCP server can assign up to 32 IP addresses at one time to each port. This field displays the number of requests from DHCP clients above this limit.
Clear	Click Clear to delete the information the IES-708-22A has learned about DHCP packets. This resets every counter in this screen.

2684 Routed Mode

This feature is available in STU-C mode only.

This chapter shows you how to set up 2684 routed mode service.

28.1 2684 Routed Mode

Use the 2684 (formerly 1483) routed mode to have the IES-708-22A add MAC address headers to 2684 routed mode traffic from a PVC that connects to a subscriber device that uses 2684 routed mode. You also specify the gateway to which the IES-708-22A sends the traffic and the VLAN ID tag to add. See RFC-2684 for details on routed mode traffic carried over AAL type 5 over ATM.


- Use the [2684 Routed PVC Screen](#) to configure PVCs for 2684 routed mode traffic.
- Use the [2684 Routed Domain Screen](#) to configure domains for 2684 routed mode traffic. The domain is the range of IP addresses behind the subscriber's device (the CPE or Customer Premises Equipment). This includes the CPE device's LAN IP addresses and the IP addresses of the LAN computers.
- Use the [RPVC Arp Proxy Screen](#) to view the Address Resolution Protocol table of IP addresses of CPE devices using 2684 routed mode and configure how long the device is to store them.
- Use the [2684 Routed Gateway Screen](#) to configure gateway settings.
- For upstream traffic: Since the subscriber's device will not send out a MAC address, after the IES-708-22A reassembles the Ethernet packets from the AAL5 ATM cells, the IES-708-22A will append the routed mode gateway's MAC address and the IES-708-22A's MAC address as the destination/source MAC address.
- For downstream traffic: When the IES-708-22A sees the destination IP address is specified in the RPVC (or RPVC domain), the IES-708-22A will strip out the MAC header and send them to the corresponding RPVC.

28.1.1 2684 Routed Mode Example

The following figure shows an example 2684 routed mode set up. The gateway server uses IP address 192.168.10.102 and is in VLAN 1. The IES-708-22A uses IP address 192.168.20.101. The subscriber's device (the CPE) is connected to DSL port 1 on the IES-708-22A and the 2684 routed mode traffic is to use the PVC identified by VPI 8 and VCI 35. The CPE device's

WAN IP address is 192.168.10.200. The routed domain is the LAN IP addresses behind the CPE device. The CPE device's LAN IP address is 10.10.10.10 and the LAN computer's IP address is 10.10.10.1. This includes the CPE device's LAN IP addresses and the IP addresses of the LAN computers.

Figure 94 2684 Routed Mode Example

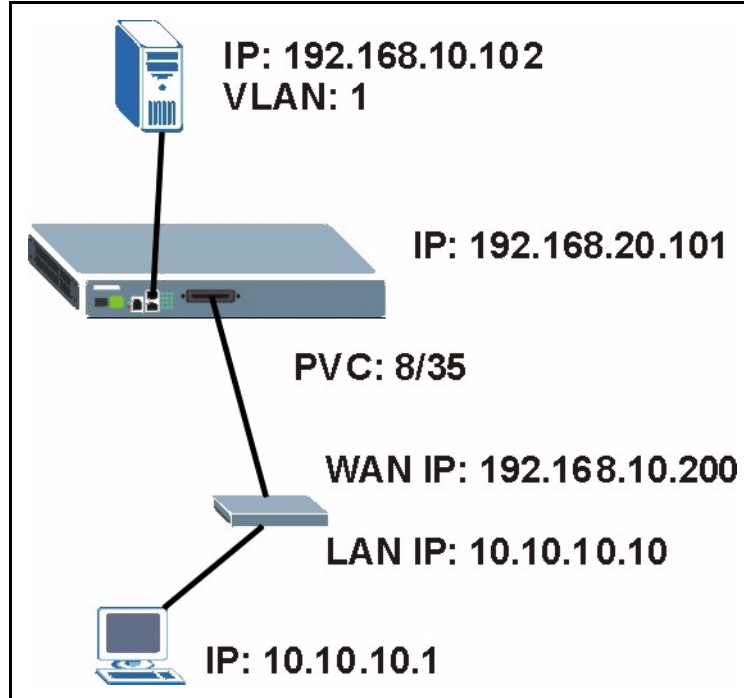

Note the following.

- The CPE device's WAN IP (192.168.10.200 in this example) must be in the same subnet as the gateway's IP address (192.168.10.102 in this example).
- The IES-708-22A's management IP address can be any IP address, it doesn't have any relationship to the WAN IP address or routed gateway IP address.
- The IES-708-22A's management IP address should not be in the same subnet as the one defined by the WAN IP address and netmask of the subscriber's device. It is suggested that you set the netmask of the subscriber's WAN IP address to 32 to avoid this problem.
- The IES-708-22A's management IP address should not be in the same subnet range of any RPVC and RPVC domain. It will make the IES-708-22A confused if the IES-708-22A receives a packet with this IP as destination IP.
- The IES-708-22A's management IP address also should not be in the same subnet as the one defined by the LAN IP address and netmask of the subscriber's device. Make sure you assign the IP addresses properly.
- In general deployment, the computer must set the CPE device's LAN IP address (10.10.10.10 in this example) as its default gateway.
- The subnet range of any RPVC and RPVC domain must be unique.

28.2 2684 Routed PVC Screen

Use this screen to configure PVCs for 2684 routed mode traffic.

To open this screen, click **Advanced Application > 2684 Routed Mode**.

Figure 95 Advanced Application > 2684 Routed PVC

The screenshot shows the '2684 Routed PVC' configuration interface. It includes a title bar with the text '2684 Routed PVC' and three tabs: 'Routed Domain', 'RPVC ARP Proxy', and 'Routed Gateway'. The main configuration area contains several input fields: 'Port' (a dropdown menu showing '1'), 'Gateway IP' (a text box with '0.0.0.0'), 'VPI' (a text box with '0'), 'VCI' (a text box with '0'), 'IP' (a text box with '0.0.0.0'), 'NetMask' (a text box with '0' and a note '(1-32)'), 'DS VC Profile' (a dropdown menu showing 'DEFVAL'), and 'US VC Profile' (a dropdown menu showing '-'). Below these fields are 'Add' and 'Cancel' buttons. At the bottom of the screen, there is a table with the following columns: 'Index', 'Port', 'VPI', 'VCI', 'IP', 'DS / US VC Profile', 'NetMask', 'Gateway IP', and 'Delete'. Below the table are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 60 Advanced Application > 2684 Routed PVC

LABEL	DESCRIPTION
Routed Domain	Click Routed Domain to open this screen where you can configure domains for 2684 routed mode traffic (see Section 28.3 on page 192).
RPVC ARP Proxy	Click RPVC ARP Proxy to go to the screen where you can view the Address Resolution Protocol table of IP addresses of CPE devices using 2684 routed mode and configure how long the device is to store them (see Section 28.4 on page 193).
Routed Gateway	Click Routed Gateway to go to the screen where you can configure gateway settings (see Section 28.5 on page 194).
Port	Use this drop-down list box to select a port for which you wish to configure settings.
Gateway IP	Enter the IP address of the gateway to which you want to send the traffic that the system receives from this PVC. Enter the IP address in dotted decimal notation.
VPI	Type the Virtual Path Identifier for this routed PVC.
VCI	Type the Virtual Circuit Identifier for this routed PVC.
IP	Enter the subscriber's CPE WAN IP address in dotted decimal notation.
NetMask	The bit number of the subnet mask of the subscriber's WAN IP address. To find the bit number, convert the subnet mask to binary and add all of the 1's together. Take "255.255.255.0" for example. 255 converts to eight 1's in binary. There are three 255's, so add three eights together and you get the bit number (24). Make sure that the routed PVC's subnet does not include the IES-708-22A's IP address.
DS VC Profile	Use the drop-down list box to select a VC profile to use for this channel's downstream traffic shaping.
US VC Profile	Use the drop-down list box to select a VC profile to use for this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.
Index	This field displays the number of the routed PVC.

Table 60 Advanced Application > 2684 Routed PVC (continued)

LABEL	DESCRIPTION
Port	This field displays the number of the DSL port on which the routed PVC is configured.
VPI	This field displays the Virtual Path Identifier (VPI). The VPI and VCI identify a channel on this port.
VCI	This field displays the Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port.
IP	This field displays the subscriber's IP address.
DS / US VC Profile	This shows which VC profile this channel uses for downstream traffic shaping. The VC profile for upstream policing also displays if the channel is configured to use one.
NetMask	This field displays the bit number of the subnet mask of the subscriber's IP address.
Gateway IP	This field displays the IP address of the gateway to which you want to send the traffic that the system receives from this PVC.
Delete	Select an entry's Delete check box and click Delete to remove the entry. Clicking Delete saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

28.3 2684 Routed Domain Screen

Use this screen to configure domains for 2684 routed mode traffic. The domain is the range of IP addresses behind the subscriber's device (the CPE). This includes the CPE device's LAN IP addresses and the IP addresses of the LAN computers.

To open this screen, click **Advanced Application > 2684 Routed Mode > Routed Domain**.

Figure 96 Advanced Application > 2684 Routed Mode > Routed Domain

The screenshot shows the '2684 Routed Domain' configuration interface. At the top, a navigation bar includes '2684 Routed Domain' (active), 'RPVC ARP Proxy', 'Routed Gateway', and 'Routed PVC'. The main configuration area contains several input fields: 'Port' is a dropdown menu showing '1'; 'VPI' is a text box with '0'; 'VCI' is a text box with '0'; 'IP' is a text box with '0.0.0.0'; and 'NetMask' is a text box with '0' and '(1-32)' to its right. Below these fields are 'Add' and 'Cancel' buttons. At the bottom of the screen, there is a table header with columns: Index, Port, VPI, VCI, IP, NetMask, and Delete. Below the header are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 61 Advanced Application > 2684 Routed Mode > Routed Domain

LABEL	DESCRIPTION
RPVC ARP Proxy	Click RPVC ARP Proxy to go to the screen where you can view the Address Resolution Protocol table of IP addresses of CPE devices using 2684 routed mode and configure how long the device is to store them (see Section 28.4 on page 193).
Routed Gateway	Click Routed Gateway to go to the screen where you can configure gateway settings (see Section 28.5 on page 194).
Routed PVC	Click Routed PVC to go to the screen where you can configure routed PVC settings (see Section 28.2 on page 190).
Port	Use this drop-down list box to select a port for which you wish to configure settings.
VPI	Type the Virtual Path Identifier for this routed PVC.
VCI	Type the Virtual Circuit Identifier for this routed PVC.
IP	Enter the subscriber's CPE LAN IP address in dotted decimal notation.
NetMask	The bit number of the subnet mask of the subscriber's IP address. To find the bit number, convert the subnet mask to binary and add all of the 1's together. Take "255.255.255.0" for example. 255 converts to eight 1's in binary. There are three 255's, so add three eights together and you get the bit number (24).
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.
Index	This field displays the number of the routed PVC.
Port	This field displays the number of the DSL port on which the routed PVC is configured.
VPI	This field displays the Virtual Path Identifier (VPI). The VPI and VCI identify a channel on this port.
VCI	This field displays the Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port.
IP	This field displays the subscriber's IP address.
NetMask	This field displays the bit number of the subnet mask of the subscriber's LAN IP address.
Delete	Select an entry's Delete check box and click Delete to remove the entry. Clicking Delete saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

28.4 RPVC Arp Proxy Screen

Use this screen to view the Address Resolution Protocol table of IP addresses of CPE devices using 2684 routed mode and configure how long the device is to store them.

To open this screen, click **Advanced Application > 2684 Routed Mode > RPVC ARP Proxy**.

Figure 97 Advanced Application > 2684 Routed Mode > RPVC Arp Proxy

The following table describes the labels in this screen.

Table 62 Advanced Application > 2684 Routed Mode > RPVC Arp Proxy

LABEL	DESCRIPTION
Routed Domain	Click Routed Domain to open this screen where you can configure domains for 2684 routed mode traffic (see Section 28.3 on page 192).
Routed Gateway	Click Routed Gateway to go to the screen where you can configure gateway settings (see Section 28.5 on page 194).
Routed PVC	Click Routed PVC to go to the screen where you can configure routed PVC settings (see Section 28.2 on page 190).
Aging Time	Enter a number of seconds (10~10000) to set how long the device keeps the Address Resolution Protocol table's entries of IP addresses of CPE devices using 2684 routed mode. Enter 0 to disable the aging time.
Apply Setting	Click Apply Setting to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Index	This field displays the number of the IP address entry.
Gateway IP	This field displays the IP address of the gateway to which the device sends the traffic that it receives from this entry's IP address.
VID	This field displays the VLAN Identifier that the device adds to Ethernet frames that it sends to this gateway.
MAC	This field displays the subscriber's MAC (Media Access Control) address.
Flush	Click Flush to remove all of the entries from the ARP table.

28.5 2684 Routed Gateway Screen

Use this screen to configure gateway settings.

To open this screen, click **Advanced Application > 2684 Routed Mode > Routed Gateway**.

Figure 98 Advanced Application > 2684 Routed Mode > Routed Gateway

The following table describes the labels in this screen.

Table 63 Advanced Application > 2684 Routed Mode > Routed Gateway

LABEL	DESCRIPTION
Routed PVC	Click Routed PVC to go to the screen where you can configure routed PVC settings (see Section 28.2 on page 190).
Routed Domain	Click Routed Domain to open this screen where you can configure domains for 2684 routed mode traffic (see Section 28.3 on page 192).
RPVC ARP Proxy	Click RPVC ARP Proxy to go to the screen where you can view the Address Resolution Protocol table of IP addresses of CPE devices using 2684 routed mode and configure how long the device is to store them (see Section 28.4 on page 193).
Gateway IP	Enter the IP address of the gateway to which you want to send the traffic that the system receives from this PVC. Enter the IP address in dotted decimal notation.
VID	Specify a VLAN Identifier to add to Ethernet frames that the system routes to this gateway.
Priority	Select the IEEE 802.1p priority (0~7) to add to the traffic that you send to this gateway.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Index	This field displays the number of the gateway entry.
Gateway IP	This field displays the IP address of the gateway.
VID	This field displays the VLAN Identifier that the system adds to Ethernet frames that it sends to this gateway.
Priority	This field displays the IEEE 802.1p priority (0~7) that is added to traffic sent to this gateway.
Delete	Select an entry's Delete check box and click Delete to remove the entry. Clicking Delete saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

PPPoA to PPPoE


This feature is available in STU-C mode only.

This chapter shows you how to set up the IES-708-22A to convert PPPoA frames to PPPoE traffic and vice versa.

29.1 PPPoA to PPPoE Overview

Before migrating to an Ethernet infrastructure, a broadband network might consist of PPPoA connections between the CPE devices and the DSLAM and PPPoE connections from the DSLAM to the Broadband Remote Access Server (BRAS). The following figure shows a network example.

Figure 99 Mixed PPPoA-to-PPPoE Broadband Network Example

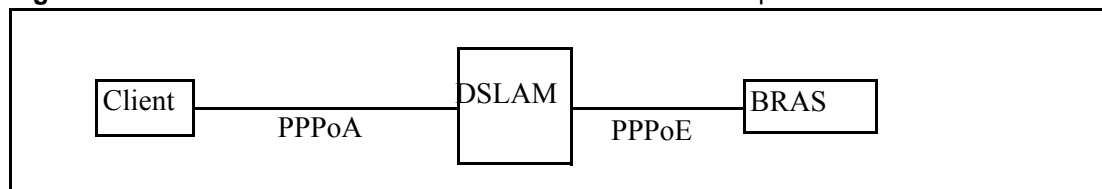

In order to allow communication between the end points (the CPE devices and the BRAS), you need to configure the DSLAM (the IES-708-22A) to translate PPPoA frames to PPPoE packets and vice versa.

When PPPoA packets are received from the CPE, the ATM headers are removed and the IES-708-22A adds PPPoE and Ethernet headers before sending the packets to the BRAS. When the IES-708-22A receives PPPoE packets from the BRAS, PPPoE and Ethernet headers are stripped and necessary PVC information (such as encapsulation type) is added before forwarding to the designated CPE.

29.2 PPPoA to PPPoE Screen

Use this screen to set up PPPoA to PPPoE conversions on each port. This conversion is set up by creating a PAE PVC. See [Chapter 13 on page 103](#) for background information about creating PVCs. To open this screen, click **Advanced Application > PPPoA to PPPoE**.

Figure 100 Advanced Application > PPPoA to PPPoE

The following table describes the labels in this screen.

Table 64 Advanced Application > PPPoA to PPPoE

LABEL	DESCRIPTION
Port	Use this drop-down list box to select a port for which you wish to set up PPPoA to PPPoE conversions. This field is read-only once you click on a port number below.
VPI	Type the Virtual Path Identifier for a channel on this port.
VCI	Type the Virtual Circuit Identifier for a channel on this port.
DS VC Profile	Use the drop-down list box to select a VC profile to use for this channel's downstream traffic shaping.
US VC Profile	<p>Use the drop-down list box to select a VC profile to use for this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.</p> <p>Note: Upstream traffic policing should be used in conjunction with the ATM shaping feature on the subscriber's device. If the subscriber's device does not apply the appropriate ATM shaping, all upstream traffic will be discarded due to upstream traffic policing.</p>
PVID	<p>Type a PVID (Port VLAN ID) to assign to untagged frames received on this channel.</p> <p>Note: Make sure the VID is not already used for multicast VLAN or TLS PVC.</p>
Priority	Use the drop-down list box to select the priority value (0 to 7) to add to incoming frames without a (IEEE 802.1p) priority tag.


Table 64 Advanced Application > PPPoA to PPPoE (continued)

LABEL	DESCRIPTION
AC Name	This field is optional. Specify the hostname of a remote access concentrator if there are two access concentrators (or BRAS) on the network or if you want to allow PAE translation to the specified access concentrator. In this case, the IES-708-22A checks the AC name field in the BRAS's reply PDU. If there is a mismatch, the IES-708-22A drops this PDU. (This is not recorded as an PPPoE AC System Error in the PPPoA to PPPoE Status screen, however.)
Service Name	This field is optional. Specify the name of the service that uses this PVC. This must be a service name that you configure on the remote access concentrator.
Hellotime	Specify the timeout, in seconds, for the PPPoE session. Enter 0 if there is no timeout.
Apply	Click this to add or save channel settings on the selected port. This saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.
Show Port	Select which DSL port(s) for which to display PPPoA to PPPoE conversion settings.
Index	This field displays the number of the PVC. Click a PVC's index number to open the screen where you can look at the current status of this PPPoA-to-PPPoE conversion. (See Section 29.3 on page 200 .) Note: At the time of writing, you cannot edit the VPI and VCI. If you want to change them, add a new PVC with the desired settings. Then, delete any unwanted PVCs.
Port	This field displays the number of the DSL port on which the PVC is configured.
VPI/VCI	This field displays the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port.
PVID	This is the PVID (Port VLAN ID) assigned to untagged frames or priority frames (0 VID) received on this channel.
Priority	This is the priority value (0 to 7) added to incoming frames without a (IEEE 802.1p) priority tag.
Hellotime	This field displays the timeout for the PPPoE session, in seconds.
DS / US VC Profile	This shows which VC profile this channel uses for downstream traffic shaping. The VC profile for upstream policing also displays if the channel is configured to use one.
Access Concentrator Name	This field displays the name of the specified remote access concentrator, if any.
Service Name	This field displays the name of the service that uses this PVC on the remote access concentrator.
Select Delete	Select the check box in the Select column for an entry, and click Delete to remove the entry.
Select All	Click this to select all entries in the table.
Select None	Click this to un-select all entries in the table.

29.3 PPPoA to PPPoE Status Screen

Use this screen to look at the current status of each PPPoA to PPPoE conversion. To open this screen, click **Advanced Application > PPPoA to PPPoE**, and then click an index number.

Figure 101 Advanced Application > PPPoA to PPPoE > Status



PPPoA to PPPoE Status

PPPoA to PPPoE

PVC 1- 0/ 33

Session Status

Session State	Down
Session ID	0
Session Uptime	0secs
AC Name	
Service Name	

Counter Status

	Tx	Rx
PPP LCP Config-Request	-	0
PPP LCP Echo-Request	-	0
PPP LCP Echo-Reply	-	0
PPPoE PADI	0	-
PPPoE PADO	-	0
PPPoE PADR	0	-
PPPoE PADS	-	0
PPPoE PADT	0	0
PPPoE Service Name Error	-	0
PPPoE AC System Error	-	0
PPPoE Generic Error	0	0

The following table describes the labels in this screen.

Table 65 Advanced Application > PPPoA to PPPoE > Status

LABEL	DESCRIPTION
PPPoA to PPPoE	Click PPPoA to PPPoE to open the screen where you can set up PPPoA-to-PPPoE conversions on each port (see Section 29.2 on page 197).
PVC	This field displays the port number, VPI, and VCI of the PVC.
Session Status	
Session State	This field displays whether or not the current session is Up or Down .
Session ID	This field displays the ID of the current session. It displays 0 if there is no current session.
Session Uptime	This field displays how long the current session has been up.
AC Name	This field displays the hostname of the remote access concentrator if there are two access concentrators (or BRAS) on the network or if you want to allow PAE translation to the specified access concentrator.

Table 65 Advanced Application > PPPoA to PPPoE > Status (continued)

LABEL	DESCRIPTION
Service Name	This field specifies the name of the service that uses this PVC.
Counter Status	
Tx/Rx	The values in these columns are for packets transmitted (tx) or received (rx) by the IES-708-22A.
PPP LCP Config-Request	This field displays the number of config-request PDUs received by the IES-708-22A from the CPE (client) device.
PPP LCP Echo-Request	This field displays the number of echo-request PDUs received by the IES-708-22A from the CPE (client) device.
PPP LCP Echo-Reply	This field displays the number of echo-reply PDUs received by the IES-708-22A from the CPE (client) device.
PPPoE PADI	This field displays the number of padi PDUs sent by the IES-708-22A to the BRAS.
PPPoE PADO	This field displays the number of pado PDUs sent by the BRAS to the IES-708-22A.
PPPoE PADR	This field displays the number of padr PDUs sent by the IES-708-22A to the BRAS.
PPPoE PADS	This field displays the number of pads PDUs sent by the BRAS to the IES-708-22A.
PPPoE PADT	This field displays the number of padt PDUs sent and received by the IES-708-22A.
PPPoE Service Name Error	This field displays the number of service name errors; for example, the IES-708-22A's specified service is different than the BRAS's setting.
PPPoE AC System Error	This field displays the number of times the access concentrator experienced an error while performing the Host request; for example, when resources are exhausted in the access concentrator. This value does not include the number of times the IES-708-22A checks the AC name field in the BRAS's reply PDU and finds a mismatch, however.
PPPoE Generic Error	This field displays the number of other types of errors that occur in the PPPoE session between the IES-708-22A and the BRAS.

This feature is available in STU-C mode only.

This chapter shows you how to set up DSCP on each port and how to convert DSCP values to IEEE 802.1p values.

30.1 DSCP Overview

DiffServ Code Point (DSCP) is a field used for packet classification on DiffServ networks. The higher the value, the higher the priority. Lower-priority packets may be dropped if the total traffic exceeds the capacity of the network.

30.2 DSCP Setup Screen

Use this screen to activate or deactivate DSCP on each port. To open this screen, click **Advanced Application > DSCP**.

Figure 102 Advanced Application > DSCP

Port	Active	Select
1	-	<input type="checkbox"/>
2	-	<input type="checkbox"/>
3	-	<input type="checkbox"/>
4	-	<input type="checkbox"/>
5	-	<input type="checkbox"/>
<hr/>		
ENET1	-	<input type="checkbox"/>
ENET2	-	<input type="checkbox"/>

Active Inactive Select All None

The following table describes the labels in this screen.

Table 66 Advanced Application > DSCP

LABEL	DESCRIPTION
DSCP Map	Click DSCP Map to open the screen where you can set up the mapping between source DSCP priority and IEEE 802.1p priority (see Section 30.3 on page 204).
Port	This field displays each port number.
Active	This field displays whether DSCP is active ("V") or inactive ("-") on this port.

Table 66 Advanced Application > DSCP (continued)

LABEL	DESCRIPTION
Select	Select this, and click Active or Inactive to enable or disable the DSCP on this port.
Active	Click this to enable DSCP on the selected ports.
Inactive	Click this to disable DSCP on the selected ports.
All	Click this to select all entries in the table.
None	Click this to un-select all entries in the table.

30.3 DSCP Map Screen

Use this screen to convert DSCP priority to IEEE 802.1p priority. To open this screen, click **Advanced Application > DSCP > DSCP Map**.

Figure 103 Advanced Application > DSCP > DSCP Map

Source DSCP	802.1P Priority
0	<input type="text" value="0"/> (0-7)
1	<input type="text" value="0"/> (0-7)
2	<input type="text" value="0"/> (0-7)
3	<input type="text" value="0"/> (0-7)
61	<input type="text" value="7"/> (0-7)
62	<input type="text" value="7"/> (0-7)
63	<input type="text" value="7"/> (0-7)

Apply

The following table describes the labels in this screen.

Table 67 Advanced Application > DSCP > DSCP Map

LABEL	DESCRIPTION
DSCP Map	Click DSCP Setup to open the screen where you can activate or deactivate DSCP on each port (see Section 30.2 on page 203).
Source DSCP	This field displays each DSCP value.
802.1P Priority	Enter the IEEE 802.1p priority to which you would like to map this DSCP value.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.

TLS PVC

This feature is available in STU-C mode only.

This chapter shows you how to set up Transparent LAN Service (VLAN stacking, Q-in-Q) on each port.

31.1 Transparent LAN Service (TLS) Overview

Transparent LAN Service (also known as VLAN stacking or Q-in-Q) allows a service provider to distinguish multiple customers VLANs, even those with the same (customer-assigned) VLAN ID, within its network.


Use TLS to add an outer VLAN tag to the inner IEEE 802.1Q tagged frames that enter the network. By tagging the tagged frames (“double-tagged” frames), the service provider can manage up to 4,094 VLAN groups with each group containing up to 4,094 customer VLANs. This allows a service provider to provide different services, based on specific VLANs, for many different customers.

A service provider’s customers may require a range of VLANs to handle multiple applications. A service provider’s customers can assign their own inner VLAN tags to traffic. The service provider can assign an outer VLAN tag for each customer. Therefore, there is no VLAN tag overlap among customers, so traffic from different customers is kept separate.

Before the IES-708-22A sends the frames from the customers, the VLAN ID is added to the frames. When packets intended for specific customers are received on the IES-708-22A, the outer VLAN tag is removed before the traffic is sent.

31.1.1 TLS Network Example

In the following example figure, both A and B are Service Provider’s Network (SPN) customers with VPN tunnels between their head offices and branch offices, respectively. Both have an identical VLAN tag for their VLAN group. The service provider can separate these two VLANs within its network by adding tag 37 to distinguish customer A and tag 48 to distinguish customer B at edge device 1 and then stripping those tags at edge device 2 as the data frames leave the network.

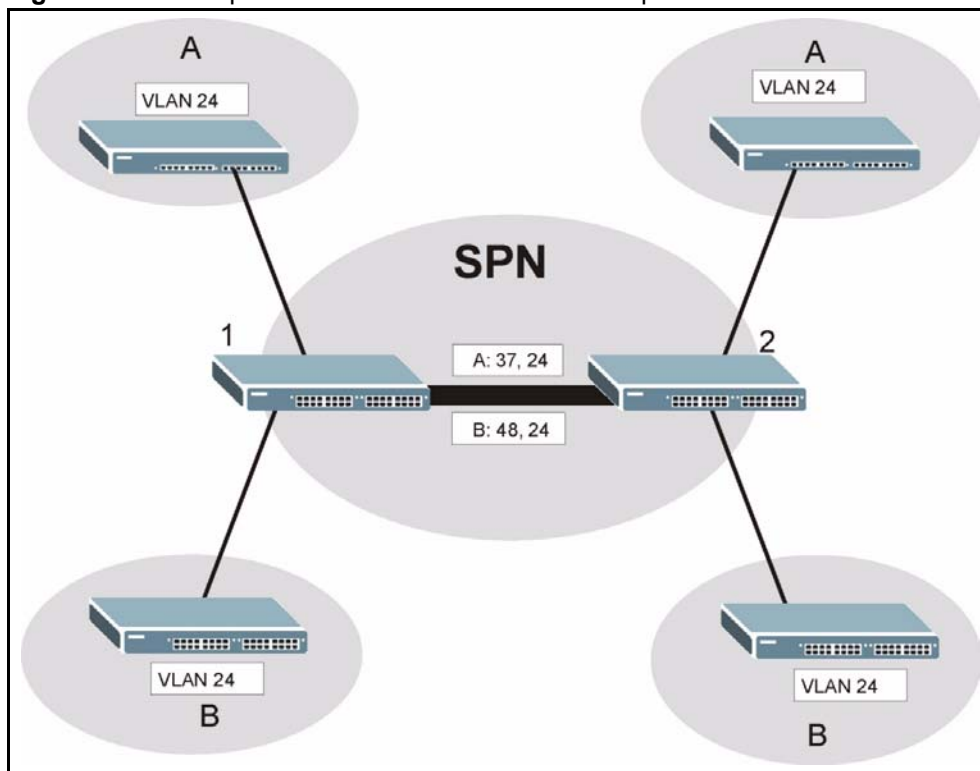Figure 104 Transparent LAN Service Network Example

31.2 TLS PVC Screen

Use this screen to set up Transparent LAN Services on each port. This is set up by creating a TLS PVC. See [Chapter 13 on page 103](#) for background information about creating PVCs. To open this screen, click **Advanced Application > TLS PVC**.



You can NOT configure PPPoA-to-PPPoE and TLS settings on the same PVC.

Figure 105 Advanced Application > TLS PVC

Port: 1

VPI: 0 VCI: 0

DS VC Profile: DEFVAL

US VC Profile: -

VID: 1 (1~4094) Priority: 0

Apply Cancel

Show Port: All

Index	Port	VPI/VCI	VID	Priority	DS/US VC Profile	Select
Delete Select All None						

The following table describes the labels in this screen.

Table 68 Advanced Application > TLS PVC

LABEL	DESCRIPTION
Port	Use this drop-down list box to select a port for which you wish to set up a TLS PVC. This field is read-only once you click on a port number below.
VPI	Type the Virtual Path Identifier for a channel on this port.
VCI	Type the Virtual Circuit Identifier for a channel on this port.
DS VC Profile	Use the drop-down list box to select a VC profile to use for this channel's downstream traffic shaping.
US VC Profile	<p>Use the drop-down list box to select a VC profile to use for this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.</p> <p>Note: Upstream traffic policing should be used in conjunction with the ATM shaping feature on the subscriber's device. If the subscriber's device does not apply the appropriate ATM shaping, all upstream traffic will be discarded due to upstream traffic policing.</p>
VID	<p>Type a VLAN ID to assign to frames received on this channel.</p> <p>Note: Make sure the VID is not already used for PPPoA-to-PPPoE conversions.</p>
Priority	Use the drop-down list box to select the priority value (0 to 7) to add to incoming frames without a (IEEE 802.1p) priority tag.
Apply	<p>Click this to add or save channel settings on the selected port. This saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.</p>
Cancel	Click Cancel to start configuring the screen again.

Table 68 Advanced Application > TLS PVC (continued)

LABEL	DESCRIPTION
Show Port	Select which DSL port(s) for which to display TLS PVC settings.
Index	<p>This field displays the number of the PVC. Click a PVC's index number to use the top of the screen to edit the PVC.</p> <p>Note: At the time of writing, you cannot edit the VPI and VCI. If you want to change them, add a new PVC with the desired settings. Then you can delete any unwanted PVCs.</p>
Port	This field displays the number of the DSL port on which the PVC is configured.
VPI/VCI	This field displays the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port.
VID	This is the VLAN ID assigned to frames received on this channel.
Priority	This is the priority value (0 to 7) added to incoming frames without a (IEEE 802.1p) priority tag.
DS/US VC Profile	This shows which VC profile this channel uses for downstream traffic shaping. The VC profile for upstream policing also displays if the channel is configured to use one.
Select Delete	Select the check box in the Select column for an entry, and click Delete to remove the entry.
Select All	Click this to select all entries in the table.
Select None	Click this to un-select all entries in the table.

This feature is available in STU-C mode only.

This chapter shows you how to set up ACL profiles on each port.

32.1 Access Control Logic (ACL) Overview

An ACL (Access Control Logic) profile allows the IES-708-22A to classify and perform actions on the upstream traffic. Each ACL profile consists of a rule and an action, and you assign ACL profiles to PVCs.

32.1.1 ACL Profile Rules

Each ACL profile uses one of 14 rules to classify upstream traffic. These rules are listed below by rule number.

- 1** etype <etype> vlan <vid>
- 2** etype <etype> smac <mac>
- 3** etype <etype> dmac <mac>
- 4** vlan <vid> smac <mac>
- 5** vlan <vid> dmac <mac>
- 6** smac <mac> dmac <mac>
- 7** vlan <vid> priority <priority>
- 8** etype <etype>
- 9** vlan <vid>
- 10** smac <mac>
- 11** dmac <mac>
- 12** priority <priority>
- 13** protocol <protocol>
- 14** {srcip <ip>/<mask> {dstip <ip>/<mask> {tos <stos> <etos> {srcport <sport> <eport> {dstport <sport> <eport>}}}}}

The input values for these values have the following ranges.

- <vid>: 1~4094
- <priority>: 1~7
- <etype>: 0~65535
- <protocol>: tcp|udp|ospf|igmp|ip|gre|icmp|<ptype>
- <ptype>: 0~255

- <mask>: 0~32
- <tos>: 0~255
- <port>: 0~65535

If you apply multiple profiles to a PVC, the IES-708-22A checks the profiles by rule number. The lower the rule number, the higher the priority the rule (and profile) has. For example, there are two ACL profiles assigned to a PVC. Profile1 is for VLAN ID 100 (rule number 9) traffic, and Profile2 is for IEEE 802.1p priority 0 traffic (rule number 12). The IES-708-22A checks Profile1 first. If the traffic is VLAN ID 100, the IES-708-22A follows the action in Profile1 and does not check Profile2. You cannot assign profiles that have the same rule numbers to the same PVC.

32.1.2 ACL Profile Actions

The IES-708-22A can perform the following actions after it classifies upstream traffic.

- rate <rate>: change the rate to the specified value (1~65535 kbps)
- rvlan <rvlan>: change the VLAN ID to the specified value (1~4094)
- rpri <rpri>: change the IEEE 802.1p priority to the specified value (0~7)
- deny: do not forward the packet

The IES-708-22A can apply more than one action to a packet, unless you select deny.

If you select the rvlan action, the IES-708-22A replaces the VLAN ID before it compares the VLAN ID of the packet to the VID of the PVC. As a result, it is suggested that you replace VLAN ID on super channels, not normal PVC, since super channels accept any tagged traffic. If you replace the VLAN ID for a normal PVC, the IES-708-22A drops the traffic because the new VLAN ID does not match the VID of the PVC. This is illustrated in the following scenario.

There is a normal PVC, and its PVID is 900. You create an ACL rule to replace the VLAN ID with 901. Initially, the traffic for the PVC belongs to VLAN 900. Then, the IES-708-22A checks the ACL rule and changes the traffic to VLAN 901. When the IES-708-22A finally compares the VLAN ID of the traffic (901) to the VID of the PVC (900), the IES-708-22A drops the packets because they do not match.

32.2 ACL Setup Screen

Use this screen to assign ACL profiles to each PVC. To open this screen, click **Advanced Application > ACL**.

Figure 106 Advanced Application > ACL

The following table describes the labels in this screen.

Table 69 Advanced Application > ACL

LABEL	DESCRIPTION
ACL Profile Setup	Click ACL Profile Setup to open the screen where you can set up ACL profiles (see Section 32.3 on page 212).
ACL Profile Map	Click ACL Profile Map to open the screen where you can look at which ACL profiles are assigned to which PVCs (see Section 32.4 on page 213).
Port	Use this drop-down list box to select a port to which you wish to assign an ACL profile. This field is read-only once you click on a port number below.
VPI	Type the Virtual Path Identifier for a channel on this port.
VCI	Type the Virtual Circuit Identifier for a channel on this port.
ACL Profile	Use the drop-down list box to select the ACL profile you want to assign to this PVC.
Apply	Click this to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.
Show Port	Select which DSL port(s) for which to display ACL profile settings.
Index	This field displays the number of the PVC. Click a PVC's index number to use the top of the screen to edit the PVC. Note: At the time of writing, you cannot edit the VPI and VCI. If you want to change them, add a new PVC with the desired settings. Then you can delete any unwanted PVCs.
Port	This field displays the number of the DSL port on which the PVC is configured.
VPI/VCI	This field displays the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port.
ACL Profile	This field shows the ACL profile assigned to this PVC.
Select Delete	Select the check box in the Select column for an entry, and click Delete to remove the entry.
Select All	Click this to select all entries in the table.
Select None	Click this to un-select all entries in the table.

32.3 ACL Profile Setup Screen

Use this screen to set up ACL profiles. To open this screen, click **Advanced Application > ACL > ACL Profile Setup**.

Figure 107 Advanced Application > ACL > ACL Profile Setup

ACL Profile Setup [ACL Setup](#) [ACL Profile Map](#)

Profile Name

Rule

☐ 1. ethernet type (0~65535) vlan (1~4094)
☐ 2. ethernet type (0~65535) source mac
☐ 3. ethernet type (0~65535) dest mac
☐ 4. vlan (1~4094) source mac
☐ 5. vlan (1~4094) dest mac
☐ 6. source mac dest mac
☐ 7. vlan (1~4094) priority
☐ 8. ethernet type (0~65535)
☐ 9. vlan (1~4094)
☐ 10. source mac
☐ 11. dest mac
☐ 12. priority
☐ 13. protocol or protocol type (0~255)
☐ 14.

☐ source ip mask
☐ dest ip mask
☐ tos: start tos (0~255) end tos (0~255)
☐ source port: start port (0~65535) end port (0~65535)
☐ dest port: start port (0~65535) end port (0~65535)

Action

☐ rate (1~65535)Kbps
☐ replaced vlan (1~4094)
☐ replaced priority
☐ deny

Apply **Cancel**

ACL Profile List

Index	ACL Profile	Select
Delete Select All None 		

The following table describes the labels in this screen.

Table 70 Advanced Application > ACL > ACL Profile Setup

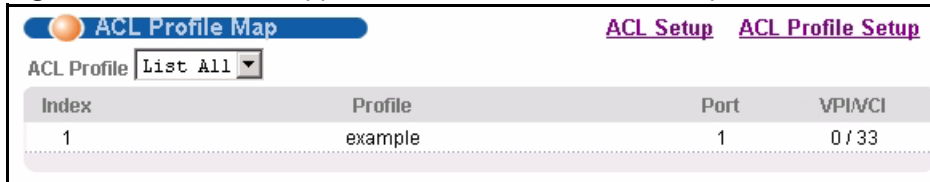
LABEL	DESCRIPTION
ACL Setup	Click ACL Setup to open the screen where you can assign ACL profiles to PVCs (see Section 32.2 on page 210).
ACL Profile Map	Click ACL Profile Map to open the screen where you can look at which ACL profiles are assigned to which PVCs (see Section 32.4 on page 213).

Table 70 Advanced Application > ACL > ACL Profile Setup (continued)

LABEL	DESCRIPTION
Profile Name	Enter a descriptive name for the ACL profile. The name can be 1-31 printable English keyboard characters long. Spaces are not allowed.
Rule	<p>Select which type of rule to use.</p> <p>Note: The lower the number (1-14), the higher the priority the rule has.</p> <p>Provide additional information required for the selected rule. Additional rules consist of one or more of the following criteria.</p>
ethernet type	Enter the 16-bit EtherType value between 0 and 65535.
vlan	Enter a VLAN ID between 1 and 4094.
source mac	Enter the source MAC address.
dest mac	Enter the destination MAC address.
priority	Select the IEEE 802.1p priority.
protocol	Select the IP protocol used.
protocol type	Enter the IP protocol number (between 0 and 255) used.
source ip	Enter the source IP address and subnet mask in dotted decimal notation.
dest ip	Enter the source IP address and subnet mask in dotted decimal notation.
tos	Enter the start and end Type of Service between 0 and 255.
source port	Enter the source port or range of source ports.
dest port	Enter the destination port or range of destination ports.
Action	Select which action(s) the IES-708-22A should follow when the criteria are satisfied.
rate	Enter the maximum bandwidth this traffic is allowed to have.
replaced vlan	Enter the VLAN ID that this traffic should use.
replaced priority	Select the IEEE 802.1p priority that this traffic should have.
deny	Select this if you want the IES-708-22A to reject this kind of traffic.
ACL Profile List	
Index	This field displays a sequential value. The sequence in this table is not important. Click this to edit the associated ACL profile in the section above.
ACL Profile	This field displays the name of this ACL profile.
Select Delete	Select the check box in the Select column for an entry, and click Delete to remove the entry.
Select All	Click this to select all entries in the table.
Select None	Click this to un-select all entries in the table.

32.4 ACL Profile Map Screen

Use this screen to look at all the ACL profiles and the PVCs to which each one is assigned. To open this screen, click **Advanced Application > ACL > ACL Profile Map**.

Figure 108 Advanced Application > ACL > ACL Profile Map


Index	Profile	Port	VPI/VC
1	example	1	0 / 33

The following table describes the labels in this screen.

Table 71 Advanced Application > ACL > ACL Profile Map

LABEL	DESCRIPTION
ACL Setup	Click ACL Setup to open the screen where you can assign ACL profiles to PVCs (see Section 32.2 on page 210).
ACL Profile Setup	Click ACL Profile Setup to open the screen where you can set up ACL profiles (see Section 32.3 on page 212).
ACL Profile	Select the ACL profile(s) for which you want to see which PVCs are assigned to it.
Index	This field displays the number of an entry.
Profile	This field shows the ACL profile assigned to this PVC.
Port	This field displays the DSL port number on which the PVC is configured.
VPI/VC	This field displays the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI). The VPI and VCI identify a channel on this port.

Downstream Broadcast

This feature is available in STU-C mode only.

This chapter shows you how to allow or block downstream broadcast traffic.

33.1 Downstream Broadcast

Downstream broadcast allows you to block downstream broadcast packets from being sent to specified VLANs on specified ports.

33.2 Downstream Broadcast Screen

To open this screen, click **Advanced Application > Downstream Broadcast**.

Figure 109 Advanced Application > Downstream Broadcast

The following table describes the labels in this screen.

Table 72 Advanced Application > Downstream Broadcast

LABEL	DESCRIPTION
Port	Use this drop-down list box to select a port for which you wish to configure settings.
VLAN	Specify the number of a VLAN (on this entry's port) to which you do not want to send broadcast traffic. The VLAN must already be configured in the system.
Add	Click Add to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Blocking Table	

Table 72 Advanced Application > Downstream Broadcast (continued)

LABEL	DESCRIPTION
Port	Use this drop-down list box to select a port for which you wish to display settings.
Index	This field displays the number of the downstream broadcast blocking entry.
Port	This is the number of a DSL port through which you will block downstream broadcast traffic (on a specific VLAN).
VLAN	This field displays the number of a VLAN to which you do not want to send broadcast traffic (on the entry's port).
Select	Select an entry's Select check box and click Delete to remove the entry. Clicking Delete saves your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Select All	Click All to mark all of the check boxes.
Select None	Click None to un-mark all of the check boxes.

SysLog

This chapter explains how to set the syslog parameters.

34.1 Syslog

The syslog feature sends logs to an external syslog server.

34.2 SysLog Screen

To open this screen, click **Advanced Application > SysLog**.

Figure 110 Advanced Application > SysLog

The following table describes the labels in this screen.

Table 73 Advanced Application > SysLog

LABEL	DESCRIPTION
Enable Unix Syslog	Select this check box to activate syslog (system logging) and then configure the syslog parameters described in the following fields.
Syslog Server IP	Enter the IP address of the syslog server. (The log facility is specified in Alarm > Alarm Event Setup . See Section 37.4 on page 231 .)
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.

Access Control

This chapter describes how to configure access control.

35.1 Access Control Screen

Use this screen to configure SNMP and enable/disable remote service access.

To open this screen, click **Advanced Application > Access Control**.

Figure 111 Advanced Application > Access Control



35.2 Access Control Overview

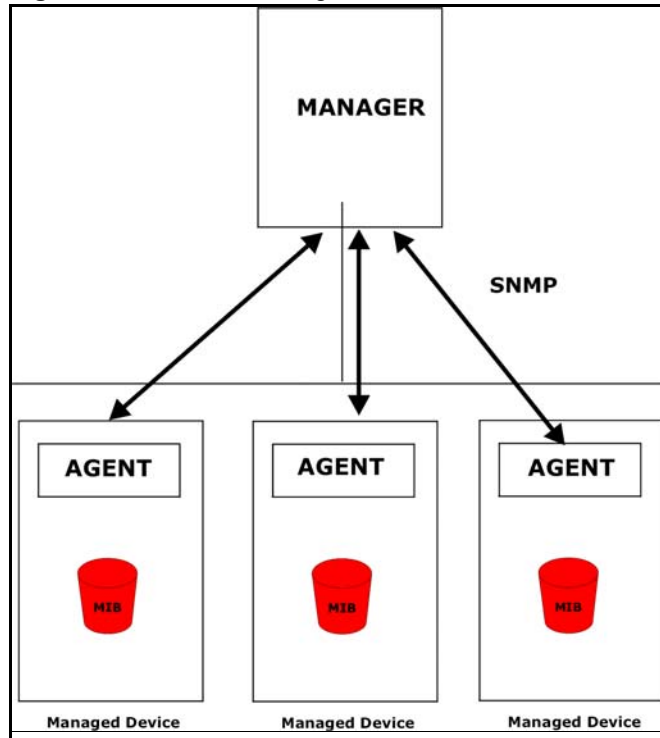
This table identifies the number of sessions that can be established using each service.

Table 74 Access Control Summary

	CONSOLE PORT	TELNET	FTP	WEB	SNMP
Number of sessions allowed	1	5	1	No limit	No limit

35.3 SNMP

Simple Network Management Protocol is a protocol used for exchanging management information between network devices. SNMP is a member of TCP/IP protocol suite. A manager station can manage and monitor the IES-708-22A through the network via SNMP version one (SNMPv1) and/or SNMP version 2c. The next figure illustrates an SNMP management operation. SNMP is only available if TCP/IP is configured.

Figure 112 SNMP Management Model

An SNMP managed network consists of two main components: agents and a manager.

An agent is a management software module that resides in a managed device (the IES-708-22A). An agent translates the local management information from the managed device into a form compatible with SNMP. The manager is the console through which network administrators perform network management functions. It executes applications that control and monitor managed devices.

The managed devices contain object variables/managed objects that define each piece of information to be collected about a device. Examples of variables include such as number of packets received, node port status etc. A Management Information Base (MIB) is a collection of managed objects. SNMP allows a manager and agents to communicate for the purpose of accessing these objects.

SNMP itself is a simple request/response protocol based on the manager/agent model. The manager issues a request and the agent returns responses using the following protocol operations:

Table 75 SNMP Commands

COMMAND	DESCRIPTION
Get	Allows the manager to retrieve an object variable from the agent.
GetNext	Allows the manager to retrieve the next object variable from a table or list within an agent. In SNMPv1, when a manager wants to retrieve all elements of a table from an agent, it initiates a Get operation, followed by a series of GetNext operations.
Set	Allows the manager to set values for object variables within an agent.
Trap	Used by the agent to inform the manager of some events.

35.3.1 Supported MIBs

MIBs let administrators collect statistics and monitor status and performance. See [Chapter 57 on page 387](#) for the list of MIBs the IES-708-22A supports.

35.3.2 SNMP Traps

The IES-708-22A can send the following SNMP traps to an SNMP manager when an event occurs. ATUC refers to the downstream channel (for traffic going from the IES-708-22A to the subscriber). ATUR refers to the upstream channel (for traffic coming from the subscriber to the IES-708-22A).

Table 76 SNMP Traps

TRAP NAME	DESCRIPTION	OID
coldStart	System Cold Start	1.3.6.1.6.3.1.1.5.1
warmStart	System Warm Start	1.3.6.1.6.3.1.1.5.2
linkDown	Both Ethernet and DSL link Down	1.3.6.1.6.3.1.1.5.3
linkUp	Both Ethernet and DSL link UP	1.3.6.1.6.3.1.1.5.4
hdl2ShdslLoopAttenCrossing	This notification indicates that the loop attenuation threshold (as per the hdl2ShdslEndpointThreshLoopAttenuation value) has been reached/exceeded for the HDLSL2/SHDSL segment endpoint.	1.3.6.1.2.1.10.48.0.1
hdl2ShdslSNRMarginCrossing	This notification indicates that the SNR margin threshold (as per the hdl2ShdslEndpointThreshSNRMargin value) has been reached/exceeded for the HDLSL2/SHDSL segment endpoint.	1.3.6.1.2.1.10.48.0.2
hdl2ShdslPerfESThresh	This notification indicates that the errored seconds threshold (as per the hdl2ShdslEndpointThreshES value) has been reached/ exceeded for the HDLSL2/SHDSL segment endpoint.	1.3.6.1.2.1.10.48.0.3
hdl2ShdslPerfSESThresh	This notification indicates that the severely errored seconds threshold (as per the hdl2ShdslEndpointThreshSES value) has been reached/exceeded for the HDLSL2/SHDSL Segment Endpoint.	1.3.6.1.2.1.10.48.0.4
hdl2ShdslPerfCRCAnomaliesThresh	This notification indicates that the CRC anomalies threshold (as per the hdl2ShdslEndpointThreshCRCAnomalies value) has been reached/exceeded for the HDLSL2/SHDSL Segment Endpoint.	1.3.6.1.2.1.10.48.0.5
hdl2ShdslPerfLOSWSThresh	This notification indicates that the LOSW seconds threshold (as per the hdl2ShdslEndpointThreshLOSWS value) has been reached/exceeded for the HDLSL2/SHDSL segment endpoint.	1.3.6.1.2.1.10.48.0.6
hdl2ShdslPerfUASThresh	This notification indicates that the unavailable seconds threshold (as per the hdl2ShdslEndpointThreshUAS value) has been reached/exceeded for the HDLSL2/SHDSL segment endpoint.	1.3.6.1.2.1.10.48.0.7

Table 76 SNMP Traps (continued)

TRAP NAME	DESCRIPTION	OID
reboot	Send a message to the manager that the system is going to reboot. The variable is the reason why the system reboots.	STU-C: 1.3.6.1.4.1.890.1.5.5.7.1 STU-R: 1.3.6.1.4.1.890.1.5.5.8.1
overheat	Send a message to the manager that the system is overheated. The variable in the binding list is the current temperature in Celsius of the system.	STU-C: 1.3.6.1.4.1.890.1.5.5.7.3 STU-R: 1.3.6.1.4.1.890.1.5.5.8.3
overheatOver	Send a message to the manager that the overheated condition is over. The variable in the binding list is the current temperature in Celsius of the system.	STU-C: 1.3.6.1.4.1.890.1.5.5.7.4 STU-R: 1.3.6.1.4.1.890.1.5.5.8.4
voltageOutOfRange	Send a message to the manager that the voltage of the system is out of range. The variable in the binding list is the current voltage in volt of the system.	STU-C: 1.3.6.1.4.1.890.1.5.5.7.8 STU-R: 1.3.6.1.4.1.890.1.5.5.8.8
voltageNormal	Send a message to the manager that the low-voltage condition is over. The variable in the binding list is the current voltage in volt of the system.	STU-C: 1.3.6.1.4.1.890.1.5.5.7.9 STU-R: 1.3.6.1.4.1.890.1.5.5.8.9
thermalSensorFailure	The trap signifies that the thermal sensor failed.	STU-C: 1.3.6.1.4.1.890.1.5.5.7.22 STU-R: 1.3.6.1.4.1.890.1.5.5.8.22
sysMacAntiSpoofing	MAC Anti-spoofing.	STU-C: 1.3.6.1.4.1.890.1.5.5.7.12.1.1 1 STU-R: 1.3.6.1.4.1.890.1.5.5.8.12.1.1 1

Table 76 SNMP Traps (continued)

TRAP NAME	DESCRIPTION	OID
alarmRisingThreshold	<p>A threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single event will be generated.</p> <p>A single event will also be generated if the first sample after this entry becomes valid is greater than or equal to this threshold and the associated alarmStartupAlarm is equal to risingAlarm(1) or risingOrFallingAlarm(3).</p> <p>After a rising event is generated, another such event will not be generated until the sampled value falls below this threshold and reaches the alarmFallingThreshold.</p> <p>This object may not be modified if the associated alarmStatus object is equal to valid(1).</p>	1.3.6.1.2.1.16.0.1
alarmFallingThreshold	<p>A threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single event will be generated.</p> <p>A single event will also be generated if the first sample after this entry becomes valid is less than or equal to this threshold and the associated alarmStartupAlarm is equal to fallingAlarm(2) or risingOrFallingAlarm(3).</p> <p>After a falling event is generated, another such event will not be generated until the sampled value rises above this threshold and reaches the alarmRisingThreshold.</p> <p>This object may not be modified if the associated alarmStatus object is equal to valid(1).</p>	1.3.6.1.2.1.16.0.2

35.4 SNMP Screen

To open this screen, click **Advanced Application > Access Control > SNMP**.

Figure 113 Advanced Application > Access Control > SNMP

SNMP

Up

Get Community: public

Set Community: public

Trap Community: public

Trap Destination 1: 0.0.0.0 Port 162 (1~65535)

Trap Destination 2: 0.0.0.0 Port 162 (1~65535)

Trap Destination 3: 0.0.0.0 Port 162 (1~65535)

Trap Destination 4: 0.0.0.0 Port 162 (1~65535)

Trusted Host(0.0.0.0 means trust all): 0.0.0.0

Apply Cancel

The following table describes the labels in this screen.

Table 77 Advanced Application > Access Control > SNMP

LABEL	DESCRIPTION
Up	Click U to go back to the previous screen.
Get Community	Enter the get community, which is the password for the incoming Get- and GetNext- requests from the management station.
Set Community	Enter the set community, which is the password for incoming Set- requests from the management station.
Trap Community	Enter the trap community, which is the password sent with each trap to the SNMP manager.
Trap Destination 1~4	Enter the IP address of a station to send your SNMP traps to.
Port	Enter the port number upon which the station listens for SNMP traps.
Trusted Host	A "trusted host" is a computer that is allowed to use SNMP with the IES-708-22A. 0.0.0.0 allows any computer to use SNMP to access the IES-708-22A. Specify an IP address to allow only the computer with that IP address to use SNMP to access the IES-708-22A.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.

35.5 Service Access Control Screen

To open this screen, click **Advanced Application > Access Control > Service Access Control**.

Figure 114 Advanced Application > Access Control > Service Access Control

Services	Active	Server Port
Telnet	<input checked="" type="checkbox"/>	23 (1-65535)
FTP	<input checked="" type="checkbox"/>	21 (1-65535)
WEB	<input checked="" type="checkbox"/>	80 (1-65535)
ICMP	<input checked="" type="checkbox"/>	

Apply Cancel

The following table describes the labels in this screen.

Table 78 Advanced Application > Access Control > Service Access Control

LABEL	DESCRIPTION
Up	Click Up to go back to the previous screen.
Services	Services you may use to access the IES-708-22A are listed here.
Active	Select the Active check boxes for the corresponding services that you want to allow to access the IES-708-22A.

Table 78 Advanced Application > Access Control > Service Access Control (continued)

LABEL	DESCRIPTION
Server Port	For Telnet, FTP or web services, you may change the default service port by typing the new port number in the Server Port field. If you change the default port number then you will have to let people (who wish to use the service) know the new port number for that service.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.

35.6 Remote Management Screen

Use this screen to configure the IP address ranges of trusted computers that may manage the IES-708-22A.

To open this screen, click **Advanced Application > Access Control > Secured Client**.

Figure 115 Advanced Application > Access Control > Secured Client

Index	Enable	Start IP Address	End IP Address	Telnet	FTP	Web	ICMP	SNMP
1	<input checked="" type="checkbox"/>	0.0.0.0	223.255.255.255	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	0.0.0.0	0.0.0.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	0.0.0.0	0.0.0.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	0.0.0.0	0.0.0.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	0.0.0.0	0.0.0.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	0.0.0.0	0.0.0.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	0.0.0.0	0.0.0.0	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	0.0.0.0	0.0.0.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Apply Cancel

The following table describes the labels in this screen.

Table 79 Advanced Application > Access Control > Secured Client

LABEL	DESCRIPTION
Return	Click Return to go back to the previous screen.
Index	This is the client set index number. A "client set" is a group of one or more "trusted computers" from which an administrator may use a service to manage the IES-708-22A.
Enable	Select this check box to activate this secured client set. Clear the check box if you wish to temporarily disable the set without deleting it.
Start IP Address End IP Address	Configure the IP address range of trusted computers from which you can manage the IES-708-22A. The IES-708-22A checks if the client IP address of a computer requesting a service or protocol matches the range set here. The IES-708-22A immediately disconnects the session if it does not match.

Table 79 Advanced Application > Access Control > Secured Client (continued)

LABEL	DESCRIPTION
Telnet/FTP/Web/ ICMP/SNMP	Select services that may be used for managing the IES-708-22A from the specified trusted computers.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to begin configuring this screen afresh.

Static Routing

This chapter shows you how to configure the static routing function.

Static routes tell the IES-708-22A how to forward the IES-708-22A's own IP traffic when you configure the TCP/IP parameters manually. This is generally useful for allowing management of the device from a device with an IP address on a different subnet from that of the device's IP address (remote management).

To open this screen, click **Routing Protocol > Static Routing**.

Figure 116 Routing Protocol > Static Routing

Static Routing

Name

Destination IP Address

IP Subnet Mask

Gateway IP Address

Metric (1-15)

Page 1 of 1

Index	Name	Destination Address	Subnet Mask	Gateway Address	Metric	Delete
-		Default	-	192.168.1.254	1	-
1		192.168.1.0	255.255.255.0	192.168.1.1	1	<input type="checkbox"/>

The following table describes the labels in this screen.

Table 80 Routing Protocol > Static Routing

LABEL	DESCRIPTION
	Use this section to create a new static route.
Name	Type a name to identify this static route. Use up to 31 English keyboard characters. Spaces and tabs are not allowed.
Destination IP Address	This parameter specifies the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID.
IP Subnet Mask	Enter the subnet mask for this destination.
Gateway IP Address	Enter the IP address of the gateway. The gateway is an immediate neighbor of your device that will forward the packet to the destination. The gateway must be a router on the same segment as your device.

Table 80 Routing Protocol > Static Routing (continued)

LABEL	DESCRIPTION
Metric	The metric represents the “cost” of transmission for routing purposes. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not be precise, but it must be between 1 and 15. In practice, 2 or 3 is usually a good number.
Add	Click Add to save the new rule to the IES-708-22A’s volatile memory. It then displays in the summary table at the bottom of the screen. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to reset the fields to your previous configuration.
	Use this section to look at a summary of all static routes in the IES-708-22A.
Previous Page	Click this to display the preceding page of static route entries.
Next Page	Click this to display the following page of static route entries.
Index	This field displays the index number of the route.
Name	This field displays the name of this static route.
Destination Address	This field displays the IP network address of the final destination.
Subnet Mask	This field displays the subnet mask for this destination.
Gateway Address	This field displays the IP address of the gateway. The gateway is an immediate neighbor of your device that will forward the packet to the destination.
Metric	This field displays the cost of transmission for routing purposes.
Delete	Select the rule(s) that you want to remove in the Delete column, and then click the Delete button.
Cancel	Click Cancel to clear the selected check boxes in the Delete column.

Alarm

This chapter shows you how to display the alarms, sets the severity level of an alarm(s) and where the system is to send the alarm(s) and set port alarm severity level threshold settings.

37.1 Alarm

The IES-708-22A monitors for equipment, DSL and system alarms and can report them via SNMP or syslog. You can specify the severity level of an alarm(s) and where the system is to send the alarm(s). You can also set the alarm severity threshold for recording alarms on an individual port(s). The system reports an alarm on a port if the alarm has a severity equal to or higher than the port's threshold.

37.2 Alarm Status Screen

This screen displays the alarms that are currently in the system.

To open this screen, click **Alarm > Alarm Status**.

Figure 117 Alarm > Alarm Status

No	Alarm	Condition Source	Severity	Timestamp
1	eqpt	+vol_err eqpt 3	critical	01/01 00:00:07

The following table describes the labels in this screen.

Table 81 Alarm > Alarm Status

LABEL	DESCRIPTION
Alarm Event Setup	Click Alarm Event Setup to go to a screen where you can configure the severity level of an alarm(s) and where the system is to send the alarm(s). See Section 37.4 on page 231 .
Alarm Port Setup	Click Alarm Port Setup to go to a screen where you can configure the alarm severity threshold for recording alarms on an individual port(s). See Section 37.5 on page 233 .
Alarm Type	Select which type of alarms to display by Severity , or select All to look at all the alarms.

Table 81 Alarm > Alarm Status (continued)

LABEL	DESCRIPTION
Refresh	Click this button to update this screen.
Clear	Click this button to erase the clearable alarm entries.
No	This field displays the index number of the alarm entry in the system.
Alarm	This field displays the alarm category to which the alarm belongs.
Condition	This field displays a text description for the condition under which the alarm applies.
Source	This field displays where the alarm originated. This is either a DSL port number, one of the Ethernet ports (enet 1 or 2), or "eqpt" for the system itself.
Severity	This field displays the alarm severity level (critical, major, minor or info).
Timestamp	This field displays the month, day, hour, minute and second that the system created the log.
Page X of X	This identifies which page of information is displayed and the total number of pages of information.
Previous Page	Click this to display the preceding page of entries.
Next Page	Click this to display the following page of entries.

37.3 Alarm Descriptions

This table describes alarms that the system can send.

ATUC refers to the downstream channel (for traffic going from the IES-708-22A to the subscriber). ATUR refers to the upstream channel (for traffic coming from the subscriber to the IES-708-22A). A "V" in the **CLEARABLE** column indicates that an administrator can remove the alarm.

Table 82 Alarm Descriptions

NO	ALARM	CONDITION	FACILITY	SNMP	SYSLOG	SEVERITY	CLEARABLE
1	dsl	(5000)line_up	local1	V	V	info	-
2	dsl	(5001)line_down	local1	V	V	minor	V
3	dsl	(5002)shdsl_tca_atten	local1	V	V	info	V
4	dsl	(5003)shdsl_tca_snrm	local1	V	V	info	V
5	dsl	(5004)shdsl_tca_es	local1	V	V	info	V
6	dsl	(5005)shdsl_tca_ses	local1	V	V	info	V
7	dsl	(5006)shdsl_tca_crc	local1	V	V	info	V
8	dsl	(5007)shdsl_tca_losw	local1	V	V	info	V
9	dsl	(5008)shdsl_tca_uas	local1	V	V	info	V
10	eqpt	(10000)vol_err	local1	V	V	critical	-
11	eqpt	(10001)temp_err	local1	V	V	critical	-
12	eqpt	(10002)hw_rtc_fail	local1	V	V	critical	-
13	eqpt	(10003)hw_mon_fail	local1	V	V	critical	-
14	eqpt	(10004)cold_start	local1	V	V	info	-

Table 82 Alarm Descriptions (continued)


NO	ALARM	CONDITION	FACILITY	SNMP	SYSLOG	SEVERITY	CLEARABLE
15	eqpt	(10005)warm_start	local1	V	V	info	-
16	sys	(15000)reboot	local1	V	V	info	-
17	sys	(15001)aco	local1	V	V	info	-
18	sys	(15002)alm_clear	local1	V	V	info	-
19	sys	(15003)login_fail	local1	V	V	minor	V
20	sys	(15004)anti_spoofing	local1	V	V	minor	V
21	enet	(20000)up	local1	V	V	info	-
22	enet	(20001)down	local1	V	V	major	V

37.4 Alarm Event Setup Screen

This screen lists the alarms that the system can generate along with the severity levels of the alarms and where the system is to send them.

To open this screen, click **Alarm > Alarm Event Setup**.

Figure 118 Alarm > Alarm Event Setup



Alarm Event Setup

Alarm Status

Alarm Port Setup

Index	Alarm	Condition Code	Condition	Facility	SNMP	Syslog	Severity	Clearable
1	dsl	5000	line_up	local1	V	V	info	-
2	dsl	5001	line_down	local1	V	V	minor	V
3	dsl	5002	shdsl_tca_atten	local1	V	V	info	V
4	dsl	5003	shdsl_tca_snrm	local1	V	V	info	V
5	dsl	5004	shdsl_tca_es	local1	V	V	info	V
6	dsl	5005	shdsl_tca_ses	local1	V	V	info	V
7	dsl	5006	shdsl_tca_crc	local1	V	V	info	V
8	dsl	5007	shdsl_tca_losw	local1	V	V	info	V
9	dsl	5008	shdsl_tca_uas	local1	V	V	info	V
10	eqpt	10000	vol_err	local1	V	V	critical	-
11	eqpt	10001	temp_err	local1	V	V	critical	-
12	eqpt	10002	hw_rtc_fail	local1	V	V	critical	-
13	eqpt	10003	hw_mon_fail	local1	V	V	critical	-
14	eqpt	10004	cold_start	local1	V	V	info	-
15	eqpt	10005	warm_start	local1	V	V	info	-
16	sys	15000	reboot	local1	V	V	info	-
17	sys	15001	aco	local1	V	V	info	-
18	sys	15002	alm_clear	local1	V	V	info	-
19	sys	15003	login_fail	local1	V	V	minor	V
20	sys	15004	anti_spoofing	local1	V	V	minor	V
21	enet	20000	up	local1	V	V	info	-
22	enet	20001	down	local1	V	V	major	V

The following table describes the labels in this screen.

Table 83 Alarm > Alarm Event Setup

LABEL	DESCRIPTION
Alarm Status	Click Alarm Status to go to a screen that displays the alarms that are currently in the system (see Section 37.2 on page 229).
Alarm Port Setup	Click Alarm Port Setup to go to a screen where you can configure the alarm severity threshold for recording alarms on an individual port(s). See Section 37.5 on page 233 .
Index	This field displays the index number of the alarm in the list. Click this to specify the severity level of an alarm(s) and where the system is to send the alarm(s). See Section 37.4.1 on page 232 .
Alarm	This field displays the alarm category to which the alarm belongs. eqpt represents equipment alarms. dsl represents Digital Subscriber Line (DSL) alarms. enet represents Ethernet alarms. sys represents system alarms.
Condition Code	This field displays the condition code number for the specific alarm message.
Condition	This field displays a text description for the condition under which the alarm applies.
Facility	This field displays the log facility (local1~local7) on the syslog server where the system is to log this alarm. This is for alarms that send alarms to a syslog server.
SNMP	This field displays "V" if the system is to send this alarm to an SNMP server. It displays "-" if the system does not send this alarm to an SNMP server.
Syslog	This field displays "V" if the system is to send this alarm to a syslog server. It displays "-" if the system does not send this alarm to a syslog server.
Severity	This field displays the alarm severity level (critical, major, minor or info).
Clearable	This displays "V" if the alarm clear command removes the alarm from the system. It displays "-" if the alarm clear command does not remove the alarm from the system.

37.4.1 Edit Alarm Event Setup Screen

Use this screen to specify the severity level of an alarm(s) and where the system is to send the alarm(s).

To open this screen, click **Alarm > Alarm Status**. Then, click an alarm's index number.

Figure 119 Alarm > Alarm Event Setup > Edit

Alarm	Condition Code	Condition	Facility	SNMP	Syslog	Severity	Clearable
dsl	5000	line_up	Local 1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Info	<input type="checkbox"/>

The following table describes the labels in this screen.

Table 84 Alarm > Alarm Event Setup > Edit

LABEL	DESCRIPTION
Alarm	This field displays the alarm category to which the alarm belongs. eqpt represents equipment alarms. dsl represents Digital Subscriber Line (DSL) alarms. enet represents Ethernet alarms. sys represents system alarms.
Condition Code	This field displays the condition code number for the specific alarm message.
Condition	This field displays a text description for the condition under which the alarm applies.
Facility	The log facility (local1~local7) has the device log the syslog messages to a particular file in the syslog server. Select a log facility (local1~local7) from the drop-down list box if this entry is for sending alarms to a syslog server. See your syslog program's documentation for details.
SNMP	Select this check box to have the system send this alarm to an SNMP server.
Syslog	Select this check box to have the system send this alarm to a syslog server.
Severity	Select an alarm severity level (Critical , Major , Minor or Info) for this alarm. Critical alarms are the most severe, major alarms are the second most severe, minor alarms are the third most severe and info alarms are the least severe.
Clearable	Select this check box to allow administrators to use the management interface to remove an alarm report generated by this alarm event entry. Select this check box to keep an alarm report generated by this alarm event in the system until the conditions that caused the alarm report are no longer present.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Close	Click Close to exit the screen without saving your changes.

37.5 Alarm Port Setup Screen

Use this screen to set the alarm severity threshold for recording alarms on an individual port(s). The system reports an alarm on a port if the alarm has a severity equal to or higher than the port's threshold.

To open this screen, click **Alarm > Alarm Port Setup**.

Figure 120 Alarm > Alarm Port Setup

Port	Severity
1	Minor
2	Minor
3	Minor
4	Minor
5	Minor
Enet 1	Minor
Enet 2	Minor

Apply Cancel

The following table describes the labels in this screen.

Table 85 Alarm > Alarm Port Setup

LABEL	DESCRIPTION
Alarm Status	Click Alarm Status to go to a screen that displays the alarms that are currently in the system (see Section 37.2 on page 229).
Alarm Event Setup	Click Alarm Event Setup to go to a screen where you can configure the severity level of an alarm(s) and where the system is to send the alarm(s). See Section 37.4 on page 231 .
Port	This column lists the device's individual DSL and Ethernet interfaces.
Severity	Select an alarm severity level (Critical , Major , Minor or Info) as the threshold for recording alarms on this port. Critical alarms are the most severe, major alarms are the second most severe, minor alarms are the third most severe and info alarms are the least severe.
Apply	Click Apply to save your changes to the IES-708-22A's volatile memory. The IES-708-22A loses these changes if it is turned off or loses power, so use the Config Save link on the navigation panel to save your changes to the non-volatile memory when you are done configuring.
Cancel	Click Cancel to start configuring the screen again.

Maintenance

This chapter explains how to use the maintenance screens.

38.1 Maintenance Screen

To open this screen, click **Management > Maintenance**.

Figure 121 Management > Maintenance




38.2 Firmware Upgrade Screen

Use this screen to upgrade your device firmware. See the **System Info** screen to verify your current firmware version number. Make sure you have downloaded (and unzipped) the correct model firmware and version to your computer before uploading to the device.



Be sure to upload the correct model firmware as uploading the wrong model firmware may damage your device.

To open this screen, click **Management > Maintenance > Click here** (Firmware Upgrade).

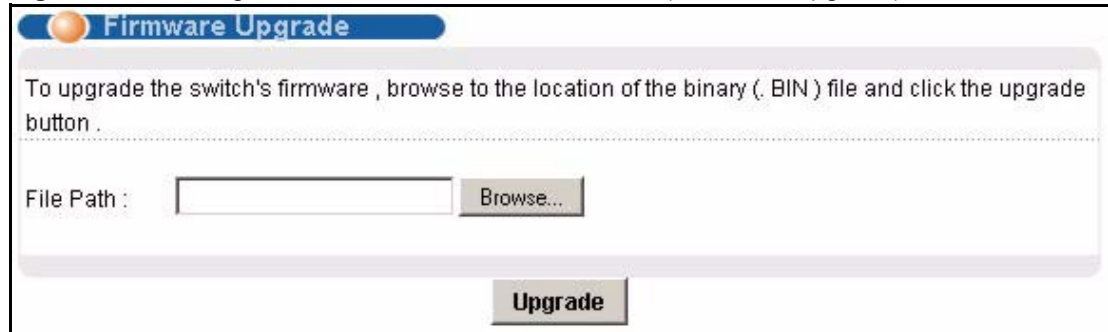
Figure 122 Management > Maintenance > Click Here (Firmware Upgrade)

Type the path and file name of the firmware file you wish to upload to the device in the **File Path** text box or click **Browse** to locate it. After you have specified the file, click **Upgrade**.

38.3 Restore Configuration Screen

Use this screen to load a configuration file from your computer to the device.

To open this screen, click **Management > Maintenance > Click here** (Restore Text Configuration).

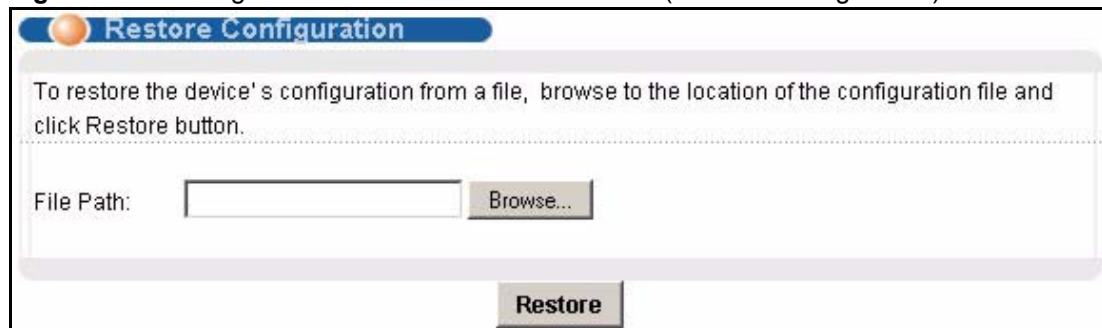Figure 123 Management > Maintenance > Click Here (Restore Configuration)

Type the path and file name of the configuration file you wish to restore in the **File Path** text box or click **Browse** to locate it. After you have specified the file, click **Restore**. "conf-0" is the name of the configuration file on the device, so your backup configuration file is automatically renamed when you restore using this screen.



If you load an invalid configuration file, it may corrupt the settings, and you might have to use the console to reconfigure the system.

38.4 Backing up a Configuration File

Backing up your device configurations allows you to create various “snap shots” of your device from which you may restore at a later date.

Click **Management > Maintenance**, and do the following to save your device's configuration to your computer.

- 1 Right-click the **Click here** (Backup Text Configuration) link and click **Save Target As**.
Or:
Click the **Click here** (Backup Text Configuration) link and then click **File, Save As**.
- 2 In the **Save As** screen, choose a location to save the file on your computer from the **Save in** drop-down list box and type a descriptive name for it in the **File name** list box. Click **Save** to save the configuration file to your computer.



See the CLI chapters to edit the configuration text file.



You can change the “.dat” file to a “.txt” file and still upload it back to the IES-708-22A.

38.5 Load Factory Defaults


Use this function to clear all device configuration information you configured and return to the factory defaults.



Restoring the default configuration deletes all the current settings. It is recommended to back up the configuration file before restoring the default configuration.


To do this, click **Management > Maintenance > Click here** (Restore Default Configuration).

Figure 124 Management > Maintenance > Click Here (Restore Default Configuration)

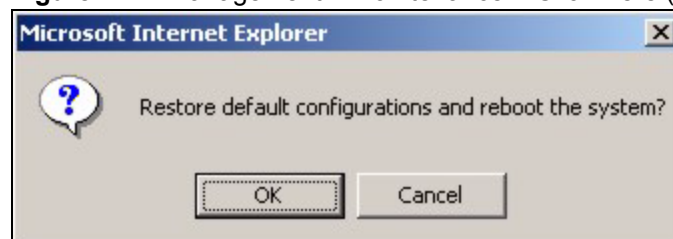

Click **OK** to begin resetting all device configurations to the factory defaults and then wait for the device to restart. This takes up to two minutes. If you want to access the web configurator again, you may need to change the IP address of your computer to be in the same subnet as that of the default device IP address (192.168.1.1).

Figure 125 Management > Maintenance > Click Here (Restore Default Configuration) > Reboot

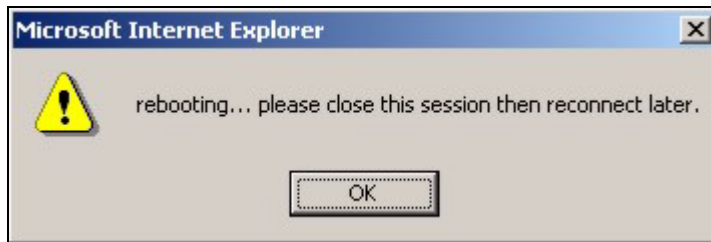

38.6 Reboot System

Use this function to restart the device without physically turning the power off.

To open this screen, click **Management**, **Maintenance**, **Click here** (Reboot System).

Figure 126 Management > Maintenance > Click Here (Reboot System)



Click **OK**. You then see the screen as shown in [Figure 125 on page 238](#). Click **OK** again and wait for the device to restart. This takes up to two minutes. This does not affect the device's configuration.

38.7 Command Line FTP

See [Chapter 51 on page 321](#) for how to upload or download files to or from the device using FTP commands.

Diagnostic

This chapter explains the **Diagnostic** screens.

39.1 Diagnostic Screen

Use this screen to check system logs, ping IP addresses or perform loopback tests.

To open this screen, click **Management > Diagnostic**.

Figure 127 Management > Diagnostic

The screenshot shows the 'Diagnostic' screen with a title bar containing an orange sphere icon and the word 'Diagnostic'. The main area is a large, empty white box with a vertical scrollbar on the right. Below this box are three sections:

- Syslog/ Event Log**: Contains 'Display' and 'Clear' buttons.
- IP Ping**: Contains an 'IP Address' field with '0.0.0.0', a 'Ping' button, a '1' in a small box, and the text 'Times(1-10)'.
- Loopback Test**: Contains a 'Port' dropdown menu with '1' selected, 'VPI' and 'VCI' fields both with '0', and an 'OAM F5 Loopback' button.

The following table describes the labels in this screen.

Table 86 Management > Diagnostic

LABEL	DESCRIPTION
Syslog/ Event Log	Click Display to display a log of events in the multi-line text box. Click Clear to empty the text box and reset the log.
IP Ping	Type the IP address of a device that you want to ping in order to test a connection. In the field to the right specify the number of times that you want to ping the IP address. Click Ping to have the device ping the IP address (in the field to the left).
Loopback Test	Select a port number from the Port drop-down list box and enter a VPI/VCI to specify a PVC. Click OAM F5 Loopback to perform an OAMF5 loopback test on the specified DSL port. An Operational, Administration and Maintenance Function 5 test is used to test the connection between two DSL devices. First, the DSL devices establish a virtual circuit. Then the local device sends an ATM F5 cell to be returned by the remote DSL device (both DSL devices must support ATM F5 in order to use this test). The results ("Passed" or "Failed") display in the multi-line text box.

MAC Table


This chapter introduces the MAC Table.

40.1 Introduction to MAC Table

The MAC table lists device MAC addresses that are dynamically learned by the IES-708-22A. The table shows the following for each MAC address: the port upon which Ethernet frames were received from the device, to which VLAN groups the device belongs (if any) and to which channel it is connected (for devices connected to DSL ports).

The device uses the MAC table to determine how to forward frames. See the following figure.

Figure 128 MAC Table Filtering Flowchart

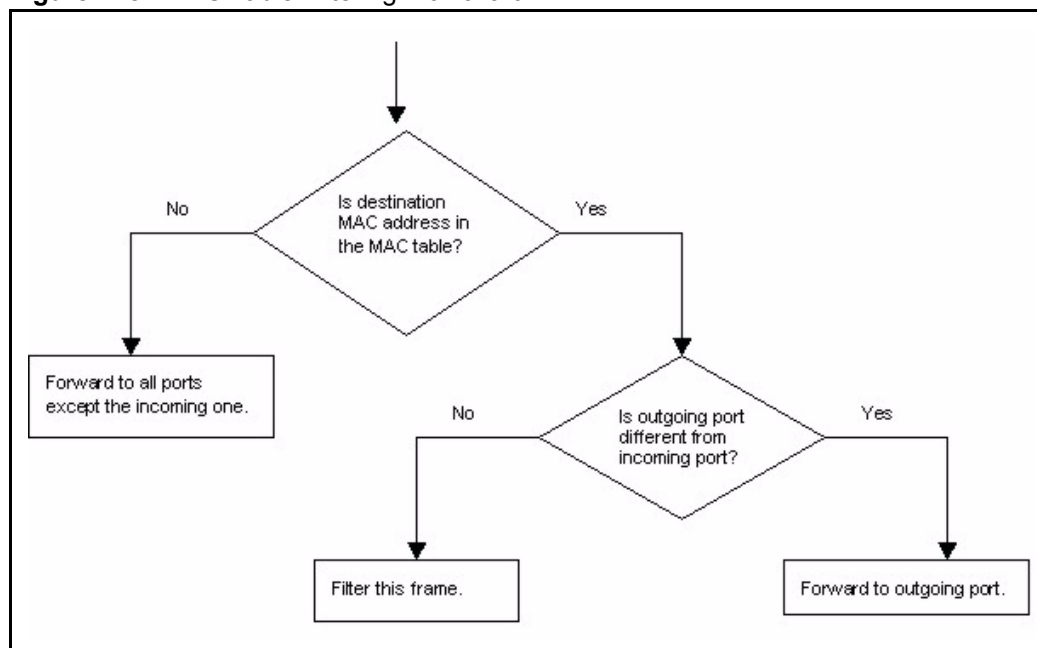

- 1** The device examines a received frame and learns the port on which this source MAC address came.
- 2** The device checks to see if the frame's destination MAC address matches a source MAC address already learned in the MAC table.
 - If the device has already learned the port for this MAC address, then it forwards the frame to that port.
 - If the device has not already learned the port for this MAC address, then the frame is flooded to all ports. Too much port flooding leads to network congestion.

- If the device has already learned the port for this MAC address, but the destination port is the same as the port it came in on, then it filters the frame.

40.2 MAC Table Screen

To open this screen, click **Management > MAC Table**.

Figure 129 Management > MAC Table

Index	Port	VID	MAC
1	Enet 1	1	00:02:e3:57:ea:1c
2	Enet 1	1	00:04:80:9b:78:00
3	Enet 1	1	00:13:49:6b:10:55
4	Enet 1	1	00:13:49:fb:99:16

The following table describes the labels in this screen.

Table 87 Management > MAC Table

LABEL	DESCRIPTION
Show port	Select a port for which to display learned MAC addresses (or display all of them).
Page X of X	This identifies which page of information is displayed and the total number of pages of information.
Previous/Next	Click one of these buttons to show the previous/next screen if all of the information cannot be seen in one screen.
Index	This is the number of the MAC table entry.
Port	This is the port to which the MAC address is associated.
VID	This is the source VLAN ID from which this incoming frame came.
MAC	This is the MAC address of the device from which this incoming frame came.
Refresh	Click Refresh to update the list of dynamically learned MAC addresses.
Flush	Click Flush to remove all of the dynamically learned MAC address entries from the MAC table.

ARP Table

This chapter describes the ARP Table.

41.1 Introduction to ARP Table

Address Resolution Protocol (ARP) is a protocol for mapping an Internet Protocol address (IP address) to a physical machine address, also known as a Media Access Control or MAC address, on the local area network.

An IP (version 4) address is 32 bits long. In an Ethernet LAN, MAC addresses are 48 bits long. The ARP Table maintains an association between each MAC address and its corresponding IP address.

41.1.1 How ARP Works


When an incoming packet destined for a host device on a local area network arrives at the device, the device's ARP program looks in the ARP Table and, if it finds the address, sends it to the device.

If no entry is found for the IP address, ARP broadcasts the request to all the devices on the LAN. The device fills in its own MAC and IP address in the sender address fields, and puts the known IP address of the target in the target IP address field. In addition, the device puts all ones in the target MAC field (FF.FF.FF.FF.FF.FF is the Ethernet broadcast address). The replying device (which is either the IP address of the device being sought or the router that knows the way) replaces the broadcast address with the target's MAC address, swaps the sender and target pairs, and unicasts the answer directly back to the requesting machine. ARP updates the ARP Table for future reference and then sends the packet to the MAC address that replied.

41.2 ARP Table Screen

Use this screen to look at the current IP-to-MAC address mapping.

To open this screen, click **Management > ARP Table**.

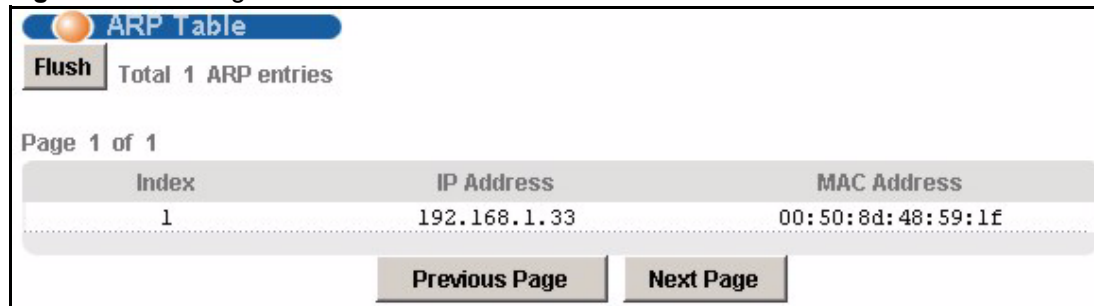Figure 130 Management > ARP Table


ARP Table		
<div> <div>Flush</div> <div>Total 1 ARP entries</div> </div>		
Page 1 of 1		
Index	IP Address	MAC Address
1	192.168.1.33	00:50:8d:48:59:1f
Previous Page		Next Page

The following table describes the labels in this screen.

Table 88 Management > ARP Table

LABEL	DESCRIPTION
Flush	Click Flush to remove all of the entries from the ARP table.
Total X ARP Entries	This displays the number of entries in the ARP table.
Page X of X	This identifies which page of information is displayed and the total number of pages of information.
Index	This is the ARP table entry number.
IP Address	This is the learned IP address of a device connected to a port.
MAC Address	This is the MAC address of the device with the listed IP address.
Previous Page Next Page	Click one of these buttons to show the preceding or following screen if the information cannot be displayed in one screen.

PART IV

CLI

Commands (247)
Command Examples (265)
Alarm Commands (269)
DHCP Commands (277)
IEEE 802.1Q Tagged VLAN Commands (285)
MAC Commands (293)
IGMP Commands (299)
Packet Filter Commands (311)
IP Commands (315)
Firmware and Configuration File Maintenance (321)
SNMP (327)
DSL Commands (329)
Virtual Channel Management (345)
ACL Commands (369)

Commands

This chapter introduces the command line interface and lists the available commands.

42.1 Command Line Interface Overview



See the previous chapters for background information on features configurable by web configurator. The web configurator is the preferred configuration tool.

You can use text command lines for software configuration. The rules of the commands are listed next.

- 1 The command keywords are in `courier new font`.
- 2 Commands can be abbreviated to the smallest unique string that differentiates the command. For example, the “`system date`” command could be abbreviated to “`sy d`”.
- 3 The optional fields in a command are enclosed in square brackets []. For instance, `config [save]` means that the `save` field is optional.
- 4 “Command” refers to a command used in the command line interface (CI command).
- 5 The | symbol means “or”.



Use of undocumented commands or misconfiguration can damage the unit and possibly render it unusable.

42.2 Command Privilege Levels

There is a high, middle or low privilege level for each command.

High privilege commands are only available to administrators with high privilege access. High privilege commands include things like creating administrator accounts, restarting the system and resetting the factory defaults. Administrators with high privilege access can use all commands including the lower privilege commands.

Administrators with middle privilege access can use middle or low privilege commands.

Administrators with the low privilege level are restricted to using only low privilege commands. Low privilege commands are read only.

42.3 Saving Your Configuration

Use the following command to save your configuration when you are done with a configuration session.

```
ras> config save
```



Do not turn off your IES-708-22A while saving your configuration.

This command saves all system configurations to nonvolatile memory. You must use this command to save any configuration changes that you make, otherwise the IES-708-22A returns to its default settings when it is restarted. Save your changes after each configuration session.

Nonvolatile memory refers to the IES-708-22A's storage that remains even if the IES-708-22A's power is turned off. Run-time (memory) is lost when the IES-708-22A's power is turned off.

42.4 Commands

The following table lists commands that you can use with the IES-708-22A.

The **P** column on the right indicates the administrator privilege level needed to use the command (**H** for high, **M** for middle or **L** for low) and the equivalent in the web configurator (**H** for high or **L** for low).

Table 89 Commands

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
sys				
	info show		Displays general system information.	L/L
	info hostname	<hostname>	Sets the system name.	M/L
	info location	<location>	Sets location information.	M/L
	info contact	<contact>	Sets contact person information.	M/L
	reboot	[show sec cancel]	Sets the reboot timer or displays the timer and remaining time for reboot. If a reboot has been scheduled, use this command to prevent a reboot.	H/H
	snmp show		Displays SNMP settings.	M/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	snmp getcommunity	<community>	Sets the SNMP GetRequest community.	H/H
	snmp setcommunity	<community>	Sets the SNMP SetRequest community.	H/H
	snmp trapcommunity	<community>	Sets the SNMP Trap community.	H/H
	snmp trusthost	<ip>	Sets the SNMP trusted host. Set 0.0.0.0 to trust all hosts.	H/H
	snmp trapdst set	<index> <ip> [<port>]	Sets the SNMP trap server and listening port. Set 0.0.0.0 to not send any SNMP traps.	H/H
	snmp trapdst del	<index>	Deletes the SNMP trap server	H/H
	server show		Displays the device's service status and port numbers.	M/L
	server enable	<telnet ftp web icmp>	Turns on a service.	H/H
	server disable	<telnet ftp web icmp>	Turns off a service.	H/H
	server port	<telnet ftp web> <port>	Sets a port for a service.	H/H
	client show		Displays the device's secured client settings.	M/L
	client enable	<index>	Turns on a secure client.	H/H
	client disable	<index>	Turns off a secure client.	H/H
	client set	<index> <start ip> <end ip> [[telnet] [ftp] [web] [icmp]]	Sets a secured client set: a range of IP addresses from which you can manage the device and the protocols that can be used.	H/H
	syslog show		Displays the syslog settings.	M/L
	syslog enable		Turns on the syslog logging.	H/H
	syslog disable		Turns off the syslog logging.	H/H
	syslog server	<ip>	Sets the IP address of the syslog server.	H/H
	stdio show		Displays Current Stdio Timeout.	L/L
	stdio set	<minute 0:no timeout>	Sets Current Stdio Timeout.	H/H
	time show		Displays the system's current time.	L/L
	time set	<hh> [<mm> [<ss>]]	Sets the system's time.	H/H
	date show		Displays the system's current date.	L/L
	date set	<yyyy> <mm> <dd>	Sets the system's date.	H/H
	timeserver show		Displays the system's time server.	M/L
	timeserver set	<none>	Sets the system to not use a time server.	H/H
	timeserver set	<daytime> <ip> [nosync]	Sets the time service protocol, time server's IP address.	H/H
	timeserver set	<time ntp> <ip> <utc[<+> ->0100~1200]> [nosync]		H/H

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	timeserver sync		Retrieves the date and time from the time server.	H/H
	log show		Displays the device's logs.	M/L
	log clear		Clears the device's logs.	H/H
	wdog show		Displays the current watchdog firmware protection feature status and timer.	H/~
	wdog set	<msec 0:disable>	Sets the watchdog count. 0 turns the watchdog off.	H/~
	monitor show		Displays the hardware monitor's statistics.	L/L
	monitor enable		Turns the hardware monitor on.	H/H
	monitor disable		Turns the hardware monitor off.	H/H
	monitor vlimit	<idx> <high> <low>	Sets the maximum (<high>) or minimum (<low>) voltage at the specified voltage sensor. You can specify a voltage with up to three digits after a decimal point (0.941 for example). Normal voltage at each sensor: Idx: 1=1.8v, 2=3.3v, 3=15v	H/H
	monitor tlimit	<idx> <high> <low>	Sets the maximum (<high>) or minimum (<low>) temperature at the specified temperature sensor. You can specify a temperature with up to three digits after a decimal point (-50.025 for example). Temperature sensor locations: Idx: 1=DSL, 2=CPU, 3=HW monitor	H/H
	user online		Displays online user info.	M/~
	user enable	<name>	Turns on the specified user name of multi-login.	H/H
	user disable	<name>	Turns off the specified user name of multi-login.	H/H
	user set	<username> <password> <high middle low>	Creates or edits the password and privilege level of the specified user name.	H/H
	user delete	<name>	Removes the specified user name of multi-login.	H/H
	user show		Displays the authentication mode, RADIUS server settings and user info.	M/L
	user auth	<local radius landr>	Set authentication method.	H/H
	user server	<ip> <port> <secret> [high middle low deny]	Set remote authentication server IP address and secret	H/H
shdsl				
	show	[portlist]	Displays the SHDSL settings.	L/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	enable	<portlist>	Turns on the specified SHDSL ports.	M/H
	disable	<portlist>	Turns off the specified SHDSL ports.	M/H
	gbond set	<name> <portlist> <sid>	(STUC mode only) Create a stuc mode bonding group.	H/H
	gbond set	<name> <portlist>	(STUR mode only) Create a stur mode bonding group.	H/H
	gbond delete	<name>	Delete a bonding group.	H/H
	gbond show	[<name>]	Displays bonding group status.	L/L
	gbond port	<portlist>	Displays which bound group the port belongs to	L/L
	profile show	[profile]	Displays profile contents.	L/L
	profile set	<profile> <min-rate> <max-rate> [annexa annexb 2wire 4wire mpair4 [lp_off lp_on_cur <curr- margin> lp_on_wc <worst-margin>]]	Creates a shdsl line profile.	H/H
	profile delete	<profile>	Removes an SHDSL profile.	H/H
	profile map	<portlist> <profile> [pam mode]	Assigns a specific profile to a port(s).	H/H
	name	<portlist> <name>	Sets the name of a port(s).	M/L
	tel	<portlist> <tel>	Records an SHDSL port(s) subscriber's telephone number.	M/L
	loopback	<portlist> <f5> <vpi> <vci>	Performs an OAMF5 loopback test.	H/H
	vcprofile show	[vcprofile]	Shows a virtual channel profile's contents.	L/L
	vcprofile set	<vcprofile> <vc llc> <ubr cbr> <pcr> <cdvt>	Creates a UBR or CBR virtual channel profile (with encapsulation).	H/H
	vcprofile set	<vcprofile> <vc llc> <vbr(rt-vbr) nrt-vbr> <pcr> <cdvt> <scr mcr> <bt nrm>	Creates a VBR virtual channel profile (with encapsulation).	H/H
	vcprofile delete	<vcprofile>	Removes a virtual channel profile.	H/H
	pvc show	[<portlist> [<vpi> <vci>]]	Displays PVC settings.	M/L
	pvc set	<portlist> <vpi> <vci> <super vid = 1..4094 <priority>> <DS vcprofile[,US vcprofile]>	Creates or modifies a PVC setting.	H/H
	pvc delete	<portlist> <vpi> <vci>	Removes a PVC setting.	H/H
	ppvc show	[<portlist> [<vpi> <vci>]]	(STUC mode only) Display priority PVC settings	M/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	ppvc set	<portlist> <vpi> <vci> <encap> <pvid> <priority>	(STUC mode only) Set priority PVC.	H/H
	ppvc member show	[portlist] [<vpi> <vci>]	(STUC mode only) Display PPVC member settings.	M/L
	ppvc member set	<portlist> <vpi> <vci> <member vpi> <member vci> <DS vcprofile[,US vcprofile]> <level>	(STUC mode only) Set PPVC member.	H/H
	ppvc member delete	<portlist> <vpi> <vci> <member vpi> <member vci>	(STUC mode only) Remove PPVC member.	H/H
	ppvc delete	<portlist> <vpi> <vci>	(STUC mode only) Remove Priority PVC.	H/H
	rpvc gateway set	<gateway ip> <vlan id> [<priority>]	(STUC mode only) Set gateway for RPVC	H/H
	rpvc gateway delete	<gateway ip>	(STUC mode only) Delete gateway for RPVC	H/H
	rpvc gateway show		(STUC mode only) Display gateway for RPVC	M/L
	rpvc set	<portlist> <vpi> <vci> <DS vcprofile[,US vcprofile]> <ip>/ <netmask> <gateway ip>	(STUC mode only) Set RPVC on a port	H/H
	rpvc delete	<portlist> <vpi> <vci>	(STUC mode only) Delete RPVC on a port	H/H
	rpvc show	<portlist>	(STUC mode only) Display RPVC on a port	M/L
	rpvc route set	<port number> <vpi> <vci> <ip>/<netmask>	(STUC mode only) Set RPVC routing subnet on a port	H/H
	rpvc route delete	<port number> <vpi> <vci> <ip>/<netmask>	(STUC mode only) Delete RPVC routing subnet on a port	H/H
	rpvc route show	<portlist>	(STUC mode only) Display RPVC routing subnet on a port	M/L
	rpvc arp agingtime show		(STUC mode only) Display RPVC ARP proxy aging time	M/L
	rpvc arp agingtime set	<sec, 10..10000 0:disabled>	(STUC mode only) Set RPVC ARP proxy aging time	H/H
	rpvc arp flush		(STUC mode only) Flush RPVC ARP proxy table	H/H
	rpvc arp show		(STUC mode only) Show RPVC ARP proxy table	M/L
	queuemap show		Displays the xDSL priority level to physical queue mapping.	M/L
	queuemap set	<priority> <queue level>	Set the xDSL priority level to physical queue mapping.	H/H
	alarmprofile show	[profile]	Displays alarm profiles and their settings.	L/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	alarmprofile set	<profile> [atten <atten>] [snrmgn <snrmgn>] [es <es>] [ses <ses>] [crc <crc>] [losws <losws>] [uas <uas>]	Configures an alarm profile.	H/H
	alarmprofile delete	<profile>	Removes an alarm profile.	H/H
	alarmprofile map	<portlist> <profile> 	Maps specified SHDSL ports to an alarm profile.	H/H
	alarmprofile showmap	[port number]	Displays alarm profile to SHDSL port mapping.	L/L
	alarmprofile showport	<port number>	Displays which alarm profile parameters are mapped to an SHDSL port.	L/~
	dsbcast enable	<portlist> <vlanlist>	(STUC mode only) Enable downstream broadcast on xDSL port	M/H
	dsbcast disable	<portlist> <vlanlist>	(STUC mode only) Disable downstream broadcast on xDSL port	M/H
	dsbcast show	<portlist>	(STUC mode only) Show downstream broadcast on xDSL port	L/L
	reset	<portlist>	Reset xDSL port	H/H
	paepvc delete	<portlist> <vpi> <vci>	(STUC mode only) Delete a PPPoAoE PVC	M/H
	paepvc set	<portlist> <vpi> <vci> <DS vcprofile[,US vcprofile]> <pvid> <priority> [acname <string32>] [srvcname <string32>] [hellotime <time>]	(STUC mode only) Create/modify a PPPoAoE PVC <acname>: access concentrator name <srvcname>: service name, <time>: 0~600 in unit of second Default: acname="", srvcname="", <time>=600	M/H
	paepvc show	[<portlist> [<vpi> <vci>]]	(STUC mode only) Display PPPoAoE PVC setting by 'port'	L/L
	paepvc session	<portlist> [<vpi> <vci>]	(STUC mode only) Display PPPoAoE PVC session status	L/L
	paepvc counter	<portlist> [<vpi> <vci>]	(STUC mode only) Display PPPoAoE PVC counter	L/L
	tlspvc delete	<portlist> <vpi> <vci>	(STUC mode only) Delete a TLS PVC	M/H
	tlspvc set	<portlist> <vpi> <vci> <DS vcprofile[,US vcprofile]> <pvid> <priority>	(STUC mode only) Create/modify a TLS PVC <profile>: <vid>: s-tag VLAN id <priority>: priority for s-tag	M/H
	tlspvc show	[<portlist> [<vpi> <vci>]]	(STUC mode only) Display TLS PVC setting by 'port'	L/L
	pmms show	[portlist]		L/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	pmm set	<portlist> <normal forced>		H/H
	pbo show	<portlist>		L/L
	pbo set	<portlist> <normal_epl forced_epl forced_no_epl> <value>		H/H
alarm				
	clear		Clear current alarm	M/L
	cutoff		Alarm cutoff	M/~
	xedit	<alarm> all <cond> <condcode> <severity> <fac> <target>[,<target>] [clearable]	Edit system alarm table	M/L
	history clear	<alarm> all <condition> all	Clear history alarm	M/~
	history clear	<severity>	Clear history alarm	M/~
	history show	[<severity> all] [<alarm> all] [<condition> all] [<sdate> all] [<edate> all] [for rev] [detail]	Display history alarm	L/~
	show	[<severity> all] [<alarm> all] [<condition> all] [<sdate> all] [<edate> all] [for rev] [detail]	Display current alarm	L/L
	port show		Display xDSL port threshold of severity which will issue an alarm	L/L
	port set	<all> <portlist>> <severity>	Set xDSL port threshold of severity which will issue an alarm	M/L
	tablelist	[<alarm> all] [<severity> all] [<fac> all] [<target>[,<target>]] [<condition> all]	Display system alarm table	L/L
switch				
	igmpsnoop show		Displays the IGMP snooping setting.	M/L
	igmpsnoop enable	<proxy snooping>	(STUC mode only) Sets IGMP snooping mode.	H/H
	igmpsnoop enable		(STUR mode only) Enables IGMP snooping.	H/H
	igmpsnoop disable		Turns off IGMP proxy/snooping.	H/H
	igmpsnoop bandwidth default	<bandwidth>	(STUC mode only) Set default bandwidth for multicast IP channels	M/H

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	igmpsnoop bandwidth delete	<index>	(STUC mode only) Delete an entry of bandwidth budget setting specified in <index> field.	M/H
	igmpsnoop bandwidth port disable	<portlist>	(STUC mode only) Disable bandwidth budget control for a port	M/H
	igmpsnoop bandwidth port enable	<portlist>	(STUC mode only) Enable bandwidth budget control for a port	L/H
	igmpsnoop bandwidth port set	<portlist> <bandwidth>	(STUC mode only) Set bandwidth threshold for a port <bandwidth>: 1..100,000, in unit of kbps	M/H
	igmpsnoop bandwidth port show	<portlist>	(STUC mode only) Show bandwidth control setting for a port	L/L
	igmpsnoop bandwidth set	<index> <start-mcast-ip> <end-mcast-ip> <bandwidth>	(STUC mode only) Set bandwidth budget for a range of multicast IP channels specified in <index> field. <index>: 1~96 <start-mcast-ip>: <ip>, start multicast IP address <end-mcast-ip>: <ip>, end multicast IP address	M/H
	igmpsnoop bandwidth show		(STUC mode only) Show bandwidth budget for a range of multicast IP channels	L/L
	igmpsnoop igmpcount disable	<portlist>	(STUC mode only) Disable IGMP count limiting to subscriber port	H/H
	igmpsnoop igmpcount enable	<portlist>	(STUC mode only) Enable IGMP count limiting to subscriber port	H/H
	igmpsnoop igmpcount set	<portlist> <count>	(STUC mode only) Set IGMP count limiting number to subscriber port	H/H
	igmpsnoop igmpcount show	[portlist]	(STUC mode only) Display IGMP count limiting setting status on the specified slot	M/L
	igmpsnoop mvlan set	<vid> <portlist>:<F<T U> X> [<portlist>: <F<T U> X>...] [name]	(STUC mode only) Configures a MVLAN entry.	H/H
	igmpsnoop mvlan show	<vlanlist>	(STUC mode only) Show multicast vlans, Include group information	M/L
	igmpsnoop mvlan disable	<vid>	(STUC mode only) Turns off a MVLAN entry.	H/H
	igmpsnoop mvlan enable	<vid>	(STUC mode only) Turns on a MVLAN entry.	H/H
	igmpsnoop mvlan delete	<vlanlist>	(STUC mode only) Removes a MVLAN entry.	H/H

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	igmpsnoop mvlan group set	<vid> <index> <start_mcast_ip> <end_mcast_ip>	(STUC mode only) Create a multicast to VLAN translation entry. up to 16 entries <index>: 1~16, Note: IP address in each entry should be disjointed	H/H
	igmpsnoop mvlan group delete	<vid> <index>	(STUC mode only) Delete a multicast to VLAN translation entry.	H/H
	igmpsnoop mvlan group show	<vlanlist>	(STUC mode only) Show a multicast to VLAN translation entry.	M/L
	igmpfilter set	<portlist> <name>	(STUC mode only) Sets a DSL port(s) to use an IGMP filter profile.	H/H
	igmpfilter show	[portlist]	(STUC mode only) Displays which IGMP filter profile an DSL port(s) is using.	M/L
	igmpfilter profile set	<name> <index> <startip> <endip>	(STUC mode only) Configures an IGMP filter profile.	H/H
	igmpfilter profile delete	<name>	(STUC mode only) Removes an IGMP filter profile.	H/H
	igmpfilter profile show	[name]	(STUC mode only) Displays an IGMP filter profile's settings.	M/L
	queuemap show		Displays the system's priority level to physical queue mapping.	M/L
	queuemap set	<priority> <queue level>	Maps a priority level to a physical queue.	H/H
	garptimer show		(STUC mode only) Display the system's garp settings.	M/L
	garptimer join	<join msec>	(STUC mode only) Set system's garp join time.	H/H
	garptimer leave	<leave msec>	(STUC mode only) Set system's garp leave time.	H/H
	garptimer leaveall	<leaveall msec>	(STUC mode only) Set system's garp leaveall time.	H/H
	rstp show		(STUC mode only) Display the system's rstp settings.	M/L
	rstp enable		(STUC mode only) Turn system's rstp on.	H/H
	rstp disable		(STUC mode only) Turn system's rstp off.	H/H
	rstp priority	<priority>	(STUC mode only) Set system rstp's priority.	H/H
	rstp hellotime	<hellotime sec>	(STUC mode only) Set system rstp's hello time.	H/H

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	rstp maxage	<maxage sec>	(STUC mode only) Set system rstp's max age.	H/H
	rstp fwdelay	<fwdelay sec>	(STUC mode only) Set system rstp's forward delay time.	H/H
	rstp port show		(STUC mode only) Display enet port rstp status.	M/L
	rstp port enable	<portlist>	(STUC mode only) Set enet port to enable rstp.	H/H
	rstp port disable	<portlist>	(STUC mode only) Set enet port to disable rstp.	H/H
	rstp port priority	<portlist> <priority>	(STUC mode only) Set enet port's rstp priority.	H/H
	rstp port pathcost	<portlist> <pathcost>	(STUC mode only) Set enet port's rstp pathcost.	H/H
	dhcprelay show		(STUC mode only) Displays DHCP relay settings.	L/L
	dhcprelay enable		(STUC mode only) Turns on DHCP relay.	M/H
	dhcprelay disable		(STUC mode only) Turns off DHCP relay.	M/H
	dhcprelay server set	<vid> <primary-server> [<secondary-server>]	(STUC mode only) Set DHCP server IP address where the DHCP request will forward to <vid>: VLAN < primary-server >: IP address for primary server < secondary-server >: IP address for secondary server Maximum 32 entries can be configured. Default: (empty list)	M/H
	dhcprelay server delete	<vid> [<primary-server>]	(STUC mode only) Delete DHCP server for 1 VLAN	M/H
	dhcprelay server active	<vid> <active-server>	(STUC mode only) Activate primary or secondary DHCP server for 1 VLAN	M/H
	dhcprelay relaymode	<mode>	(STUC mode only) <mode>: auto, both	M/H
	dhcprelay option82 enable		(STUC mode only) Turns on the DHCP relay agent information (Option 82) feature.	M/H
	dhcprelay option82 disable		(STUC mode only) Turns off the DHCP relay agent information (Option 82) feature.	M/H
	dhcprelay option82 set	<relay info>	(STUC mode only) Adds the specified information for the relay agent.	M/H
	dhcprelay opt82sub2 enable		(STUC mode only) Turns on option 82 sub-option 2	M/H

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	dhcprelay opt82sub2 disable		(STUC mode only) Turns off option 82 sub-option 2	M/H
	dhcprelay opt82sub2 set	<relay info>	(STUC mode only) Adds the specified information for sub-option 2	M/H
	vlan show	<vlanlist>	Displays VLAN settings.	M/L
	vlan portshow	[portlist]	Displays the port(s) VLAN settings.	M/L
	vlan set	<vid> <portlist>:<F<T U> X N> [<portlist>: <F<T U> X N> ...] [name]	Configures a VLAN entry.	H/H
	vlan enable	<vid>	Turns on a VLAN entry.	H/H
	vlan disable	<vid>	Turns off a VLAN entry.	H/H
	vlan delete	<vlanlist>	Removes a VLAN entry.	H/H
	vlan pvid	<portlist> <pvid>	Sets the PVID (Port VLAN ID) assigned to untagged frames or priority frames (0 VID) received on this port(s).	H/H
	vlan priority	<portlist> <priority>	Sets a port's default IEEE 802.1p priority.	H/H
	vlan gvrp	<portlist> <enable disable>	(STUC mode only) Set the port(s) to enable or disable gvrp.	H/H
	vlan frametype	<portlist> <all tag>	Sets the specified DSL port to accept tagged, untagged or Ethernet frames (or both). Note: enet1, enet2 are fixed at 'all'.	H/H
	vlan cpu show		Displays the VLAN ID of the management VLAN.	M/~
	vlan cpu set	<vid>	Sets the VLAN ID of the management VLAN.	H/~
	mac flush		Clears learned MAC addresses from the forwarding table.	H/H
	mac agingtime show		Displays the MAC aging out time period.	M/L
	mac agingtime set	<sec, 10..10000 0:disable>	Sets the MAC aging out time period.	H/H
	mac antispoofing show		(STUC mode only) Show the MAC antispoofing status	M/L
	mac antispoofing enable		(STUC mode only) Turns on the MAC antispoofing	H/H
	mac antispoofing disable		(STUC mode only) Turns off the MAC antispoofing	H/H
	mac count show	[portlist]	(STUC mode only) Displays the system's current MAC address count settings.	M/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	mac count enable	<portlist>	(STUC mode only) Turns on the MAC address count filter for an DSL port(s).	H/H
	mac count disable	<portlist>	(STUC mode only) Turns off the MAC address count filter for an DSL port(s).	H/H
	mac count set	<portlist> <count>	(STUC mode only) Sets the MAC address count filter for an DSL port(s).	H/H
	mac filter show	[portlist]	(STUC mode only) Displays MAC filter settings.	M/L
	mac filter enable	[portlist]	(STUC mode only) Turns on the MAC filter.	H/H
	mac filter disable	[portlist]	(STUC mode only) Turns off the MAC filter.	H/H
	mac filter mode	<port> <accept deny>	(STUC mode only) Sets the MAC filter to accept or deny.	H/H
	mac filter set	<port> <mac> [<mac> <mac> ...]	(STUC mode only) Adds a MAC filter MAC entry on an DSL port(s).	H/H
	mac filter delete	<port> <mac> [<mac> <mac> ...]	(STUC mode only) Removes a MAC filter MAC entry on an DSL port(s).	H/H
	pktfilter show	[portlist]	(STUC mode only) Display packet filter settings.	M/L
	pktfilter set	<portlist> <filter>	(STUC mode only) Set packet filter for port	H/H
	pktfilter pppoeonly	<portlist>	(STUC mode only) Set packet filter to pppoe only for port.	H/H
	dot1x show	[portlist]	(STUC mode only) Display dot1x settings.	M/L
	dot1x enable		(STUC mode only) Turn on dot1x.	H/H
	dot1x disable		(STUC mode only) Turn off dot1x.	H/H
	dot1x auth	<profile radius>	(STUC mode only) Set authentication method to profile or radius.	H/H
	dot1x port enable	<portlist>	(STUC mode only) Turn on dot1x on port.	H/H
	dot1x port disable	<portlist>	(STUC mode only) Turn off dot1x on port.	H/H
	dot1x port control	<portlist> <auto auth unauth>	(STUC mode only) Set port authentication status.	H/H
	dot1x port reauth	<portlist> <on off>	(STUC mode only) Turn on or turn off port to do reauthentication.	H/H
	dot1x port peroid	<portlist> <period>	(STUC mode only) Set port reauth period.	H/H
	dot1x radius show		(STUC mode only) Display radius server settings.	M/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	dot1x radius ip	<ip>	(STUC mode only) Set Radius server IP.	H/H
	dot1x radius port	<port>	(STUC mode only) Set Radius server port.	H/H
	dot1x radius secret	<secret>	(STUC mode only) Set Radius server secret.	H/H
	dot1x profile show		(STUC mode only) Display accounts for profile mode.	M/L
	dot1x profile set	<name> <password>	(STUC mode only) Set account and password for profile mode.	H/H
	dot1x profile delete	<name>	(STUC mode only) Remove account for profile mode.	H/H
	enet show		Displays the Ethernet port settings.	M/L
	enet speed	<portlist> <100copper 10copper auto>	Sets the Ethernet port(s) connection speed.	H/H
	enet name	<portlist> <name>	Sets the Ethernet port(s) name.	H/H
	enet enable	<portlist>	Turns on the specified Ethernet port(s).	H/H
	enet disable	<portlist>	Turns off the specified Ethernet port(s).	H/H
	enet reset	<portlist>	Reset the ENET interface.	H/H
	smcast show		Display all MAC addresses joined to DSL ports.	M/L
	smcast set	<dsl_port> <mac> <join leave>	Use join/leave to add/ remove multicast MAC addresses on specified DSL ports, a range of DSL ports or all DSL ports. MAC example: 01005E010203	H/H
	smcast delete	<mac>	Removes a static multicast filter entry by deleting the associated MAC address.	H/H
	isolation show		(STUC mode only) Displays the subscriber isolation feature's current setting.	M/L
	isolation enable		(STUC mode only) Turns the subscriber isolation feature on.	H/H
	isolation disable		(STUC mode only) Turns the subscriber isolation feature off.	H/H
	isolation daisychain		(STUC mode only) Set switch mode to daisychain mode	H/H
	isolation standalone		(STUC mode only) Set switch mode to standalone mode (STUR mode is default enabled as isolation standalone mode)	H/H
	dscp show	[portlist]	(STUC mode only) Displaying per port DSCP setting	L/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	dscp enable	<portlist>	(STUC mode only) Enable DSL/ENET ports to use DSCP mapping	M/H
	dscp disable	<portlist>	(STUC mode only) Disable DSL/ENET ports to use DSCP mapping	M/H
	dscp map show		(STUC mode only) Displaying the DSCP code to 802.1p mapping table	L/L
	dscp map set	<srccp> <mappri> <srccp>: source code point, 0~63, example: 1,3~5,10~15 <mappri>: mapping priority, 0~7	(STUC mode only) Setting the DSCP code to 802.1p mapping table	M/H
	acl profile delete	<profile>	(STUC mode only) delete an acl profile	M/H

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	acl profile set	<profile> <rule> <action>	<p>(STUC mode only) Create/modify a acl profile</p> <p><rule>: <l2> <l3_protocol> <mfc></p> <p><l2>: Layer-2 match fields (listed in priority sequence match)</p> <p>etype <etype> vlan <vid></p> <p>etype <etype> smac <mac></p> <p>etype <etype> dmac <mac></p> <p>vlan <vid> smac <mac></p> <p>vlan <vid> dmac <mac></p> <p>smac <mac> dmac <mac></p> <p>vlan <vid> priority <priority></p> <p>etype <etype></p> <p>vlan <vid></p> <p>smac <mac></p> <p>dmac <mac></p> <p>priority <priority></p> <p>protocol <protocol></p> <p><priority>: 0~7</p> <p><etype>: 0~65535</p> <p><protocol>: tcp udp ospf igmp ip gre icmp <ptype></p> <p><ptype>: 0~65535</p> <p>Note: multiple-field rules (position independent):</p> <p>MFC rules:</p> <p>{srcip <ip>/<mask>{ dstip <ip>/<mask>{ tos <tos>{ srcport <port>{ dstport <port>}}}}}</p> <p><mask>: 0~32</p> <p><tos>:0~255</p> <p><port>:0~65535</p> <p><action>: rate <rate> rvlan <rvlan> rpri <rpri> deny</p> <p><rate>: 1~65535 in unit of kbps</p> <p><rvlan>: replaced vlan 1~4094</p> <p><rpri>: replaced priority 0~7</p>	M/H
	acl profile show	[<profile>]	(STUC mode only) Display an acl profile	L/L
	acl profile showmap	<profile>	(STUC mode only) Display acl profile reference	L/L
	acl delete	<portlist> <vpi> <vci> <profile>	<p>(STUC mode only) Remove an acl profile from PVC</p> <p><profile>: string32</p> <p>up to 8 profiles if only one PVC has profiles</p>	M/H

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	acl set	<portlist> <vpi> <vci> <profile>	(STUC mode only) Apply an acl profile to a PVC Max. 8 profiles per port	M/H
	acl show	[portlist] [<vpi> <vci>]	(STUC mode only) Show acl profile setting for a PVC	L/L
	dhcpsnoop disable	<portlist>	(STUC mode only) Disable ip spoofing for a port	M/H
	dhcpsnoop enable	<portlist>	(STUC mode only) Enable ip spoofing for a port	M/H
	dhcpsnoop flush	<portlist>	(STUC mode only) Flush DHCP snooping table for a port	M/H
	dhcpsnoop show	[<portlist>]	(STUC mode only) Display DHCP snooping result on a port	L/L
ip				
	show		Displays the management IP address settings.	M/L
	arp show		Displays the device's IP Address Resolution Protocol(ARP) table.	M/L
	arp flush		Clears the device's IP Address Resolution Protocol(ARP) table.	H/H
	set	<ip>[/netmask]	Sets the management IP address and subnet mask.	H/H
	gateway	<gateway ip>	Sets the IP address of the device's default gateway.	H/H
	route show		Displays the routing table.	M/L
	route set	<dst ip>[/netmask] <gateway ip> [metric] <name>	Adds a routing table entry.	H/H
	route set	default <gateway ip> <metric>	Sets the device's default route.	H/H
	route delete	<dst ip>[/netmask]	Removes a routing table entry.	H/H
	route flush		Clears the routing table.	H/~
	ping	<ip> [count]	Pings a remote host.	M/L
statistics				
	monitor		Displays hardware monitor status.	M/L
	shdsl show	[portlist]	Displays SHDSL port connection status.	M/L
	shdsl gbond	[name]	Displays bonding group link status.	L/L
	shdsl lineinfo	<portlist>	Displays the info of the specified SHDSL ports.	M/L
	shdsl lineperf	<portlist>	Displays the performance statistics of the specified SHDSL port.	M/L
	shdsl linerate	<portlist>	Displays the line rate.	M/L

Table 89 Commands (continued)

CLASS	COMMAND	PARAMETERS	DESCRIPTION	P
	shdsl 15mperf	<portlist> [count <0..96>]	Displays line performance statistics for the current and previous 15-minute periods.	M/L
	shdsl 1dayperf	<portlist>	Displays line performance statistics for the current and previous 24 hours.	M/L
	igmpsnoop info	[clear]	Display protocol packets counters & number of learned groups	L/L
	igmpsnoop group	[<vid> [<mcast_ip>]]	Display IGMP learned group member information	L/L
	igmpsnoop port info	[<portlist> [clear]]	Display received protocol packets counters, number of joined groups.	L/L
	igmpsnoop port group	<portlist>	Display joined groups in this port	L/L
	rmon	stats history enet1 enet2	Display uplink/subtending link RMON information	M/L
	rstp		(STUC mode only)	M/L
	vlan	[vlanlist]	Displays current VLANs.	M/L
	mac		Displays current MAC address forwarding table.	M/L
	port	<portlist> [<vpi> <vci>] [clear]	This command displays and/or erases port statistics.	M/L
	dot1x	[portlist]	(STUC mode only)	M/L
	enet		Displays Ethernet port settings and statistics.	M/L
	ip		Displays a management port's status and performance data.	M/~
	dhcp counter	[<portlist> [clear]]	(STUC mode only) Display DHCP statistics for a port	L/L
	dhcp snoop	<portlist>	(STUC mode only) Display snooping	L/L
config				
	show	<sys sw ip stat all> [nopause]	Displays the device's configuration.	M/L
	save		Saves the current configuration.	H/H
	restore		Reloads the factory default configuration.	H/H
exit			Ends the console or telnet session.	L/L

Command Examples

This chapter gives some examples of commands.

43.1 Command Examples Overview

These are commands that you may use frequently in configuring and maintaining your IES-708-22A. See [Chapter 46 on page 285](#) for commands that deal with the IEEE 802.1Q Tagged VLAN.

43.2 Sys Commands

These are the commonly used commands that belong to the sys (system) group of commands.

43.2.1 Log Show Command

Syntax:

```
ras> sys log show
```

This command displays the system error log. An example is shown next.

```

ras> sys log show
 1 Fri Jan 02 05:19:28 1970 1_Tell_P  INFO  Session Begin!
 2 Thu Jan 01 02:17:49 1970 iw_app    INFO  Ether 1 Link Up(SN=4): 100/100!
 3 Thu Jan 01 02:17:23 1970 iw_app    WARN  Ether 1 Link Down(SN=3)!
```

43.2.2 Log Clear Command

Syntax:

```
ras> sys log clear
```

This command clears the system error log.



If you clear a log (using the log clear command), you cannot view it again.

43.2.3 Info Show Command

Syntax:

```
ras> sys info show
```

This command shows general system settings, the BIN (firmware) version, system uptime and bootbase version.

An example is shown next.

```
ras> sys info show
  Hostname:
  Location:
  Contact:
    Model: IES-708-22A STU-R
  ZyNOS version: V3.52 (AYT.0)b2 | 08/29/2007
  F/W size: 2310154
  MAC address: 00:13:49:02:02:02
  System up time: 1(days) : 5:22:44
  Bootbase version: VAYS1.01 | 07/20/2007
  F/W build date: Sep 4 2007 19:54:47
  Driver version: 0.9.1.0
  DSP code version: 1.1-1.5.0__004
  Hardware version:
  Serial number:
```

43.3 Isolation Commands

This feature is available in STU-C mode only.

Turn on port isolation to block communications between subscriber ports. When you enable port isolation, you do not need to configure the VLAN to isolate subscribers.

43.3.1 Isolation Show Command

Syntax:

```
ras> switch isolation show
```

This command displays the current setting of the subscriber isolation feature.

An example is shown next.

```
ras> switch isolation show
system isolation: enabled
system switch mode : stand alone
```

43.3.2 Isolation Enable Command

Syntax:

```
ras> switch isolation enable
```

This command turns on the subscriber isolation feature.

43.3.3 Isolation Disable Command

Syntax:

```
ras> switch isolation disable
```

This command turns off the subscriber isolation feature.

43.4 Statistics Monitor Command

Syntax:

```
ras> statistics monitor
```

This command shows the current hardware status.

An example is shown next.

```

ras> statistics monitor
Hardware monitor status: enabled

```

	nominal	limit(hi)	limit(lo)	current	min	max	avg	status
---	-----	-----	-----	-----	-----	-----	-----	-----
v1(v)	1.800	1.944	1.656	1.754	1.740	1.754	1.751	Normal
v2(v)	3.300	3.564	3.036	3.334	3.334	3.334	3.334	Normal
v3(v)	12.000	12.960	11.040	14.922	14.922	14.922	14.922	Abnormal

	limit(hi)	limit(lo)	current	min	max	avg	status
-----	-----	-----	-----	-----	-----	-----	-----
t1(c)	97.000	-10.000	38.000	37.000	40.000	37.000	Normal
t2(c)	97.000	-10.000	35.000	34.000	37.000	34.000	Normal
t3(c)	97.000	-10.000	37.000	36.000	39.000	36.000	Normal

43.5 Statistics Port Command

Syntax:

```
ras> statistics port <portlist> [<vpi> <vci>] [clear]
```

where

- <portlist> = You can specify a single port <1>, all ports <*> or a list of ports <1,3,enet1>. You can also include a range of ports <1,5,6~8,enet1>.
- <vpi> <vci> = The VPI and VCI of an individual PVC.
- [clear] = Use clear to have the IES-708-22A set the specified port(s) or PVC's counters back to zero.

This command displays and/or erases port statistics. The following example displays port statistics for DSL port 1.

```
ras> statistics port 1
[xdsl port 1]
tx packets           : 20
rx packets           : 0
tx uni-packets       : 1
rx uni-packets       : 0
tx nonuni-packets    : 19
rx nonuni-packets    : 0
tx discard packets   : 0
rx discard packets   : 0
errors               : 0
tx rate (bytes/s)    : 0
rx rate (bytes/s)    : 128
tx bytes             : 5904
rx bytes             : 0
```

where

- | | | |
|-------------------|---|--|
| tx uni-packets | = | This field shows the number of unicast packets transmitted on this port. |
| rx uni-packets | = | This field shows the number of unicast packets received on this port. |
| tx nonuni-packets | = | This field shows the number of non-unicast (broadcast and multicast) packets transmitted on this port. |
| rx nonuni-packets | = | This field shows the number of non-unicast (broadcast and multicast) packets received on this port. |

See [Chapter 6 on page 71](#) for details on the other port statistics fields.

Alarm Commands

This chapter describes the alarm management commands.

44.1 Alarm Commands

Use these commands to view, customize and clear alarms. You can also set the device to report alarms to an SNMP or syslog server that you specify.

44.2 General Alarm Command Parameters

The following table describes commonly used alarm command parameter notation.

Table 90 General Alarm Command Parameters

NOTATION	DESCRIPTION
<alarm>	Specify a category of alarms. eqpt represents equipment alarms. dsl represents Digital Subscriber Line (DSL) alarms. enet represents Ethernet alarms. sys represents system alarms. all specifies every alarm category.
<severity>	Specify an alarm severity level (critical, major, minor, info or all). Critical alarms are the most severe, major alarms are the second most severe, minor alarms are the third most severe and info alarms are the least severe.
<condition>	This is the text description for the condition under which the alarm applies. Use the alarm tablelist to find alarm conditions.

44.3 Alarm Show Command

Syntax:

```
ras> alarm show [<severity>|all] [<alarm>|all] [<condition>|all]
[<sdate>|all] [<edate>|all] [for|rev] [detail]
```

where

<severity>	=	Alarm severity. info minor major critical
<alarm>	=	Alarm category. sys eqpt enet dsl voip
<condition>	=	Text description for the condition.

<sdate>	=	Start date (yyyy/mm/dd)
<edate>	=	End date (yyyy/mm/dd)
[for rev]	=	Display order. for: forward; rev: reverse.
[detail]	=	Display in-depth alarm information.

This command displays the current alarms by severity, alarm category, alarm condition, or date.

The following example displays the current critical level alarms for all alarm categories and conditions.

The source is where the alarm originated. This is either a DSL port number, one of the Ethernet ports (enet 1 or 2), or “eqpt” for the system itself.

```
ras> alarm show

[current alarm list]
  no alarm  condition          severity timestamp      source
  -----
  1 eqpt    +vol_err            critical 01/01 00:00:07 eqpt 3
  2 dsl     +line_down          minor   01/01 02:16:27 6
  3 dsl     +line_down          minor   01/01 02:16:27 5
  4 dsl     +line_down          minor   01/01 02:16:28 4
  5 dsl     +line_down          minor   01/01 02:16:28 3
  6 dsl     +line_down          minor   01/01 02:16:29 2
  7 dsl     +line_down          minor   01/01 02:16:29 1
```

44.4 Alarm Port Show Command

Syntax:

```
ras> alarm port show [<severity>|all]
```

where

<severity>	=	Alarm severity. info minor major critical
------------	---	---

This command displays port alarm severity level thresholds. The system reports an alarm on a port if the alarm has a severity equal to or higher than the port’s threshold.

The following example displays the port alarm thresholds for all ports. “ifindex” identifies the interface.

```

ras> alarm port show
   no    ifindex    severity
-----
   01     01        minor
   02     02        minor
   03     03        minor
   04     04        minor
   05     05        minor
===== SNIP =====

```

44.5 Alarm Port Set Command

Syntax:

```
ras> alarm port set <all|<portlist>> <severity>
```

where

```

<all|portlist>  =  Ports on the IES-708-22A.
<severity>      =  Alarm severity. info|minor|major|critical

```

This command sets the alarm severity threshold for recording alarms on an individual port(s). The system reports an alarm on a port if the alarm has a severity equal to or higher than the port’s threshold.

The following example has the IES-708-22A only record critical alarms on DSL port 7.

```

ras> alarm port set 7 critical

```

44.6 Alarm Tablelist Command

Syntax:

```

ras> alarm tablelist [<alarm>|all] [<severity>|all] [<fac>|all]
[<target>[,<target>]] [<condition>|all]

```

where

```

<alarm>          =  Alarm category. sys|eqpt|enet|dsl|voip
<severity>       =  Alarm severity. info|minor|major|critical
<fac>            =  The log facility (local1~local7) that has the device log the
                    syslog messages to different files in the syslog server. See your
                    syslog program’s documentation for details.

```

<target> = snmp|syslog|all The type of alarm messages that the device is to send (SNMP, syslog or all).

<condition> = Text description for the condition.

This command lists alarm settings.

The following example displays the supported minor level alarms for all alarm categories, facilities, types of alarm messages and conditions.

```

ras> alarm tablelist
no alarm          condition          facility snmp syslog severity clearable
-----
 1 dsl ( 5000)line_up          local1   V    V    info    -
 2 dsl ( 5001)line_down        local1   V    V    minor   V
 3 dsl ( 5002)shdsl_tca_atten   local1   V    V    info    V
 4 dsl ( 5003)shdsl_tca_snrm    local1   V    V    info    V
 5 dsl ( 5004)shdsl_tca_es      local1   V    V    info    V
 6 dsl ( 5005)shdsl_tca_ses     local1   V    V    info    V
 7 dsl ( 5006)shdsl_tca_crc     local1   V    V    info    V
 8 dsl ( 5007)shdsl_tca_losw    local1   V    V    info    V
 9 dsl ( 5008)shdsl_tca_uas     local1   V    V    info    V
10 eqpt (10000)vol_err          local1   V    V    critical -
11 eqpt (10001)temp_err         local1   V    V    critical -
12 eqpt (10002)hw_rtc_fail      local1   V    V    critical -
13 eqpt (10003)hw_mon_fail      local1   V    V    critical -
14 eqpt (10004)cold_start       local1   V    V    info    -
15 eqpt (10005)warm_start       local1   V    V    info    -
16 sys (15000)reboot            local1   V    V    info    -
17 sys (15001)aco               local1   V    V    info    -
18 sys (15002)alm_clear         local1   V    V    info    -
19 sys (15003)login_fail        local1   V    V    minor   V

Press any key to continue, 'e' to exit, 'n' for nopause

```

44.7 Log Format

The following table describes the columns in the list.

Table 91 Log Format

LABEL	DESCRIPTION
no	This is the index number of the alarm entry in this list display.
alarm	This is the category of alarms. eqpt represents equipment alarms. dsl represents Digital Subscriber Line (DSL) alarms. enet represents Ethernet alarms. sys represents system alarms.
condition	There is a condition code number for the specific alarm message and a text description for the condition under which the alarm applies.
facility	This is the log facility (local1~local7) on the syslog server where the system is to log this alarm. This is for alarms that send alarms to a syslog server.
snmp	This displays "V" if the system is to send this alarm to an SNMP server. It displays "-" if the system does not send this alarm to an SNMP server.

Table 91 Log Format (continued)

LABEL	DESCRIPTION
syslog	This displays "V" if the system is to send this alarm to a syslog server. It displays "-" if the system does not send this alarm to a syslog server.
severity	This is the alarm severity level (critical, major, minor or info).
clearable	This displays "V" if the alarm clear command removes the alarm from the system. It displays "-" if the alarm clear command does not remove the alarm from the system.

44.8 Alarm History Show Command

Syntax:

```
ras> alarm history show [<severity>|all] [<alarm>|all] [<condition>|all]
[<sdate>|all] [<edate>|all] [for|rev] [detail]
```

where

<severity>	= Alarm severity. info minor major critical
<alarm>	= Alarm category. sys eqpt enet dsl voip
<condition>	= Text description for the condition.
<sdate>	= Start date (yyyy/mm/dd)
<edate>	= End date (yyyy/mm/dd)
[for rev]	= Display order. for: forward; rev: reverse.
[detail]	= Display in-depth alarm information.

This command displays historic alarms by severity, alarm category, alarm condition and/or dates.

The following example displays the historic major and critical level alarms.

```
ras> alarm history show major
no alarm    condition          severity timestamp      source
-----
1 enet      +down              major    01/01 00:00:08 enet 1
2 enet      -down              major    01/01 00:00:11 enet 1
```

44.9 Alarm History Clear Command

Syntax:

```
ras> alarm history clear <alarm>|all <condition>|all
ras> alarm history clear <severity>
```

where

<code><alarm></code>	=	Alarm category. <code>sys eqpt enet dsl voip</code>
<code><condition></code>	=	Text description for the condition.
<code><severity></code>	=	Alarm severity. <code>info minor major critical</code>

This command removes historic alarm entries by alarm category, alarm condition or severity. The following example removes the historic minor level alarms for all alarm categories, and all conditions.

```
ras> alarm history clear minor
```

44.10 Alarm XEdit Command

Syntax:

```
ras> alarm xedit <alarm>|all <cond>|<condcode> <severity> <fac>  
<target>[,<target>] [clearable]
```

where

<code><cond></code>	=	<code>all condition</code> This is the text description for the condition under which the alarm applies. Use the <code>alarm tablelist</code> to find alarm conditions.
<code><condcode></code>	=	The condition code is the number of a specific alarm message. Use the <code>alarm tablelist</code> to find alarm condition codes.
<code><severity></code>	=	Specify an alarm severity level (critical, major, minor or info) for this alarm. Critical alarms are the most severe, major alarms are the second most severe, minor alarms are the third most severe and info alarms are the least severe.
<code><fac></code>	=	The log facility (<code>local1~local7</code>) has the device log the syslog messages to a particular file in the syslog server. Set this if this entry is for sending alarms to a syslog server. See your syslog program's documentation for details.
<code><target></code>	=	<code>snmp syslog all</code> The type of alarm messages that the device is to send (SNMP, syslog or all). You can specify more than one separated by commas.
<code>[clearable]</code>	=	<code>clearable unclearable</code> This sets whether or not the alarm clear command removes the alarm from the system.

This command sets the severity level of an alarm(s) and where the system is to send the alarm(s).



Use the `alarm tablelist` command to display alarm setting details.

The following example creates an alarm report entry that sets all system alarms to the major severity level and sends them to an SNMP server at the local 3 log facility.

```
ras> alarm xedit sys all major local3 syslog
```

44.11 Alarm Cutoff Command

Syntax:

```
ras> alarm cutoff
```

This command cancels an alarm. This stops the sending of the alarm signal current. This is useful in stopping an alarm if you have the alarm output connector pins connected to a visible or audible alarm. The alarm entry remains in the system.

44.12 Alarm Clear Command

Syntax:

```
ras> alarm clear
```

This command erases the clearable alarm entries.

DHCP Commands

This feature is available in STU-C mode only.

This chapter describes how to use the DHCP Relay and DHCP Snoop commands.

45.1 DHCP Relay Commands

Use these commands to configure the DHCP relay feature. See [Chapter 26 on page 181](#) for background information on DHCP relay.

45.1.1 Show Command

Syntax:

```
ras> switch dhcprelay show
```

This command displays whether or not the DHCP relay feature is activated, which relay mode the IES-708-22A is using, the current list of DHCP servers by VLAN, the status of the DHCP relay agent info option 82 feature and the information configured for it.

```
DHCP relay status: disable
DHCP relay mode:  auto
Server list:
index  vid  primary-server      secondary-server
-----
      1    1 (*)212.212.212.212 213.213.213.213
      2    2 (*)214.214.214.214 215.215.215.251

option82 sub-opt1 info (Circuit ID)
-----
      -

option82 sub-opt2 info (Remote ID)
-----
      -
```

45.1.2 Enable Command

Syntax:

```
ras> switch dhcprelay enable
```

This command turns on the DHCP relay feature.

45.1.3 Disable Command

Syntax:

```
ras> switch dhcprelay disable
```

This command turns off the DHCP relay feature.

45.1.4 Server Set Command

Syntax:

```
ras> switch dhcprelay server set <vid> <primary-server> [<secondary-  
server>]
```

where

<vid>	=	The ID of the VLAN served by the specified DHCP server(s).
<primary- server>	=	The IP address of one DHCP server.
<secondary- server>	=	The IP address of a second DHCP server.

This command specifies the DHCP server(s) that serve the specified VLAN. The primary server is required; the secondary server is optional. The IES-708-22A routes DHCP requests to the specified DHCP server(s) according to the `relaymode`. See [Section 45.1.7 on page 279](#).

Use VLAN ID 0 to set up the default DHCP server(s) for all non-listed VLAN.

45.1.5 Server Delete Command

Syntax:

```
ras> switch dhcprelay server delete <vid> [<primary-server>]
```

where

<vid>	=	The ID of the VLAN served by the specified DHCP server(s).
<primary- server>	=	The IP address of one DHCP server.

This command deletes all information about DHCP servers for the specified VLAN. Afterwards, the specified VLAN can use the default DHCP server(s) set up for VLAN ID 0, if any.

45.1.6 Server Active Command

Syntax:

```
ras> switch dhcprelay server active <vid> <active-server>
```

where

- `<vid>` = The ID of the VLAN served by the specified DHCP server(s).
- `<active-server>` = **1**: The primary DHCP server is active.
2: The secondary DHCP server is active.

This command has no effect if the **relaymode** is **both**. If the **relaymode** is **auto**, this command specifies to which DHCP server (the primary one or the secondary one) the IES-708-22A should relay DHCP requests for the selected VLAN.

45.1.7 Relaymode Command

Syntax:

```
ras> switch dhcprelay relaymode <mode>
```

where

- `<mode>` = relay process mode; it controls to which DHCP server(s) the IES-708-22A relays DHCP requests.
- auto** - the IES-708-22A relays DHCP requests to the active server for each VLAN
- both** - the IES-708-22A relays DHCP requests to the primary and secondary server for each VLAN, regardless of which one is active

This command controls how the IES-708-22A routes DHCP requests. The IES-708-22A can route DHCP requests to the active DHCP server for the VLAN, or it can route DHCP requests to all DHCP servers set up for the VLAN.

45.2 DHCP Relay Option 82 (Agent Information) Sub-option 1 (Circuit ID)

Use the following commands to configure the DHCP relay Option 82 (agent information) feature, sub-option 1. This feature applies regardless of whether or not the DHCP relay is on.

45.2.1 Option 82 Sub-option 1 Enable Command

Syntax:

```
ras> switch dhcprelay option82 enable
```

This command turns on the DHCP relay agent information (Option 82 Sub-option 1) feature.

45.2.2 Option 82 Sub-option 1 Disable Command

Syntax:

```
ras> switch dhcprelay option82 disable
```

This command turns off the DHCP relay agent information (Option 82, Sub-option 1) feature.

45.2.3 Option 82 Sub-option 1 Set Command

Syntax:

```
ras> switch dhcprelay option82 set <relay info>
```

where

<relay info> = Up to 23 English keyboard characters of additional information for the IES-708-22A to add to the DHCP requests that it relays to a DHCP server.

Examples of information you could add would be the name of the IES-708-22A or the ISP.

This command adds the specified information for the relay agent.

45.3 DHCP Relay Option 82 (Agent Information) Sub-option 2 (Remote ID)

Use the following commands to configure the DHCP relay Option 82 (agent information) feature, sub-option 2. This feature applies regardless of whether or not the DHCP relay is on.

45.3.1 Option 82 Sub-option 2 Enable Command

Syntax:

```
ras> switch dhcprelay opt82sub2 enable
```

This command turns on the DHCP relay agent information (Option 82, Sub-option 2) feature.

45.3.2 Option 82 Sub-option 2 Disable Command

Syntax:

```
ras> switch dhcprelay opt82sub2 disable
```

This command turns off the DHCP relay agent information (Option 82, Sub-option 2) feature.

45.3.3 Option 82 Sub-option 2 Set Command

Syntax:

```
ras> switch dhcprelay opt82sub2 set <relay info>
```

where

`<relay info>` = Up to 23 English keyboard characters of additional information for the IES-708-22A to add to the DHCP requests that it relays to a DHCP server.

Examples of information you could add would be the name of the IES-708-22A or the ISP.

This command adds the specified information for the relay agent.

45.4 DHCP Snoop Commands

Use these commands to configure or show DHCP snooping settings on the subscriber ports. The system gets the client MAC-IP address information (in the reply from a DHCP server) and stores it in the DHCP snooping table. The system only forwards packets from the clients whose MAC-IP address is in the DHCP snooping table. Packets from unknown IP address(es) are not forwarded (dropped). This feature prevents clients from assigning their own static IP addresses.

45.4.1 DHCP Snoop Enable Command

Syntax:

```
ras> switch dhcpsnoop enable <portlist>
```

where

`<portlist>` = You can specify a single port `<1>`, all ports `<*>` or a list of ports `<1,3,enet1>`. You can also include a range of ports `<1,5,6~8,enet1>`.

This command activates the DHCP snooping feature on the specified port(s). The following example enables DHCP snooping on port 1.

```
ras> switch dhcpsnoop enable 1
```

45.4.2 DHCP Snoop Disable Command

Syntax:

```
ras> switch dhcpsnoop disable <portlist>
```

where

`<portlist>` = You can specify a single port `<1>`, all ports `<*>` or a list of ports `<1,3,enet1>`. You can also include a range of ports `<1,5,6~8,enet1>`.

This command disables the DHCP snooping feature on the specified port(s).

45.4.3 DHCP Snoop Flush Command

Syntax:

```
ras> switch dhcpsnoop flush <portlist>
```

where

<portlist> = You can specify a single port <1>, all ports <*> or a list of ports <1,3,enet1>. You can also include a range of ports <1,5,6~8,enet1>.

This command clears the DHCP snooping binding table on the specified port(s). The system also automatically clears the binding table when you disable DHCP snooping.

45.4.4 DHCP Snoop Show Command

Syntax:

```
ras> switch dhcpsnoop show [<portlist>]
```

where

<portlist> = You can specify a single port <1>, all ports <*> or a list of ports <1,3,enet1>. You can also include a range of ports <1,5,6~8,enet1>.

Use this command to display the current DHCP snooping settings of the specified port(s). The following example displays the settings of ports 1-5.

```
ras> switch dhcpsnoop show 1~5
port  enable
-----
 1     V
 2     -
 3     -
 4     -
 5     -
```

45.4.5 DHCP Counter Statistics Command

Syntax:

```
ras> statistics dhcp counter [<portlist> [clear]]
```

where

<portlist> = You can specify a single port <1>, all ports <*> or a list of ports <1,3,enet1>. You can also include a range of ports <1,5,6~8,enet1>.

Use this command to display a summary of DHCP packets on the specified port(s). The following example displays the settings of port 1.

```

ras> switch dhcpsnoop show 1~5
port  enable
-----
  1    V
  2    -
  3    -
  4    -
  5    -

```

Each field is described in the following table.

port	=	The selected DSL port number(s).
discover	=	The number of DHCP Discover packets on this port.
offer	=	The number of DHCP Offer packets on this port.
request	=	The number of DHCP Request packets on this port.
ack	=	The number of DHCP Ack packets on this port.
overflow	=	The DHCP server can assign up to 32 IP addresses at one time to each port. This field displays the number of requests from DHCP clients above this limit.

45.4.6 DHCP Snoop Statistics Command

Syntax:

```
ras> statistics dhcp snoop [portlist]
```

where

[portlist]	=	You can specify a single port <1>, all ports <*> or a list of ports <1,3,enet1>. You can also include a range of ports <1,5,6~8,enet1>.
------------	---	---

Use this command to look at the DHCP snooping table on the specified port(s). The following example displays the settings of port 1.

```

ras> statistics dhcp snoop 1
port overflow      mac          ip
-----

```

Each field is described in the following table.

port	=	The selected DSL port number(s).
overflow	=	The DHCP server can assign up to 32 IP addresses at one time to each port. This field displays the number of requests from DHCP clients above this limit.
mac	=	The MAC address of a client on this port to which the DHCP server assigned an IP address.
ip	=	The IP address assigned to a client on this port.

IEEE 802.1Q Tagged VLAN Commands

This chapter describes the IEEE 802.1Q Tagged VLAN commands.

46.1 Introduction to VLANs

See [Chapter 17 on page 139](#) for more background information on VLANs.

46.2 IEEE 802.1Q Tagging Types

There are two kinds of tagging:

- Explicit Tagging

A VLAN identifier is added to the frame header that identifies the source VLAN.

- Implicit Tagging

The MAC (Media Access Control) number, the port or other information is used to identify the source of a VLAN frame.

The IEEE 802.1Q Tagged VLAN uses both explicit and implicit tagging.

It is important for the IES-708-22A to determine what devices are VLAN-aware and VLAN-unaware so that it can decide whether to forward a tagged frame (to a VLAN-aware device) or first strip the tag from a frame and then forward it (to a VLAN-unaware device).

46.3 Filtering Databases

A filtering database stores and organizes VLAN registration information useful for switching frames to and from the IES-708-22A. A filtering database consists of static entries (Static VLAN or SVLAN table).

46.3.1 Static Entries (SVLAN Table)

Static entry registration information is added, modified and removed by administrators only.

46.4 IEEE VLAN1Q Tagged VLAN Configuration Commands

These commands allow you to configure and monitor the IEEE 802.1Q Tagged VLAN.

46.4.1 VLAN Port Show Command

Syntax:

```
ras> switch vlan portshow [portlist]
```

where

[portlist] = You can specify a single port <1>, all ports <*> or a list of ports <1,3,enet1>. You can also include a range of ports <1,5,6~8,enet1>.

This command displays the port's IEEE 802.1Q VLAN tag settings.

The following example shows the settings for DSL port 3.

```
ras> switch vlan portshow 3
port pvid priority frametype
-----
3    1          0          all
```

46.4.2 VLAN PVID Command

Syntax:

```
ras> switch vlan pvid <portlist> <pvid>
```

where

<portlist> = You can specify a single port <1>, all ports <*> or a list of ports <1,3,enet1>. You can also include a range of ports <1,5,6~8,enet1>.

<pvid> = The VLAN ID. Valid parameter range = [1 – 4094].

This command sets a default VLAN ID for all untagged packets that come in through the specified port.

The following example sets the default VID of port 1 to 200.

```
ras> switch vlan pvid 1 200
```

46.4.3 VLAN Priority Command

Syntax:

```
ras> switch vlan priority <portlist> <priority>
```

where

- `<portlist>` = You can specify a single port: `<1>`, all ports: `<*>`, a list of ports: `<1,3,enet1>`, you can also include a range of ports: `<1,5,6~8,enet1>`.
- `<priority>` = This is the priority value (0 to 7) to use for incoming frames with an IEEE 802.1Q VLAN tag.

This command sets the priority of incoming frames with an IEEE 802.1Q VLAN tag.

The following example sets a priority of three for frames (with an IEEE 802.1Q VLAN tag) that come in on DSL port 2.

```
ras> switch vlan priority 2 3
```

46.4.4 VLAN Set Command

Syntax:

```
ras> switch vlan set <vid> <portlist>:<F<T|U>|X|N> [<portlist>:<F<T|U>|X|N>
...] [name]
```

where

- `<vid>` = The VLAN ID [1 – 4094].
- `<portlist>` = You can specify a single port: `<1>`, all ports: `<*>`, a list of ports: `<1,3,enet1>`, you can also include a range of ports: `<1,5,6~8,enet1>`.
- `<F<T|U>|` = The `<F>` stands for a fixed registrar administration control flag and registers a `<port #>` to the static VLAN table with `<vid>`.
For a fixed port, you also have to specify `<T|U>`, the tag control flag.
`<T>` has the device add an IEEE 802.1Q tag to frames going out through this port(s).
`<U>` has the device send frames out through this port(s) without an IEEE 802.1Q tag.
- `|X|N>` = This is the registrar administration control flag.
`<X>` stands for forbidden and blocks a `<port #>` from joining the static VLAN table with `<vid>`.
`<N>` stands for normal and confirms registration of the `<port #>` to the static VLAN table with `<vid>`. This is used in GVRP applications.
- `[name]` = A name to identify the SVLAN entry.

This command adds or modifies an entry in the static VLAN table. Use the `switch vlan show` command to display your configuration. An example of a configuration is shown next.

46.4.4.1 Modify a Static VLAN Table Example

The following is an example of how to modify a static VLAN table.

```
ras> switch vlan set 2000 1:FU
ras> switch vlan set 2001 2:FU
```

46.4.4.2 Forwarding Process Example

Tagged Frames

- 1 First the IES-708-22A checks the VLAN ID (VID) of tagged frames or assigns temporary VIDs to untagged frames (see [Section 46.4.2 on page 286](#)).
- 2 The IES-708-22A checks the frame's source MAC address against the MAC filter.
- 3 The IES-708-22A then checks the VID in a frame's tag against the SVLAN table.
- 4 The IES-708-22A notes what the SVLAN table says (that is, the SVLAN tells the IES-708-22A whether or not to forward a frame and if the forwarded frames should have a tag).
- 5 Frames might be dropped if they are sent to a CPE (customer premises equipment) DSL device that does not accept tagged frames.

Untagged Frames

- 1 An untagged frame comes in from the LAN.
- 2 The IES-708-22A checks the frame's source MAC address against the MAC filter.
- 3 The IES-708-22A checks the PVID table and assigns a VID and IEEE 802.1Q priority.
- 4 The IES-708-22A ignores the port from which the frame came, because the IES-708-22A does not send a frame to the port from which it came. The IES-708-22A also does not forward frames to "forbidden" ports.
- 5 If after looking at the SVLAN, the IES-708-22A does not have any ports to which it will send the frame, it drops the frame.

46.4.5 VLAN Frame Type Command

Syntax:

```
ras> switch vlan frametype <portlist> <all|tag>
```

where

- | | | |
|-------------------------------|---|---|
| <code><portlist></code> | = | You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3>. You can also include a range of DSL ports <1,5,6~8>. |
| <code><all tag></code> | = | Use <code>tag</code> to have the specified port(s) accept only incoming Ethernet frames that have a VLAN tag.

Use <code>all</code> to have the specified port(s) accept both tagged and untagged incoming Ethernet frames. |

This command sets the specified DSL ports to accept VLAN tagged Ethernet frames, or both tagged and untagged Ethernet frames.



The IES-708-22A accepts both tagged and untagged incoming frames on the Ethernet ports.

The following example sets the IES-708-22A to accept only VLAN tagged Ethernet frames on DSL port 3.

```
ras> switch vlan frametype 3 tag
```

46.4.6 VLAN CPU Show Command

Syntax:

```
ras> switch vlan cpu show
```

This command displays the management VLAN (CPU). You can only use ports that are members of this management VLAN to manage the IES-708-22A.

The following example shows the management VLAN.

```
ras> switch vlan cpu show
host join vlan: 1
host priority: 0
```

46.4.7 VLAN CPU Set Command

Syntax:

```
ras> switch vlan cpu set <vid> [priority]
```

where

<vid>	=	The VLAN ID. Valid parameter range = [1 – 4094].
[<priority>]	=	This is the priority value (0 to 7) to use for incoming frames with an IEEE 802.1Q VLAN tag.

This command sets the management VLAN (CPU). You can only use ports that are members of this management VLAN in order the IES-708-22A.

The following example sets VLAN ID 2 to be the CPU (management) VLAN.

```
ras> switch vlan cpu set 2
```

46.4.8 Configuring Management VLAN Example



After the following example configuration, you must connect to the first Ethernet port through a VLAN aware device that is using the proper VLAN ID in order to perform management.

By default, the IES-708-22A's DSL ports are members of the management VLAN (VID 1). The following procedure shows you how to configure a tagged VLAN that limits management access to just one Ethernet port.



Use the console port to configure the IES-708-22A if you misconfigure the management VLAN and lock yourself out.

- 1 Use the `switch vlan set` command to configure a VLAN ID (VID 3 in this example) for managing the IES-708-22A (the “management” or “CPU” VLAN).

```
ras> switch vlan set 3 enet1:FT
```

- 2 Use the `switch vlan1q vlan cpu` command to set VID 3 as the management VLAN.

```
ras> switch vlan cpu set 3
```

46.4.9 VLAN Delete Command

Syntax:

```
ras> switch vlan delete <vlanlist>
```

where

`<vlanlist>` = You can specify a single VID: `<1>`, all VIDs: `<*>`, a list of VIDs: `<1,3>`, you can also include a range of VIDs: `<1,5,6~8>`.

This command deletes the specified VLAN ID entry from the static VLAN table. The following example deletes entry 2 in the static VLAN table.

```
ras> switch vlan delete 2
```

46.5 VLAN Enable

Syntax:

```
ras> switch vlan enable <vid>
```

This command enables the specified VLAN ID in the SVLAN (Static VLAN) table.

46.6 VLAN Disable

Syntax:

```
ras> switch vlan disable <vid>
```

This command disables the specified VLAN ID in the SVLAN (Static VLAN) table.

46.6.1 VLAN Show Command

Syntax:

```
ras> switch vlan show <vlanlist>
```

where

<vlanlist> = You can specify a single VID: <1>, all VIDs: <*>, a list of VIDs: <1,3>, you can also include a range of VIDs: <1,5,6~8>.

This command shows information about the specified port's VLAN settings.

The following example shows the settings for all VIDs.

```

ras> switch vlan show *
vid name          F:fixed X:forbidden N:normal   U:untag T:tag
-----
1 -
    enabled        12345678 12
                   FFFFFFFF FF
                   UUUUUUUU UU

```


MAC Commands

This chapter describes how to configure the IES-708-22A's MAC commands.

47.1 MAC Commands Overview

Use the MAC commands to configure MAC filtering or limit the MAC count.

47.2 MAC Filter Commands

This feature is available in STU-C mode only.

Use the MAC filter to control from which MAC (Media Access Control) addresses frames can (or cannot) come in through a port.

47.2.1 MAC Filter Show Command

Syntax:

```
ras> switch mac filter show [portlist]
```

where

[portlist] = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command displays the MAC filtering status (V for enabled, - for disabled) and the fixed source MAC addresses on the specified DSL port(s) or on all DSL ports if no port is specified.

The following example displays the MAC filtering mode, status and the fixed source MAC addresses on DSL port 5.

```

ras> sw mac filter show 5
    status:V, enable mac filter function.
    status:-, disable mac filter function.
port  mode  status mac
-----
  5  accept   -    00:a0:c5:12:34:56

```

47.2.2 MAC Filter Enable Command

Syntax:

```
ras> switch mac filter enable <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command turns on the MAC filtering feature on the specified DSL port(s) or on all DSL ports if no port is specified.

The following example turns on the MAC filtering feature on DSL port 5.

```
ras> switch mac filter enable 5
```

47.2.3 MAC Filter Disable Command

Syntax:

```
ras> switch mac filter disable <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command turns off the MAC filtering feature on the specified DSL port(s) or on all DSL ports if no port is specified.

The following example turns off the MAC filtering feature on DSL port 5.

```
ras> switch mac filter disable 5
```

47.2.4 MAC Filter Mode Command

Syntax:

```
ras> switch mac filter mode <port> <accept|deny>
```

where

<accept|deny> = accept = Only allow frames from MAC addresses that you specify and block frames from other MAC addresses.
deny = Block frames from MAC addresses that you specify and allow frames from other MAC addresses.

This command sets whether the IES-708-22A allows or blocks access for the MAC addresses you specify.

The following example sets DSL port 5 to allow frames from the MAC addresses specified for DSL port 5.

```
ras> switch mac filter mode 5 accept
```

47.2.5 MAC Filter Set Command

Syntax:

```
ras> switch mac filter set <port> <mac> [<mac> <mac> ...]
```

where

<port>	=	The number of a DSL port.
<mac>	=	The source MAC address in "00:a0:c5:12:34:56" format.

This command adds an allowed source MAC address on the specified DSL port.

The following example adds source MAC address 00:a0:c5:12:34:56 for DSL port 5.

```
ras> switch mac filter set 5 00:a0:c5:12:34:56
```

47.2.6 MAC Filter Delete Command

Syntax:

```
ras> switch mac filter delete <port> <mac> [<mac> <mac> ...]
```

where

<port>	=	The number of a DSL port.
<mac>	=	The source MAC address in "00:a0:c5:12:34:56" format.

This command removes a configured source MAC address from the DSL port that you specify.

The following example removes the source MAC address of 00:a0:c5:12:34:56 from the MAC filter for DSL port 5.

```
ras> switch mac filter delete 5 00:a0:c5:12:34:56
```

47.3 MAC Count Commands

This feature is available in STU-C mode only.

Use MAC count commands to limit how many MAC addresses may be dynamically learned. MAC count commands are listed next. When the MAC filter accept mode is enabled (see [Section 47.2 on page 293](#)), the IES-708-22A ignores the MAC count setting and accepts all of the MAC addresses listed for the port in the MAC filter settings.

47.3.1 MAC Count Show Command

Syntax:

```
ras> switch mac count show [portlist]
```

where

[portlist] = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command displays the MAC count settings on the specified DSL port(s) or on all DSL ports if no port is specified.

The following example displays the MAC count settings for DSL port 4.

```
ras> switch mac count show 4
port status count
----
4      V      128
```

47.3.2 MAC Count Enable Command

Syntax:

```
ras> switch mac count enable <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command enables the MAC count filter on the specified DSL port(s). When the MAC filter accept mode is enabled (see [Section 47.2 on page 293](#)), the IES-708-22A ignores the MAC count setting and accepts all of the MAC addresses listed for the port in the MAC filter settings.

The following example turns on the MAC count filter on DSL port 4.

```
ras> switch mac count enable 4
```

47.3.3 MAC Count Disable Command

Syntax:

```
ras> switch mac count disable <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command disables the MAC filtering feature on the specified DSL port(s).

The following example turns off the MAC count filter on DSL port 4.

```
ras> switch mac count disable 4
```

47.3.4 MAC Count Set Command

Syntax:

```
ras> switch mac count set <portlist> <count>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

<count> = Set the limit for how many MAC addresses that a port may dynamically learn. For example, if you are configuring port 2 and you set this field to "5", then only five devices with dynamically learned MAC addresses may access port 2 at any one time. A sixth device would have to wait until one of the five learned MAC addresses ages out.

The valid range is from "1" to "128".

This command sets the limit for how many MAC addresses may be dynamically learned on the specified DSL port(s).

The following example sets the MAC count filter to allow up to 50 MAC addresses to be dynamically learned on DSL port 7.

```
ras> switch mac count set 7 50
```


IGMP Commands

This chapter describes the IGMP snooping and filtering commands.

48.1 Multicast Overview

See [Chapter 18 on page 147](#) for background information on this feature.

48.2 IGMP Snoop Commands

Use the IGMP snoop commands to enable or disable IGMP proxy or IGMP snooping.

48.2.1 IGMP Snoop Show Command

Syntax:

```
ras> switch igmpsnoop show
```

This command displays the IGMP mode (proxy, snooping or disabled).

The following is an example.

```
ras> switch igmpsnoop show
IGMP Snooping is Disable
```

48.2.2 IGMP Snoop Enable Command

(STU-R mode only) Syntax:

```
ras> switch igmpsnoop enable
```

This command turns on IGMP snooping, which tells the device to passively learn multicast groups.

The following example sets the device to use IGMP snooping.

```
ras> switch igmpsnoop enable
```

(STU-C mode only) Syntax:

```
ras> switch igmpsnoop enable <proxy|snooping>
```

This command turns on IGMP proxy or snooping. Use proxy to have the device use IGMP proxy. Use IGMP snooping to have the device passively learn multicast groups.

The following example sets the device to use IGMP proxy.

```
ras> switch igmpsnoop enable proxy
```

48.2.3 IGMP Snoop Disable Command

Syntax:

```
ras> switch igmpsnoop disable
```

This command turns off IGMP snooping.

The following example sets the device to not use IGMP snooping.

```
ras> switch igmpsnoop disable
```

48.3 IGMP Filter Commands

This feature is available in STU-C mode only.

Use the IGMP filter commands to define IGMP filter profiles and assign them to DSL ports.

IGMP filter profiles allow you to control access to IGMP multicast groups. You can have a service available to a specific IGMP multicast group. You can configure an IGMP filter profile for an IGMP multicast group that has access to a service (like a SIP server for example). Then you can assign the IGMP filter profile to DSL ports that are allowed to use the service.

48.3.1 IGMP Filter Show Command

Syntax:

```
ras> switch igmpfilter show [portlist]
```

where

[portlist]	=	You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
------------	---	---

This command displays which IGMP filter profile a DSL port(s) is using.

The following example displays which IGMP filter profile DSL port 5 is using.

```

ras> switch igmpfilter show 5
port                profile
-----
5                   DEFVAL

```

48.3.2 IGMP Filter Set Command

Syntax:

```
ras> switch igmpfilter set <portlist> <name>
```

where

- | | | |
|-------------------------------|---|--|
| <code><portlist></code> | = | You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> . |
| <code><name></code> | = | The name of an IGMP filter profile. |

This command sets a DSL port(s) to use an IGMP filter profile.

The following example sets DSL port 5 to use the voice IGMP filter profile.

```

ras> switch igmpfilter set 5 voice

```

48.3.3 IGMP Filter Profile Set Command

Syntax:

```
ras> switch igmpfilter profile set <name> <index> <startip> <endip>
```

where

- | | | |
|------------------------------|---|--|
| <code><name></code> | = | Specify a name to identify the IGMP filter profile (you cannot change the name of the DEFVAL profile). You can use up to 31 English keyboard characters; spaces are not allowed. |
| <code><index></code> | = | The number (1~16) to identify a multicast IP address range. |
| <code><startip></code> | = | Type the starting multicast IP address for a range of multicast IP addresses that you want to belong to the IGMP filter profile. |
| <code><endip></code> | = | Type the ending multicast IP address for a range of IP addresses that you want to belong to the IGMP filter profile. |

If you want to add a single multicast IP address, enter it in both the **Start IP** and **End IP** fields.

This command configures an IGMP filter profile.

The following example configures an IGMP filter profile named voice with a range of multicast IP addresses (index 1) from 224.1.1.10 to 224.1.1.44.

```
ras> switch igmpfilter profile set test1 1 224.1.1.10 224.1.1.44
```

48.3.4 IGMP Filter Profile Delete Command

Syntax:

```
ras> switch igmpfilter profile delete <name>
```

where

<name> = The name of an IGMP filter profile.

This command removes an IGMP filter profile.

The following example removes the voice IGMP filter profile.

```
ras> switch igmpfilter profile delete voice
```

48.3.5 IGMP Filter Profile Show Command

Syntax:

```
ras> switch igmpfilter profile show [<name>]
```

where

[<name>] = The name of an IGMP filter profile or all of the IGMP filter profiles <*>.

This command displays an IGMP filter profile's settings.

The following example displays the voice IGMP filter profile's settings.

```

ras> switch igmpfilter profile show voice
      profile  index      startip      endip
-----
      voice    1      224.1.1.10    224.1.1.44
      voice    2      0.0.0.0      0.0.0.0
      voice    3      0.0.0.0      0.0.0.0
      voice    4      0.0.0.0      0.0.0.0
      voice    5      0.0.0.0      0.0.0.0
      voice    6      0.0.0.0      0.0.0.0
      voice    7      0.0.0.0      0.0.0.0
      voice    8      0.0.0.0      0.0.0.0
      voice    9      0.0.0.0      0.0.0.0
      voice   10      0.0.0.0      0.0.0.0
      voice   11      0.0.0.0      0.0.0.0
      voice   12      0.0.0.0      0.0.0.0
      voice   13      0.0.0.0      0.0.0.0
      voice   14      0.0.0.0      0.0.0.0
      voice   15      0.0.0.0      0.0.0.0
      voice   16      0.0.0.0      0.0.0.0

```

48.4 IGMP Bandwidth Commands

This feature is available in STU-C mode only.

Use the IGMP bandwidth commands to set up bandwidth budgets for specific multicast channels.

48.4.1 IGMP Bandwidth Default Command

Syntax:

```
ras> switch igmpsnoop bandwidth default <bandwidth>
```

where

<bandwidth> = Allowed bandwidth between 1 and 100000 kbps (kilo bits per second).

This command sets the default bandwidth for multicast channels for which you have not configured bandwidth requirements yet. Multicast bandwidth settings on channels (using the `switch igmpsnoop bandwidth set` command) have higher priority over this default setting.

48.4.2 IGMP Bandwidth Set Command

Syntax:

```

ras> switch igmpsnoop bandwidth set <index> <start-mcast-ip> <end-mcast-ip>
<bandwidth>

```

where

<code><index></code>	=	1..96; a unique number for this setting.
<code><start-mcast-ip></code>	=	224.0.0.0..239.255.255.255; the beginning of the multicast range.
<code><end-mcast-ip></code>	=	224.0.0.0..239.255.255.255; the end of the multicast range. It must be greater than <code><start-mcast-ip></code> .
<code><bandwidth></code>	=	1..100000, in units of kbps

This command configures bandwidth allocation for the multicast channel(s). For multicast channel(s) for which you have not configured bandwidth settings, the default multicast bandwidth setting applies (see the `switch igmpsnoop bandwidth default` command).

48.4.3 IGMP Bandwidth Delete Command

Syntax:

```
ras> switch igmpsnoop bandwidth delete <index>
```

where

<code><index></code>	=	1..96; a unique number for this setting.
----------------------------	---	--

This command removes the specified multicast bandwidth configuration profile.

48.5 IGMP Bandwidth Port Commands

This feature is available in STU-C mode only.

Use the IGMP bandwidth port commands to set up bandwidth budgets for multicast traffic on specific ports.

48.5.1 IGMP Bandwidth Port Disable Command

Syntax:

```
ras> switch igmpsnoop bandwidth port disable <portlist>
```

where

<code><portlist></code>	=	You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> .
-------------------------------	---	--

This command deactivates multicast bandwidth settings of the specified port.

48.5.2 IGMP Bandwidth Port Enable Command

Syntax:

```
ras> switch igmpsnoop bandwidth port enable <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command activates multicast bandwidth setting on the specified port.

48.5.3 IGMP Bandwidth Port Set Command

Syntax:

```
ras> switch igmpsnoop bandwidth port set <portlist> <bandwidth>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

<bandwidth> = 1..100000, in units of kbps

This command sets the bandwidth allowed for multicast traffic on the specified port(s). It does not automatically enable it, however.

48.5.4 IGMP Bandwidth Port Show Command

Syntax:

```
ras> switch igmpsnoop bandwidth port show <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command displays the multicast bandwidth setting on the specified port(s) and whether or not this setting is active. The following example displays the bandwidth budget for port 1.

```

ras> switch igmpsnoop bandwidth port show 1
port  enable  bandwidth
-----
  1      -      4096

```

48.6 IGMP Count Limit Commands

This feature is available in STU-C mode only.

Use these commands to limit the number of IGMP groups a subscriber on a port can join. This allows you to control the distribution of multicast services (such as content information distribution) based on service plans and types of subscription.

IGMP count is useful for ensuring the service quality of high bandwidth services like video or Internet Protocol television (IPTV). IGMP count can limit how many channels (IGMP groups) the subscriber connected to a DSL port can use at a time. If each channel requires 4~5 Mbps of download bandwidth, and the subscriber's connection supports 11 Mbps, you can use IGMP count to limit the subscriber to using just 2 channels at a time. This also effectively limits the subscriber to using only two IPTVs with the DSL connection.

48.6.1 IGMP Count Disable Command

Syntax:

```
ras> switch igmpsnoop igmpcount disable <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command turns off the IGMP count limit for the specified DSL port(s).

The following command turns off the IGMP count limit for port 4.

```
ras> switch igmpsnoop igmpcount disable 4
```

48.6.2 IGMP Count Enable Command

Syntax:

```
ras> switch igmpsnoop igmpcount enable <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command turns on the IGMP count limit for the specified DSL port(s).

The following command turns on the IGMP count limit for port 4.

```
ras> switch igmpsnoop igmpcount enable 4
```

48.6.3 IGMP Count Set Command

Syntax:

```
ras> switch igmpsnoop igmpcount set <portlist> <count>
```

where

- | | | |
|-------------------------------|---|--|
| <code><portlist></code> | = | You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> . |
| <code><count></code> | = | 0..16; the maximum number of IGMP groups subscribers on the specified port(s) can join. |

This command sets the IGMP count limit for the specified DSL port(s).

The following command sets a IGMP count limit of 2 for port 4.

```
ras> switch igmpsnoop igmpcount set 4 2
```

48.6.4 IGMP Count Show Command

Syntax:

```
ras> switch igmpsnoop igmpcount show [portlist]
```

where

- | | | |
|-------------------------|---|--|
| <code>[portlist]</code> | = | You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> . |
|-------------------------|---|--|

This command displays the IGMP count limit setting status for the specified DSL port(s). The following example displays the IGMP count limit settings for ports 1-5.

```
ras> switch igmpsnoop igmpcount show 1~5
port enable count
----
1      -      5
2      -      5
3      -      5
4      -      5
5      -      5
```

48.7 IGMP Snoop Statistics Commands

Use the IGMP Snoop Statistics commands to display current IGMP settings and statistics.

48.7.1 IGMP Snoop Info Statistics Command

Syntax:

```
ras> statistics igmpsnoop info [clear]
```

This command displays the current IGMP settings and the number of IGMP-related packets received. The following figure shows an example.

```

ras> statistics igmpsnoop info
IGMP Snooping/Proxy is Disable
number of query      = 0
number of report     = 0
number of leave      = 0
number of groups     = 0

```

48.7.2 IGMP Group Statistics Command

Syntax:

```
ras> statistics igmpsnoop group [<vid> <mcast_ip>]
```

where

<vid>	=	The VLAN ID [1 – 4094].
<mcast_ip>	=	The multicast IP address.

This command displays the information about IGMP groups learned on the system, specified VLAN, or specified multicast address on the specified VLAN(s).

```

ras> statistics igmpsnoop group
[group info]
group          vid port
-----

```

48.7.3 IGMP Port Info Statistics Command

Syntax:

```
ras> statistics igmpsnoop port info [<portlist> [clear]]
```

where

<portlist>	=	You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
clear	=	Clears the IGMP port info statistics on the specified ports.

This command displays the number of IGMP-related packets received on the specified port(s). Optionally, it also clears these counters. The following figure shows the number of IGMP packets for port 1.

```

ras> statistics igmpsnoop port info 1
port  group_cnt query_cnt  join_cnt leave_cnt
-----
1           0           0           0           0

```

48.7.4 IGMP Port Group Statistics Command

Syntax:

```
ras> statistics igmpsnoop port group <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command displays the IGMP groups a port joins. The following figure shows an example for port 1.

```

ras> statistics igmpsnoop port group 1
port  vid mcast_ip      source ip
-----

```


Packet Filter Commands

This feature is available in STU-C mode only.

This chapter describes the packet filter commands.

49.1 Packet Filter Commands

Use the following packet filter commands to filter out specific types of packets on specific ports.

49.1.1 Packet Filter Show Command

Syntax:

```
ras> switch pktfilter show [portlist]
```

where

[portlist] = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command displays the packet type filter settings on the specified DSL port(s) or on all DSL ports if no port is specified.

The following example displays the packet type filter settings for DSL ports 1 and 2. “V” displays for the packet types that the IES-708-22A is to accept on the port. “-” displays for packet types that the IES-708-22A is to reject on the port (packet types that are not listed are accepted). When you use PPPoE only, “#” appears for all of the packet types. With PPPoE only, the IES-708-22A rejects all packet types except for PPPoE (packet types that are not listed are also rejected).

```
ras> switch pktfilter show 1~2
V: pass through, -: filter out, #:Don't care
E: Enable, D: Disable
port pppoe ip arp netbios dhcp eapol igmp | PPPoE-Only
-----
1  V  V  V  V  V  V  V  |  D
2  V  V  V  V  V  V  V  |  D
```

49.1.2 Packet Filter Set Command

Syntax:

```
ras> switch pktfilter set <portlist> [filter]
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

[filter] = [pppoe] Reject PPPoE packets. (Point-to-Point Protocol over Ethernet) relies on PPP and Ethernet. PPPoE is a specification for connecting the users on an Ethernet to the Internet through a common broadband medium, such as a single DSL line, wireless device or cable modem.

[ip] Reject IP packets. Internet Protocol. The underlying protocol for routing packets on the Internet and other TCP/IP-based networks.

[arp] Reject ARP packets. Address Resolution Protocol is a protocol for mapping an Internet Protocol address (IP address) to a physical computer address that is recognized in the local network.

[netbios] Reject NetBIOS packets. (Network Basic Input/Output System) are TCP or UDP packets that enable a computer to connect to and communicate with a LAN.

[dhcp] Reject DHCP packets. Dynamic Host Configuration Protocol automatically assigns IP addresses to clients when they log on. DHCP centralizes IP address management on central computers that run the DHCP server program. DHCP leases addresses, for a period of time, which means that past addresses are “recycled” and made available for future reassignment to other systems.

[eapol] Reject EAPoL packets. EAP (Extensible Authentication Protocol, RFC 2486) over LAN. EAP is used with IEEE 802.1x to allow additional authentication methods (besides RADIUS) to be deployed with no changes to the access point or the wireless clients.

[igmp] Reject IGMP packets. Internet Group Management Protocol is used when sending packets to a specific group of hosts.

[none] Accept all packets.

This command sets the packet type filter for the specified DSL port(s).

The following example sets DSL port 5 to reject ARP, PPPoE and IGMP packets.

```
ras> switch pktfilter set 5 arp pppoe igmp
```

49.1.3 Packet Filter PPPoE Only Command

Syntax:

```
ras> switch pktfilter pppoeonly <portlist>
```

This command sets the IES-708-22A to allow only PPPoE traffic on the specified DSL port(s). The system will drop any non-PPPoE packets.

The following example sets DSL port 1 to accept only PPPoE packets.

```
ras> switch pktfilter pppoeonly 1
```


IP Commands

This chapter shows you how to use the (standard shell) IP commands to configure the IP (Internet Protocol) parameters.

50.1 IP Commands Introduction

Use the IES-708-22A's management IP addresses to manage it through the network.

50.2 IP Settings and Default Gateway

Use the following command sequence to set the IES-708-22A's IP settings for the Ethernet 1 and 2, and DSL ports, VID and default gateway. With the Ethernet 1 and 2, and DSL ports, you must connect to the IES-708-22A through a port that is a member of the management (CPU) VLAN in order to perform in-band management.

```
ras> ip set <ip>[/<netmask>]  
ras> ip gateway <gateway ip>  
ras> config save
```

where

- | | | |
|---------------------------------|---|--|
| <code><ip></code> | = | The IP address you want to configure for the IES-708-22A. |
| <code><netmask></code> | = | The bit number of the subnet mask of the IP address you want to configure for IES-708-22A's uplink, downlink and IES-708-22A DSL ports. To find the bit number, convert the subnet mask to binary and add all of the 1's together. Take "255.255.255.0" for example. 255 converts to eight 1's in binary. There are three 255's, so add three eights together and you get the bit number (24). |
| <code><gateway ip></code> | = | The default gateway IP address you want to configure for the IES-708-22A. |

The first command changes the IP settings for the IES-708-22A's uplink, downlink and IES-708-22A DSL ports. If you don't enter the subnet mask, the system automatically computes the subnet mask.

The second command changes the default gateway (next hop). This tells the IES-708-22A where to send packets that have a destination IP address that is not on the same subnet as the IES-708-22A's IP address.

The third command saves the new configuration to the nonvolatile memory.

For example, use the following command sequence sets the IES-708-22A to have 192.168.1.3 as the IP address, 255.255.255.0 for the subnet mask and 192.168.1.233 for the default gateway.

```
ras> ip set 192.168.1.3/24
ras> ip gateway 192.168.1.233
ras> config save
```

The IES-708-22A leaves the factory with a default management IP address of 192.168.1.1 and a subnet mask of 255.255.255.0, (ff:ff:ff:00 in hexadecimal notation), and the default gateway set at 192.168.1.254. Make sure that you configure the IP parameters correctly before you connect a IES-708-22A to the network, otherwise, you may interrupt services already running.

50.3 General IP Commands

The following is a list of general IP commands that help with the management of the IP parameters.

50.3.1 Show

Syntax:

```
ras> ip show
```

Use the command to display the current management IP settings.

50.3.2 Ping Command

Syntax:

```
ras> ip ping <ip> [count]
```

This is an IP facility to check for network functionality by sending an echo request to another IP host and waiting for the reply.

50.3.3 Route Set Command

Syntax:

```
ras> ip route set <dst ip>[/netmask] <gateway ip> [metric] <name>
ras> ip route set default <gateway ip> <metric>
```


where

<code><dst ip></code>	=	The destination IP address of packets that this static route is to route.
<code>[/netmask]</code>	=	The destination subnet mask of packets that this static route is to route.
<code><gateway ip></code>	=	The IP address of the gateway that you want to send the packets through.
<code>[metric]</code>	=	The metric (hop count) of this static route.
<code><name></code>	=	A name to identify this static route. Up to 31 English keyboard characters. Spaces and tabs are not allowed.
<code>default</code>	=	Use this to configure the IES-708-22A's default route.

This command defines a new, static IP forwarding route or edits an existing one.

50.3.4 Route Delete Command

Syntax:

```
ras> ip route delete <dst ip>[/netmask]
```

where

<code><dst ip></code>	=	The destination IP address of packets to which this static route applies.
<code>[/netmask]</code>	=	The destination subnet mask of packets to which this static route applies.

This command removes a static, IP forwarding route.

50.3.5 Route Show Command

Syntax:

```
ras> ip route show
```

This command displays the IES-708-22A's routing table.

An example is shown next.

ras> ip route show				
index	dest	gateway	metric	name
1	192.168.1.0/24	192.168.1.1	1	
2	default	192.168.1.254	1	

50.3.6 ARP Show Command

Syntax:

```
ras> ip arp show
```

This command displays the IES-708-22A's IP Address Resolution Protocol table. This is the list of IP addresses and matching MAC addresses that the IES-708-22A has resolved.

An example is shown next.

```
ras> ip arp show
ip                mac address
-----
172.23.14.254    00:0c:db:30:ac:00
172.23.15.254    00:0c:db:30:ac:00
```

50.3.7 ARP Flush Command

Syntax:

```
ras> ip arp flush
```

This command clears the IES-708-22A's IP Address Resolution Protocol table.

50.4 Statistics IP Command

Syntax:

```
ras> statistics ip
```

This command shows the statistics for the CPU IP traffic.

An example is shown next.

```
ras> statistics ip
[Ethernet]
inet      : 172.23.14.253      netmask: 0.0.0.0
broadcast: 172.23.255.255     mtu: 1500
in octet  : 10728504  in unicast : 738  in multicast   : 232488
in discard : 0  in error   : 0  in unknown proto: 0
out octet  : 41361  out unicast: 861  out multicast   : 0
out discard: 0  out error  : 0
```

The following table explains these counters.

Table 92 Statistics IP Command

LABEL	DESCRIPTION
inet	This field displays the IES-708-22A's IP address in the network.
netmask	This field displays the subnet mask of the network.
broadcast	This field displays the broadcast address in the network.

Table 92 Statistics IP Command (continued)

LABEL	DESCRIPTION
mtu	This field displays the maximum size of each data packet, in bytes, in this network. If a larger packet arrives, the IES-708-22A divides it into smaller fragments.
in octet	This field displays the number of octets of data received.
in unicast	This field displays the number of unicast packets received.
in multicast	This field displays the number of multicast packets received.
in discard	This field displays the number of packets received that were discarded.
in error	This field displays the number of packets received that had errors.
in unknown proto	This field displays the number of packets received that had unrecognized IP protocol numbers.
out octet	This field displays the number of octets of data sent.
out unicast	This field displays the number of unicast packets sent.
out multicast	This field displays the number of multicast packets sent.
out discard	This field is reserved.
out error	This field is reserved.

Firmware and Configuration File Maintenance

This chapter tells you how to upload a new firmware and/or configuration file for the IES-708-22A.

51.1 Firmware and Configuration File Maintenance Overview

The IES-708-22A's built-in FTP server allows you to use any FTP client (for example, ftp.exe in Windows) to upgrade IES-708-22A firmware or configuration files. The firmware or configuration file upgrade is done during operation (run-time).



Do not turn off the power to the IES-708-22A during the file transfer process, as it may permanently damage your IES-708-22A.



The IES-708-22A automatically restarts when the upgrade process is complete.

51.2 Filename Conventions

The configuration file (called config-0) contains the factory default settings in the menus such as password, IP address, VLANs and so on. The configuration file arrives with a “rom” filename extension.

The OS (Operating System) firmware (sometimes referred to as the “ras” file) has a “bin” filename extension. With many FTP and clients, the filenames are similar to those shown next.

```
ftp> put firmware.bin ras
```

This is a sample from a FTP session to transfer the computer file `firmware.bin` to the IES-708-22A.

```
ftp> get config-0 config.txt
```

This is a sample from a FTP session to transfer the IES-708-22A's current configuration file (including the configuration files of all the IES-708-22A) to the computer file `config.txt`.

If your FTP client does not allow you to have a destination filename different than the source, you will need to rename them as the IES-708-22A only recognizes the names in [Table 93 on page 322](#). Be sure you keep unaltered copies of the files for later use.

The following table is a summary. Please note that the internal filename refers to the filename on the IES-708-22A and the external filename refers to the filename not on the IES-708-22A, that is, on your computer, local network or FTP site and so the name (but not the extension) may vary. After uploading new firmware, use the `sys version` command on the IES-708-22A to confirm that you have uploaded the correct firmware version.

Table 93 Filename Conventions

FILE TYPE	INTERNAL NAME	EXTERNAL NAME	DESCRIPTION
Configuration File	<code>config-0</code>	<code>*.dat</code>	This is the configuration filename for the IES-708-22A.
Firmware	<code>ras</code>	<code>*.bin</code>	This is the Operating System firmware on the IES-708-22A.
Default Configuration File	<code>rom-0</code>	<code>--</code>	This is the default ROM file (in binary format) that is used for emergency recovery from the console port.

51.3 Editable Configuration File

The configuration file can be downloaded as a plain-text (ASCII) file. Edits to the configuration can be made to this file before it is uploaded again to the IES-708-22A.



You can change the “.dat” file to a “.txt” file and still upload it back to the IES-708-22A.



Do not upload any invalid files to the IES-708-22A's configuration file, as it may permanently damage your IES-708-22A.

51.3.1 Editable Configuration File Backup

Configure your system, and then use FTP to backup the plain-text configuration file onto your computer. Do the following to backup the configuration file:

Use an FTP client to connect to the IES-708-22A.

```
C:\> ftp <IES-708-22A IP address>
Type your user name and press [ENTER].
User (172.23.15.86:(none)): admin
```

Enter the management password (1234 by default).

```
Password: 1234
230 Logged in
```

Use `get` to transfer the configuration file to the computer. The configuration file on the system (that you want to backup to the computer) is named `config-0`.

```
ftp> get config-0
```

Quit FTP.

```
ftp> quit
```

51.3.2 Edit Configuration File

Open the `config-0` file via Notepad (see the following example) and edit to a desired configuration.



Ensure that any changes you make to the commands in the configuration file correspond to the commands documented in this User's Guide. The wrong configuration file or an incorrectly configured configuration file can render the device inoperable.

```
#### sysinfo
sys info hostname ""
sys info location ""
sys info contact ""
#### snmp
sys snmp getcommunity public
sys snmp setcommunity public
sys snmp trapcommunity public
sys snmp trustedhost 0.0.0.0
sys snmp trapdst set 1 0.0.0.0 162
sys snmp trapdst set 2 0.0.0.0 162
sys snmp trapdst set 3 0.0.0.0 162
sys snmp trapdst set 4 0.0.0.0 162
#### server
sys server enable telnet
sys server enable ftp
sys server enable web
sys server enable icmp
sys server port telnet 23
sys server port ftp 21
sys server port web 80
```

----- Snip -----



The `sys user set admin` command is encrypted and you cannot edit it in a text editor. Attempting to edit it and upload it to the IES-708-22A will lock you out after the system restarts. If this happens you will have to use the console port to restore the default configuration file, and all of your configuration changes will be lost.

51.3.3 Editable Configuration File Upload

You can upload the configuration file by following the steps below.

Use an FTP client to connect to the IES-708-22A.

```
C:\> ftp <IES-708-22A IP address>
Type your user name and press [ENTER].
User (172.23.15.86:(none)): admin
```


Enter the management password (1234 by default).

```
Password: 1234
230 Logged in
```

Use `put` to transfer the configuration file from the computer. The configuration file on the system is named `config-0`.

```
ftp> put xxx.dat config-0
```

Quit FTP.

```
ftp> quit
```

Wait for the update to finish. The system restarts automatically.

51.4 Firmware File Upgrade

Use the following procedure to upload firmware to the IES-708-22A.

Use an FTP client to connect to the IES-708-22A.

```
C:\> ftp <IES-708-22A IP address>
Type your user name and press [ENTER].
User (172.23.15.86:(none)): admin
```

Enter the management password (1234 by default).

```
Password: 1234
230 Logged in
```

Transfer the firmware file to the IES-708-22A. The firmware file on your computer (that you want to put onto the IES-708-22A) is named `firmware.bin`. The internal firmware file on the IES-708-22A is named `ras`.

```
ftp> put firmware.bin ras
```

Quit FTP.

```
ftp> quit
```

Wait for the update to finish. The IES-708-22A restarts automatically.

This chapter covers Simple Network Management Protocol (SNMP) with the IES-708-22A.

52.1 SNMP Commands

Use these commands to configure SNMP settings. See [Chapter 35 on page 219](#) for more information about SNMP.

52.1.1 Get Community Command

Syntax:

```
ras> sys snmp getcommunity <community>
```

where

<community> = The password for the incoming Get- and GetNext- requests from the management station.

Enter this command with the community to set the password.

52.1.2 Set Community Command

Syntax:

```
ras> sys snmp setcommunity <community>
```

where

<community> = The password for the incoming Set- requests from the management station.

Enter this command with the community to set the password.

52.1.3 Trusted Host Set Command

Syntax:

```
ras> sys snmp trustedhost <ip>
```

where

`<ip>` = The IP address of a trusted host.

Use this command to add the host IP address to the list of trusted hosts. If you enter a trusted host, your IES-708-22A will only respond to SNMP messages from this address. If you leave the trusted host set to 0.0.0.0 (default), the IES-708-22A will respond to all SNMP messages it receives, regardless of source.

52.1.4 Trap Community Command

Syntax:

```
ras> sys snmp trapcommunity <community>
```

where

`<community>` = The password sent with each trap to the SNMP manager.

Enter this command with the community to set the password.

52.1.5 Trap Destination Set Command

Syntax:

```
ras> sys snmp trapdst set <index> <ip> [<port>]
```

where

`<index>` = The number of the trap server (1~4).

`<ip>` = The IP address of the trap server.

`[<port>]` = The port number upon which the trap server listens for SNMP traps. The IES-708-22A uses the default of 162 if you do not specify a trap port.

Use this command specify the IP address (and port number) of a trap server to which the IES-708-22A sends SNMP traps. If you leave the trap destination set to 0.0.0.0 (default), the IES-708-22A will not send any SNMP traps.

52.1.6 Show SNMP Settings Command

Syntax:

```
ras> sys snmp show
```

This command displays the current SNMP get community, set community, trap community, trusted hosts and trap destination settings.

DSL Commands

This chapter describes some of the commands that allow you to configure and monitor the DSL ports.

53.1 DSL Port Commands

Use these commands to configure the DSL ports. See [Chapter 13 on page 103](#) for background information on DSL and SHDSL.

53.1.1 DSL Port Show Command

Syntax:

```
ras> shdsl show [portlist]
```

where

[portlist] = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command shows the activation status, DSL mode, maximum upstream and downstream rate settings, and DSL profile of each DSL port. It also provides subscriber information for the port.

The following example displays information on DSL port 1.

```

ras> shdsl show 1
port enable mode min/max rate  pam   profile
-----
   1    V    stur   192/  2304 auto  DEFVAL

Subscriber Info:
port name                               tel
-----
   1  -                               -

```

53.1.2 DSL Port Enable Command

Syntax:

```
ras> shdsl enable <portlist>
```

where

`<portlist>` = You can specify a single DSL port `<1>`, all DSL ports `<*>` or a list of DSL ports `<1,3,5>`. You can also include a range of ports `<1,5,6~8>`.

This command forcibly enables the specified DSL port(s).

53.1.3 DSL Port Disable Command

Syntax:

```
ras> shdsl disable <portlist>
```

where

`<portlist>` = You can specify a single DSL port `<1>`, all DSL ports `<*>` or a list of DSL ports `<1,3,5>`. You can also include a range of ports `<1,5,6~8>`.

This command forcibly disables the specified DSL port(s).



The factory default of all ports is enabled.

53.1.4 DSL Port Profile Show Command

Syntax:

```
ras> shdsl profile show [profile]
```

where

`<profile>` = A profile name.

This command displays the specified DSL profile or all DSL profiles if you do not specify one.

The following example displays the DSL DEFVAL profile.

```
ras> shdsl profile show DEFVAL
01. DEFVAL
  max rate      (Kbps): 2304
  min rate      (Kbps): 192
  annex mode    : annexb
  wire pair      : 2wire
  line probe     : lp_off
  curr margin    (dB): 0
  worst margin   (dB): 0
```

See [Section 53.1.5 on page 331](#) for a description of each attribute.

53.1.5 DSL Port Profile Set Command

Syntax:

```
shdsl profile set <profile> <min-rate> <max-rate>
[annexa|annexb 2wire|4wire|mpair4
[lp_off | lp_on_cur <curr-margin> | lp_on_wc <worst-margin>]]
```

where

<profile>	=	The descriptive name for the profile.
<min-rate>	=	The minimum transmission rate in Kbps. (192~5696)
<max-rate>	=	The maximum transmission rate in Kbps. (192~5696)
annexa annexb	=	The region setting, annexb is the default. annexa = DSL over POTS (G.992.1 Annex A). annexb = DSL over ISDN (G.992.1 Annex B).
2wire 4wire mpair4	=	The wire pair number. 2wire = a normal connection using a single DSL port's two wires, this is the default. 4wire = a 4-wire group (two DSL ports grouped together). mpair4 = an 8-wire group (four DSL ports grouped together).
lp_off	=	Disable line probe. The DSL line card and subscriber modem use line probes to determine the best possible transmission rate. This is used in rate adaptation. This is the default line probe mode. If you disable line probe, the system skips the rate adaptation phase to shorten connection set up time.
lp_on_cur	=	Enable line probe with current target Signal to Noise Ratio margin.
lp_on_wc	=	Enable line probe with worst case target Signal to Noise Ratio margin.
<curr-margin>	=	The current condition target Signal to Noise Ratio margin, -10 ~ 21 in dB.
<worst-margin>	=	The worst case Signal to Noise Ratio margin, -10 ~ 21 in dB.

The profile contains information on SHDSL line configuration. Each entry in this table reflects a parameter defined by a manager, which can be used to configure the DSL line. After you create a DSL profile, assign it to DSL ports.

You must specify at least the profile's name and minimum and maximum rates. The default value will be used for any of the other fields that you omit.

The minimum transmission rate must be less than or equal to the maximum transmission rate.

When using 4 or 8-wire groups, you must apply the profile to every port in a specific set of ports. For example, a profile for a 4-wire group can be used with ports 1,2 or 3,4 but not with ports 2,3 or 4,5. A profile for an 8-wire group can be used with ports 1,2,3,4 or 5,6,7,8 but not with ports 2,3,4,5 or 4,5,6,7.

The following example creates a premium profile (named gold) for providing subscribers with very high connection speeds. The minimum transmission rate is 2112 Kbps and the maximum transmission rate is 4096. It sets two ports to function as a 4-wire group. It uses G.992.1 Annex A (DSL over POTS). It turns on line probes and has them use the current condition target signal to noise ratio margin which it sets to 5 db.

```
ras> shdsl profile set gold 2112 4096 annexa 4wire lp_on_cur 5
```

53.1.6 DSL Port Profile Delete Command

Syntax:

```
ras> shdsl profile delete <profile>
```

where

`<profile>` = A profile name.

This command allows you to delete an individual DSL profile by its name. You cannot delete a profile that is assigned to any of the DSL ports in the IES-708-22A. Assign a different profile to any DSL ports that are using the profile that you want to delete, and then you can delete the profile.

The following example deletes the gold DSL profile.

```
ras> shdsl profile delete gold
```

53.1.7 DSL Port Profile Map Command

Syntax:

```
ras> shdsl profile map <portlist> <profile> [pam mode]
```

where

`<portlist>` = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

- `<profile>` = The profile that will define the settings of this port.
- `[pam mode]` = The type of Trellis Coded Pulse Amplitude Modulation (TC-PAM) the IES-708-22A uses.

Auto: The IES-708-22A selects the type of TC-PAM automatically.

PAM16: The IES-708-22A uses 16-TCPAM.

PAM32: The IES-708-22A uses 32-TCPAM.

This command assigns a specific DSL profile one or more ports.

53.1.8 DSL Port Name Command

Syntax:

```
ras> shdsl name <portlist> <name>
```

where

- `<portlist>` = You can specify a single DSL port `<1>`, all DSL ports `<*>` or a list of DSL ports `<1,3,5>`. You can also include a range of ports `<1,5,6~8>`.
- `<name>` = A descriptive name for the port. You can use up to 31 alphanumeric characters, hyphens (-), or underscores (_).

This command sets the name of one or more DSL port(s).

The following example sets DSL port 5 to have the name super.

```
ras> shdsl name 5 super
```

53.1.9 DSL Port Tel Command

Syntax:

```
ras> shdsl tel <portlist> <tel>
```

where

- `<portlist>` = You can specify a single DSL port `<1>`, all DSL ports `<*>` or a list of DSL ports `<1,3,5>`. You can also include a range of ports `<1,5,6~8>`.
- `<tel>` = A DSL subscriber's telephone number. You can use up to 15 English keyboard characters (including spaces and hyphens).

This command records the telephone number of a DSL subscriber's telephone number.

The following example records the telephone number 12345678 for DSL port 5.

```
ras> shdsl tel 5 12345678
```

53.1.10 DSL Port Loopback Command

Syntax:

```
ras> shdsl loopback <portlist> <f5> <vpi> <vci>
```

where

- | | | |
|--------------------------------------|---|---|
| <code><portlist></code> | = | You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>. |
| <code><f5></code> | = | Use f5 to perform an OAMF5 loopback test on the specified DSL port. An Operational, Administration and Maintenance Function 5 test is used to test the connection between two DSL devices. First, the DSL devices establish a virtual circuit. Then the local device sends an ATM F5 cell to be returned by the remote DSL device (both DSL devices must support ATM F5 in order to use this test). |
| <code><vpi> <vci></code> | = | When you perform an OAMF5 loopback test, specify a VPI/VCI. |

This command has the IES-708-22A perform an OAMF5 loopback test on the specified DSL port(s).

The following example has the IES-708-22A perform an OAMF5 loopback test on DSL port 1's PVC at VPI 0 and VCI 33.

```
ras> shdsl loopback 1 f5 0 33
port[1] OAM F5 loopback test: failed
```

53.2 Statistics DSL Commands

Use these commands to display DSL port statistics.

53.2.1 DSL Statistics Show Command

Syntax:

```
ras> statistics shdsl show [portlist]
```

where

[portlist] = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command displays DSL port connection statistics including the wire pair, status (V for enabled, - for disabled), actual rate, up time and the number of errored seconds.

The following example displays connection statistics for port 1.

```

ras> statistics shdsl show 1
              actual rate
port wire pair status (kbps) up time error second(15M/24H)
-----
  1      2wire   V           3776 00000:20:44:20          0/0

```

53.2.2 DSL Port Linerate Command

Syntax:

```
ras> statistics shdsl linerate <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command shows the transmission rates on a DSL port.

An example is shown next.

```

ras> statistics shdsl linerate 1
[port 1]
link           = link_up
min rate       = 5696 kbps
max rate       = 5696 kbps
actual rate    = 3776 kbps
noise margin   = 26 dB
attenuation    = 1 dB
linkup count   = 1

```

The following table explains these counters.

Table 94 DSL Port Linerate Command Counters

LABEL	DESCRIPTION
link	This displays the connection status of the DSL link.
min rate	This is the minimum rate (in Kbps) of the DSL line.
max rate	This is the maximum rate (in Kbps) of the DSL line.

Table 94 DSL Port Linerate Command Counters (continued)

LABEL	DESCRIPTION
actual rate	This is the rate (in Kbps) at which the port has been sending and receiving data.
noise margin	This is the DSL line's noise margin measured in decibels (dB).
attenuation	This is the reduction in amplitude of the DSL signals, measured in decibels (dB).
linkup count	This is the number of times the IES-708-22A has established a link on this port.

Information obtained prior to training to steady state transition will not be valid or will be old information.

53.2.3 DSL Port Lineinfo Command

Syntax:

```
ras> statistics shdsl lineinfo <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command displays the information that is reported by the remote device in an Inventory Response message. If information is not provided, the field is blank.

An example is shown next.

```

ras> statistics shdsl lineinfo 1
[port 1]
  unit STUC
  shdsl version      : 10
  vendor list        :
  vendor issue       :
  vendor id          : IFX
  vendor model       : SOC16-SDFE4
  vendor serial      : 003
  vendor other       :
  software version   : 091000
  equipment code     :

```

The following table explains these counters.

Table 95 DSL Port Lineinfo Command Counters

LABEL	DESCRIPTION
unit	This field displays the role of the remote device in the connection.
shdsl version	This field displays the version of the HDSL2/SHDSL standard implemented.
vendor list	This field displays the vendor list number.
vendor issue	This field displays the vendor issue number.
vendor id	This field displays the vendor ID.

Table 95 DSL Port Lineinfo Command Counters (continued)

LABEL	DESCRIPTION
vendor model	This field displays the vendor model number.
vendor serial	This field displays the vendor serial number.
vendor other	This field displays the other vendor information.
software version	This field displays the vendor software version.
equipment code	This field displays the equipment code conforming to ANSI T1.213, Coded Identification of Equipment Entities.

Information obtained prior to training to steady state transition will not be valid or will be old information.

The vendor ID, vendor version number and product serial number are obtained from vendor ID fields (see ITU-T G.994.1) or R-MSG51 (see T1.413).

53.2.4 DSL Port Lineperf Command

Syntax:

```
ras> statistics shdsl lineperf <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command shows the line performance counters of a DSL port.

An example is shown next.

```

ras> statistics shdsl lineperf 1
[Port 1]
Performance since boot up
          STUC      STUR
es          :         1         0 seconds
ses         :         1         0 seconds
crc         :         0         0
losws       :        10         0 seconds
uas         :         0         0 seconds
segment anomaly :         0         0
segment defect :         0         0

Performance since link up
es          :         1 seconds
ses         :         1 seconds
crc         :         0
losws       :         5 seconds
uas         :         0 seconds
segment anomaly :         0
segment defect :         0

```

These counters display line performance data that has been accumulated since the system started and since the last connection was established. In the list above, STUC refers to errors detected by the STU-C, and STUR refers to errors detected by the STU-R.

The following table explains these counters.

Table 96 DSL Port Lineperf Command Counters

LABEL	DESCRIPTION
es	The number of Errored Seconds that have occurred on this DSL port. An Errored Second is defined as a count of 1-second intervals during which one or more CRC anomalies are declared and/or one or more LOSW defects are declared.
ses	The number of Severely Errored Seconds that have occurred on this DSL port. A Severely Errored Second is defined as a count of 1-second intervals during which at least 50 CRC anomalies are declared or one or more LOSW defects are declared. (50 CRC anomalies during a 1-second interval is equivalent to a 30% errored frame rate for a nominal frame length.)
crc	The number of CRC anomalies that have occurred on this DSL port.
losws	The number of Loss of Sync Word Seconds that have occurred on this DSL port.
uas	The number of UnAvailable Seconds that have occurred on this DSL port. An Unavailable Second is a count of 1-second entrails for which the SHDSL line is unavailable. The SHDSL line becomes unavailable at the onset of 10 contiguous SESs. The 10 SESs are included in the unavailable time. Once unavailable, the SHDSL line becomes available at the onset of 10 contiguous seconds with no SESs. The 10 s with no SESs are excluded from unavailable time.
segment anomaly	The number of Segment Anomalies that have occurred on this DSL port. A segment anomaly indicates that a regenerator operating on a segment has received corrupted data and therefore the regenerated data is unreliable.
segment defect	The number of Segment Defects that have occurred on this DSL port. A segment defect indicates that a regenerator has lost SHDSL synchronization and therefore the regenerated data is unavailable.

53.2.5 DSL Port 15 Minute Performance Command

Syntax:

```
ras> statistics shdsl 15mperf <portlist> [count <0..96>]
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

[count <0..96>] = Specify for which 15-minute interval (0~96) you want to display performance statistics. 0 is the current 15 minutes.

This command displays line performance statistics for the current and specified number of previous 15-minute periods.

An example is shown next.

```

ras> statistics shdsl 15mperf 1 2
Port 1 Current 15 Min elapsed time: 605 secs (Link Down)
  Current 15 Min PM:      STUC      STUR
                        ES:         0         0
                        SES:        0         0
                        CRC:        0         0
                        LOSWS:      0         0
                        UAS:        0         0
  History 15 Min PM-1:    STUC      STUR
                        ES:         0         0
                        SES:        0         0
                        CRC:        0         0
                        LOSWS:      0         0
                        UAS:        0         0
  History 15 Min PM-2:    STUC      STUR
                        ES:         0         0
                        SES:        0         0
                        CRC:        0         0
                        LOSWS:      0         0
                        UAS:        0         0

```

In the list above, STUC refers to data detected by the STU-C, and STUR refers to data detected by the STU-R. See [Table 96 on page 338](#) for an explanation of these counters.

These counters are also used in the alarm profiles (see [Section 53.3 on page 340](#)).

53.2.6 DSL Port 1 Day Performance Command

Syntax:

```
ras> statistics shdsl 1dayperf <portlist>
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

This command displays line performance statistics for the current and previous four days.

An example is shown next.

```

ras> statistics shdsl 1dayperf 1
Port 1 the current day elapsed time: 23141 secs (Link Down)
      1 Day Perf      STUC      STUR
      ES:             0         0
      SES:            0         0
      CRC:            0         0
      LOSWS:          0         0
      UAS:            0         0
Port 1 the previous 0 day
      1 Day Perf      STUC      STUR
      ES:             0         0
      SES:            0         0
      CRC:            0         0
      LOSWS:          0         7
      UAS:            0         0

```

In the list above, STUC refers to data detected by the STU-C, and STUR refers to data detected by the STU-R. See [Table 96 on page 338](#) for an explanation of these counters.

53.3 Alarm Profile Commands

Configure alarm profiles to set alarm settings and thresholds for the DSL ports.

53.3.1 Alarm Profile Show Command

Syntax:

```
ras> shdsl alarmprofile show [profile]
```

where

[profile] = The name of an alarm profile.

Displays the settings of the specified alarm profile (or all of them if you do not specify one).

The following example displays the default alarm profile (DEFVAL).

```

ras> shdsl alarmprofile show DEFVAL
01. DEFVAL
ThreshLoopAttenuation: 0
ThreshSNRMargin       : 0
ThreshES               : 0
ThreshSES              : 0
ThreshCRCAnomalies    : 0
ThreshLOSWS           : 0
ThreshUAS              : 0

```

See [Section 53.3.2 on page 341](#) for a description of each attribute.

53.3.2 Alarm Profile Set Command

Syntax:

```
ras> shdsl alarmprofile set <profile> [atten <atten>] [snrmgn <snrmgn>]
--> [es <es>] [ses <ses>] [crc <crc>] [losws <losws>] [uas <uas>]
```

where

<profile>	=	A name for the alarm profile (up to 31 English keyboard characters).
<atten>	=	The permitted loop attenuation of a port, 0~127
<snrmgn>	=	The permitted signal to noise ratio margin, 0~15.
<es>	=	The number of Errored Seconds (0~900) that are permitted to occur within 15 minutes.
<ses>	=	The number of Severely Errored Seconds (0~900) that are permitted to occur within 15 minutes.
<crc>		The number of Cyclic Redundancy Checking anomalies that are permitted to occur within 15 minutes.
<losws>		The number of Loss Of Sync Word Seconds (0~900) that are permitted to occur within 15 minutes.
<uas>	=	The number of UnAvailable Seconds (0~900) that are permitted to occur within 15 minutes.

This command configures DSL port alarm thresholds. The IES-708-22A sends an alarm trap and generates a syslog entry when the thresholds of the alarm profile are exceeded.

Configure alarm profiles first and then use the `shdsl alarmprofile map` command to use them with specific DSL ports.

The following example sets an alarm profile named SESalarm that has the IES-708-22A send an alarm trap and generate a syslog whenever the connection's number of severely errored seconds exceeds three within a 15 minute period.

```
ras> shdsl alarmprofile set SESalarm ses 3
```

53.3.3 Alarm Profile Delete Command

Syntax:

```
ras> shdsl alarmprofile delete <profile>
```

where

<profile>	=	The name of an alarm profile.
-----------	---	-------------------------------

This command allows you to delete an individual alarm profile by its name. You cannot delete the DEFVAL alarm profile.

The following example deletes the `SESalarm` alarm profile.

```
ras> shdsl alarm profile delete SESalarm
```

53.3.4 Alarm Profile Map Command

Syntax:

```
ras> shdsl alarmprofile map <portlist> <profile> <span|stuc|stur|*>
```

where

<code><portlist></code>	=	You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> .
<code><profile></code>	=	The name of an alarm profile.
<code></code>	=	The type of alarm profile the specified alarm profile is for the specified ports. The alarm profile can apply for the whole span (<code>span</code>), the STU-C end point (<code>stuc</code>), the STU-R end point (<code>stur</code>), or all STU-C and STU-R end points (<code>*</code>).

Sets the IES-708-22A to use an (already-configured) alarm profile with the specified DSL ports.

The following example sets the IES-708-22A to use the `SESalarm` alarm profile for the STU-C end point with DSL port 5.

```
ras> shdsl alarmprofile map 5 SESalarm stuc
```

53.3.5 Alarm Profile Showmap Command

Syntax:

```
ras> shdsl alarmprofile showmap <portlist>
```

where

<code><portlist></code>	=	You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> .
-------------------------------	---	--

Displays which alarm profiles the IES-708-22A is set to use for specific (or all) DSL ports.

The following example displays which alarm profile the IES-708-22A is set to use for DSL ports 1-3.

```
ras> shdsl alarmprofile showmap 1~3
```

```
port span/endpoint alarm profile name
```

port	span/endpoint	alarm profile name
1	span	DEFVAL
1	stuc	
1	stur	
2	span	DEFVAL
2	stuc	
2	stur	
3	span	DEFVAL
3	stuc	
3	stur	

Virtual Channel Management

This chapter shows you how to use commands to configure virtual channels.

54.1 Virtual Channel Management Overview

See [Chapter 13 on page 103](#) for background information on virtual channels and ATM QoS.

54.2 Virtual Channel Profile Commands

Use the following commands to configure virtual channel profiles.

54.2.1 Show Virtual Channel Profile Command

Syntax:

```
ras> shdsl vcprofile show [profile]
```

where

[profile]	=	The name of the virtual channel profile (up to 31 English keyboard characters).
-----------	---	---

Displays the settings of the specified virtual channel profile (or all of them if you do not specify one).

54.2.2 Set Virtual Channel Profile Command

Syntax:

```
ras> shdsl vcprofile set <vcprofile> <vc|llc> <ubr|cbr> <pcr> <cdvt>
ras> shdsl vcprofile set <vcprofile> <vc|llc> <vbr(rt-vbr)|nrt-vbr> <pcr>
<cdvt> <scr> <bt>
```

where

<vcprofile>	=	The name of the virtual channel profile (up to 31 English keyboard characters). You cannot change the name of the DEFVAL or DEFVAL_VC profiles.
<vc llc>	=	The type of encapsulation (vc or llc).

<ubr cbr>	=	The ubr (unspecified bit rate) or cbr (constant bit rate) or ATM traffic class.
<pcr>	=	Peak Cell Rate (150 to 300000), the maximum rate (cells per second) at which the sender can send cells.
[cdvt]	=	Cell Delay Variation Tolerance is the accepted tolerance of the difference between a cell's transfer delay and the expected transfer delay (number of cells). 0 to 255 cells or * (means 0).
<vbr (rt-vbr) nrt-vbr>	=	The real-time (vbr) or non real-time (nrt-vbr) Variable Bit Rate ATM traffic class.
<scr>	=	The Sustained Cell Rate sets the average cell rate (long-term) that can be transmitted (cells per second). SCR applies with the vbr traffic class.
<bt>	=	Burst Tolerance this is the maximum number of cells that the port is guaranteed to handle without any discards (number of cells). BT applies with the vbr traffic class.

This command creates a virtual channel profile. After you create a virtual channel profile, you can assign it to any of the DSL ports in the IES-708-22A.

The following example creates a virtual channel profile named gold that uses LLC encapsulation. It uses constant bit rate and has the maximum rate (peak cell rate) set to 300,000 cells per second. The acceptable tolerance of the difference between a cell's transfer delay and the expected transfer delay (CDVT) is set to 5 cells.

```
ras> shdsl vcprofile set gold llc cbr 300000 5
```

The following example creates a virtual channel profile named silver that uses VC encapsulation. It uses real-time variable bit rate and has the maximum rate (peak cell rate) set to 250,000 cells per second. The acceptable tolerance of the difference between a cell's transfer delay and the expected transfer delay (CDVT) is set to 5 cells. The average cell rate that can be transmitted (SCR) is set to 100,000 cells per second. The maximum number of cells that the port is guaranteed to handle without any discards (BT) is set to 200.

```
ras> shdsl vcprofile set silver vc vbr 250000 5 100000 200
```

The following example creates a virtual channel profile named economy that uses LLC encapsulation. It uses unspecified bit rate and has the maximum rate (peak cell rate) set to 50,000 cells per second. The acceptable tolerance of the difference between a cell's transfer delay and the expected transfer delay (CDVT) is set to 100 cells.

```
ras> shdsl vcprofile set gold llc cbr 50000 100
```

54.2.3 Delete Virtual Channel Profile Command

Syntax:

```
ras> shdsl vcprofile delete <vcprofile>
```

where

<vcprofile> = The name of the virtual channel profile (up to 31 English keyboard characters). You cannot delete the DEFVAL or DEFVAL_VC profiles.

You cannot delete a virtual channel profile that is assigned to any of the DSL ports. Assign a different profile to any DSL ports that are using the profile that you want to delete, and then you can delete the profile.

The following example deletes the silver virtual channel profile.

```
ras> shdsl vcprofile delete silver
```

54.3 PVC Channels

Channels (also called Permanent Virtual Circuits or PVCs) let you set priorities for different services or subscribers. You can define up to eight channels on each DSL port and use them for different services or levels of service. You set the PVID that is assigned to untagged frames received on each channel. You also set an IEEE 802.1p priority for each of the PVIDs. In this way you can assign different priorities to different channels (and consequently the services that get carried on them or the subscribers that use them). Use the following commands to define channels.

54.3.1 PVC Show Command

Syntax:

```
ras> shdsl pvc show [<portlist> [<vpi> <vci>]]
```

where

<portlist> = You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.

[<vpi> <vci>] = The VPI and VCI of an individual PVC.

This command allows you to display the PVC parameters of the specified DSL port(s) or all of the DSL ports if you do not specify any.

54.3.2 PVC Set Command

Syntax:

```
ras> shdsl pvc set <portlist> <vpi> <vci> <super |vid = 1..4094 <priority>>
<DS vcprofile[,US vcprofile]>
```

where

<portlist>	=	You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI setting can be 0 to 255.
<vci>	=	The VCI setting can be 32 to 65535 if the vpi is 0 or 1 to 65535 if the vpi is not 0.
<super vid	=	Enable the super channel option to allow a channel forward frames belonging to multiple VLAN groups (that are not assigned to other channels). The IES-708-22A forwards frames belonging to VLAN groups that are not assigned to specific channels to the super channel. The super channel functions in the same way as the channel in a single channel environment. One port can have only one super channel. The default VID (1 to 4094). Each PVC must have a unique VID since the IES-708-22A forwards traffic back to the subscribers based on the VLAN ID. You must assign a default VID (1 to 4094) and IEEE 802.1p default priority (0 to 7) to normal channels. Each PVC must have a unique VID (since the IES-708-22A forwards traffic back to the subscribers based on the VLAN ID).
<priority>	=	This is the priority value (0 to 7) to add to incoming frames without a (IEEE 802.1p) priority tag.
DS vcprofile	=	Assign a VC profile to use for this channel's downstream traffic shaping.
[,US vcprofile]>	=	Assign a VC profile to use for policing this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.

This command allows the configuration of a PVC (permanent virtual circuit) for one or a range of DSL ports.

The following example sets a PVC on DSL port 1 with VPI 1, VCI 34, default VID 100 priority 3. It sets the “platinum” profile for downstream traffic shaping and a VC profile named “plus” for upstream traffic policing.

```
ras> shdsl pvc set 1 1 34 100 3 platinum,plus
```


54.3.3 PVC Delete Command

Syntax:

```
ras> shdsl pvc delete <portlist> <vpi> <vci>
```

where

- | | | |
|--|---|--|
| <code><portlist></code> | = | You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> . |
| <code>[<vpi> <vci>]</code> | = | The VPI and VCI of an individual PVC. |

This command deletes the specified PVC channel.

54.4 Priority-based PVCs

This feature is available in STU-C mode only.

A PPVC (Priority-based PVC) allows you to give different priorities to PVCs that are members of the same VLAN.

The IES-708-22A uses eight priority queues (also called levels) for the member PVCs. The system maps frames with certain IEEE 802.1p priorities to a PVC with a particular priority queue. See [Chapter 57 on page 387](#) for the factory default mapping.

Use these commands to configure PPVCs and add and remove member PVCs.

54.4.1 PPVC Set Command

Syntax:

```
ras> shdsl ppvc set <portlist> <vpi> <vci> <encap> <pvid> <priority>
```

where

- | | | |
|-------------------------------|---|--|
| <code><portlist></code> | = | You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> . |
| <code><vpi></code> | = | The VPI setting can be 0 to 255. |
| <code><vci></code> | = | The VCI setting can be 32 to 65535 if the vpi is 0 or 1 to 65535 if the vpi is not 0. This PVC channel is for internal use. The operator does not need to create this PVC on the subscriber's device (the CPE). |
| <code><encap></code> | = | The type of encapsulation: llc, vcmux |
| <code><pvid></code> | = | Type a PVID (Port VLAN ID) to assign to untagged frames received on this PPVC. |
| <code><priority></code> | = | This is the priority value (0 to 7) to add to incoming frames without a (IEEE 802.1p) priority tag. |

This command creates a PPVC.

The following example creates a PPVC with VPI 8 and VCI 35 for port 5. The PPVC uses llc encapsulation and default VID 25. Any frames received without an IEEE 802.1p priority tag will be assigned a priority of 3. The IES-708-22A uses this PVC channel internally. This PVC is not needed on the subscriber's device.

```
ras> shdsl ppvc set 5 8 35 llc 25 3
```

54.4.2 PPVC Member Set Command

Syntax:

```
ras> shdsl ppvc member set <portlist> <vpi> <vci> <member vpi> <member vci>  
<DS vcprofile[,US vcprofile]> <level>
```

where

<portlist>	=	The port(s) of the PPVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the PPVC.
<vci>	=	The VCI of the PPVC. This PVC channel is for internal use. The subscriber does not need to create this PVC.
<member vpi>	=	The VPI of the individual PVC that you are adding to the PPVC. The VPI setting can be 0 to 255.
<member vci>	=	The VCI of the individual PVC that you are adding to the PPVC. The VCI setting can be 32 to 65535 with a VPI of 0 or 1 to 65535 if the VPI is not 0. The subscriber's device must create this PVC.
DS vcprofile	=	Assign a VC profile to use for this channel's downstream traffic shaping.
[,US vcprofile]>	=	Assign a VC profile to use for policing this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.
<level>	=	The priority queue (0~7) to use for this PVCs traffic. 7 is the highest priority.

This command adds a member PVC to a PPVC. You must create the PPVC before you use this command to add a member.



Only the member PVCs need to be created on the subscriber's device.

The following example adds a PVC to a PPVC with VPI 8 and VCI 35 for port 5. The PVC uses VPI 8 and VCI 36. It sets the DEFVAL profile for downstream traffic shaping and for upstream traffic policing. It uses priority queue 2.

```
ras> shdsl ppvc member set 5 8 35 8 36 DEFVAL,DEFVAL 2
```

54.4.3 PPVC Member Delete Command

Syntax:

```
ras> shdsl ppvc member delete <portlist> <vpi> <vci> <member vpi>
--> <member vci>
```

where

<portlist>	=	The port(s) of the PPVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the PPVC.
<vci>	=	The VCI of the PPVC.
<member vpi>	=	The VPI of the individual PVC that you are removing from the PPVC.
<member vci>	=	The VCI of the individual PVC that you are removing from the PPVC.

This command removes a PVC from a PPVC.

The following example removes a PVC that uses VPI 8 and VCI 36 from a PPVC with VPI 8 and VCI 35 for port 5.

```
ras> shdsl ppvc member delete 5 8 35 8 36
```

54.4.4 PPVC Member Show Command

Syntax:

```
ras> shdsl ppvc member show [<portlist> [<vpi> <vci>]]
```

where

<portlist>	=	The port(s) of the PPVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the PPVC.
<vci>	=	The VCI of the PPVC.

<member vpi> = The VPI of the individual PVC that you are displaying.
 <member vci> = The VCI of the individual PVC that you are displaying.

This command displays the PVCs that are members of a PPVC.

The following example displays the PVCs that are members of a PPVC for port 5.

```

ras> shdsl ppvc member show 5
port vpi   vci mvpi   mvci   level DS/US vcprofile
-----
   5    8   35    8    36       2 DEFVAL/DEFVAL
  
```

54.4.5 PPVC Show Command

Syntax:

```
ras> shdsl ppvc show [<portlist> [<vpi> <vci>]]
```

where

<portlist> = The port(s) of the PPVC.
 You can specify a single DSL port <1>, all DSL ports <*> or a
 list of DSL ports <1,3,5>. You can also include a range of ports
 <1,5,6~8>.
 <vpi> = The VPI of the PPVC.
 <vci> = The VCI of the PPVC.

This command displays the runtime configured PPVCs.

The following example displays the PPVCs configured on DSL port 5.

```

ras> shdsl ppvc show 5
port vpi   vci   encap pvid pri
=====
   5    8   35   llc   25   6
  
```

54.4.6 PPVC Delete Command

Syntax:

```
ras> shdsl ppvc delete <portlist> <vpi> <vci>
```

where

<code><portlist></code>	=	The port(s) of the PPVC. You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> .
<code><vpi></code>	=	The VPI of the PPVC.
<code><vci></code>	=	The VCI of the PPVC.

This command removes a PPVC. Removing a PPVC also deletes all of the member PVCs.

The following example removes a PPVC with VPI 8 and VCI 35 for port 5.

```
ras> shdsl ppvc delete 5 8 35
```

54.5 2684 Routed Mode Commands

This feature is available in STU-C mode only.

Use the 2684 routed mode to have the IES-708-22A add MAC address headers to 2684 routed mode traffic from a PVC that connects to a subscriber device that uses 2684 routed mode. You can also specify the gateway to which the IES-708-22A sends the traffic and the VLAN ID tag to add. See RFC-2684 for details on routed mode traffic carried over AAL type 5 over ATM.


Use the commands in the following order to set up a 2684 routed mode PVC.

- 1 Use the `shdsl rpvc gateway` commands to configure gateway settings.
- 2 Use the `shdsl rpvc set` command to configure RPVCs (2684 routed mode PVCs) for 2684 routed mode traffic.
- 3 Use the `shdsl rpvc route set` command to configure domains for 2684 routed mode traffic. The domain is the range of IP addresses behind the subscriber's device (the CPE or Customer Premises Equipment). This includes the CPE device's LAN IP addresses and the IP addresses of the LAN computers.
- 4 Use the `shdsl rpvc arp` commands to view the Address Resolution Protocol table of IP addresses of CPE devices using 2684 routed mode and configure how long the device is to store them.
- 5 For upstream traffic: Since the subscriber's device will not send out a MAC address, after the IES-708-22A reassembles the Ethernet packets from the AAL5 ATM cells, the IES-708-22A will append the routed mode gateway's MAC address and the IES-708-22A's MAC address as the destination/source MAC address.
- 6 For downstream traffic: When the IES-708-22A sees the destination IP address is specified in the RPVC (or RPVC domain), the IES-708-22A will strip out the MAC header and send them to the corresponding RPVC.

54.5.1 2684 Routed Mode Example

The following figure shows an example RFC 2684 (formerly RFC 1483) routed mode set up. The gateway server uses IP address 192.168.10.102 and is in VLAN 1. The IES-708-22A uses IP address 192.168.20.101. The subscriber's device (the CPE) is connected to DSL port 1 on the IES-708-22A and the 2684 routed mode traffic is to use the PVC identified by VPI 8 and VCI 35. The CPE device's WAN IP address is 192.168.10.200. The routed domain is the LAN IP addresses behind the CPE device. The CPE device's LAN IP address is 10.10.10.10 and the LAN computer's IP address is 10.10.10.1. This includes the CPE device's LAN IP addresses and the IP addresses of the LAN computers.

Figure 131 2684 Routed Mode Example

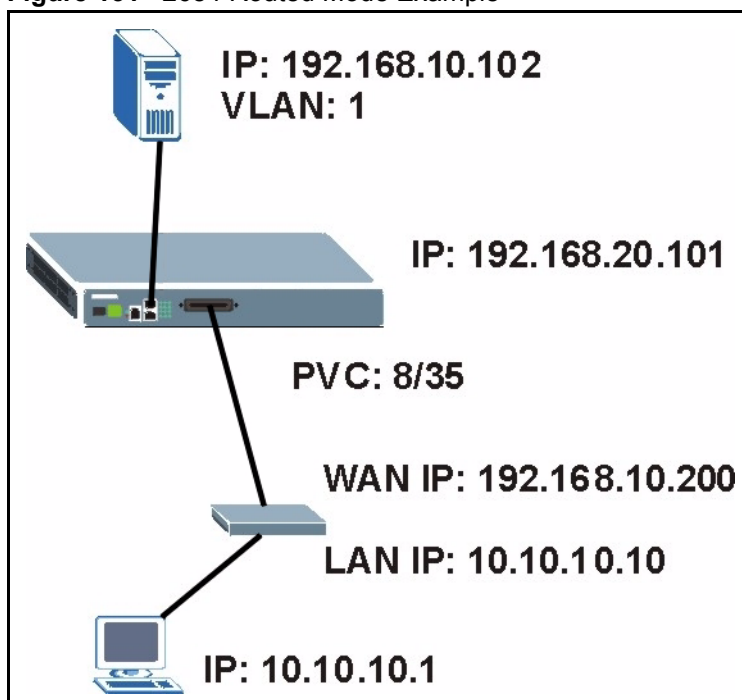

Note the following.

- The CPE device's WAN IP (192.168.10.200 in this example) must be in the same subnet as the gateway's IP address (192.168.10.102 in this example).
- The IES-708-22A's management IP address can be any IP address, it doesn't have any relationship to the WAN IP address or routed gateway IP address.
- The IES-708-22A's management IP address should not be in the same subnet as the one defined by the WAN IP address and netmask of the subscriber's device. It is suggested that you set the netmask of the subscriber's WAN IP address to 32 to avoid this problem.
- The IES-708-22A's management IP address should not be in the same subnet range of any RPVC and RPVC domain. It will make the IES-708-22A confused if the IES-708-22A receives a packet with this IP as destination IP.
- The IES-708-22A's management IP address also should not be in the same subnet as the one defined by the LAN IP address and netmask of the subscriber's device. Make sure you assign the IP addresses properly.
- In general deployment, the computer must set the CPE device's LAN IP address (10.10.10.10 in this example) as its default gateway.

- The subnet range of any RPVC and RPVC domain must be unique.

Use the following command sequence to configure the IES-708-22A for this example set up.

```

ras> shdsl rpvc gateway set 192.168.10.102 1
ras> shdsl rpvc set 1 8 35 DEFVAL 192.168.10.200/32 192.168.10.102
ras> shdsl rpvc route set 1 8 35 10.10.10.1/24

```

54.5.2 RPVC Gateway Set Command

Syntax:

```

ras> shdsl rpvc gateway set <gateway ip> <vlan id> [<priority>]

```

where

<gateway ip>	=	The IP address of the gateway to which you want to send the traffic that the system receives from this PVC. Enter the IP address in dotted decimal notation.
<vlan id>	=	The VLAN Identifier to add to Ethernet frames that the system routes to this gateway.
[<priority>]	=	Set the IEEE 802.1p priority (0~7) to add to the traffic that you send to this gateway.

This command adds a gateway IP address to use for 2684 routed mode traffic.

The following example has the device use a VLAN ID of 1 and IEEE 802.1p priority of 3 when sending 2684 routed mode traffic to a gateway at IP address 192.168.10.102.

```

ras> shdsl rpvc gateway set 192.168.10.102 1 3

```

54.5.3 RPVC Gateway Show Command

Syntax:

```

ras> shdsl rpvc gateway show

```

This command displays the gateway IP addresses that are configured for use with 2684 routed mode traffic.

The following is an example.

```

ras> shdsl rpvc gateway show
gateway ip      vid  priority
-----
192.168.10.102  1    3

```

54.5.4 RPVC Gateway Delete Command

Syntax:

```
ras> shdsl rpvc gateway delete <gateway ip>
```

where

<code><gateway ip></code>	=	The IP address of the gateway to which you no longer want the device to send the traffic that the system receives from this PVC. Enter the IP address in dotted decimal notation.
---------------------------------	---	---

This command removes a gateway IP address that the device was set to use for 2684 routed mode traffic.

The following example has the device remove a 2684 routed mode traffic gateway entry for IP address 192.168.10.102.

```
ras> shdsl rpvc gateway delete 192.168.10.102
```

54.5.5 RPVC Set Command

Syntax:

```
ras> shdsl rpvc set <portlist> <vpi> <vci> <DS vcprofile[,US vcprofile]>  
<ip>/<netmask> <gateway ip>
```

where

<code><portlist></code>	=	The port(s) of the RPVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<code><vpi></code>	=	The VPI of the RPVC.
<code><vci></code>	=	The VCI of the RPVC.
<code>DS vcprofile</code>	=	Assign a VC profile to use for this channel's downstream traffic shaping.
<code>[,US vcprofile]></code>	=	Assign a VC profile to use for policing this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.
<code><ip></code>	=	The subscriber's CPE WAN IP address in dotted decimal notation.

`/<netmask>` = The bit number of the subnet mask of the subscriber's IP address. To find the bit number, convert the subnet mask to binary and add all of the 1's together. Take "255.255.255.0" for example. 255 converts to eight 1's in binary. There are three 255's, so add three eights together and you get the bit number (24).

Make sure that the routed PVC's subnet does not include the IES-708-22A's IP address.

`<gateway ip>` = The IP address of the gateway to which you want to send the traffic that the system receives from this PVC. Enter the IP address in dotted decimal notation.

This command adds a PVC to handle 2684 routed mode traffic.



You must use the `rpvc gateway set` command to configure the gateway's settings before you use the `rpvc set` command.

The following example adds a PVC for 2684 routed mode traffic. It is for DSL port 1, VPI 8, VCI 35. It sets the DEFVAL profile for downstream traffic shaping and for upstream traffic policing. The CPE device's WAN IP address is 192.168.10.200 with a netmask of 32 and the gateway's IP address is 192.168.10.102.

```
ras> shdsl rpvc set 1 8 35 DEFVAL,DEFVAL 192.168.10.200/32 192.168.10.102
```

54.5.6 RPVC Show Command

Syntax:

```
ras> shdsl rpvc show <portlist>
```

where

`<portlist>` = The port(s) for which you want to display the RPVCs.
You can specify a single DSL port `<1>`, all DSL ports `<*>` or a list of DSL ports `<1,3,5>`. You can also include a range of ports `<1,5,6~8>`.

This command lists the PVCs for handling 2684 routed mode traffic (RPVCs).

The following example displays the RPVCs for DSL port 1.

```

ras> shdsl rpvc show 1
port vpi vci ip/netmask gateway ip DS/US vcprofile
-----
1 8 35 192.168.10.200/32 192.168.10.102 DEFVAL/DEFVAL

```

54.5.7 RPVC Delete Command

Syntax:

```
ras> shdsl rpvc delete <portlist> <vpi> <vci>
```

where

<portlist>	=	The port(s) of the RPVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the RPVC.
<vci>	=	The VCI of the RPVC.

This command removes a PVC for 2684 routed mode traffic.

The following example removes a PVC for 2684 routed mode traffic. It is for DSL port 1, VPI 8, VCI 35.

```

ras> shdsl rpvc delete 1 8 35

```

54.5.8 RPVC Route Set Command

Syntax:

```
ras> shdsl rpvc route set <port number> <vpi> <vci> <ip>/<netmask>
```

where

<port number>	=	The port of the RPVC. Specify a single DSL port <1>.
<vpi>	=	The VPI of the RPVC.
<vci>	=	The VCI of the RPVC.

- `<ip>` = The subscriber's CPE LAN IP address in dotted decimal notation.
- `/<netmask>` = The bit number of the subnet mask of the subscriber's IP address. To find the bit number, convert the subnet mask to binary and add all of the 1's together. Take "255.255.255.0" for example. 255 converts to eight 1's in binary. There are three 255's, so add three eights together and you get the bit number (24).

This command adds a domain for 2684 routed mode traffic. The domain includes the subscriber's LAN IP addresses.



You must use the `rpvc gateway set` and the `rpvc set` commands before you use the `rpvc route set` command.

The following example adds a domain for a CPE device is connected to DSL port 1 on the IES-708-22A and the 2684 routed mode traffic is to use the PVC identified by VPI 8 and VCI 35. The CPE device's LAN IP address is 10.10.10.10 and uses a subnet mask of 255.255.255.0. This includes the CPE device's LAN IP addresses and the IP addresses of the LAN computers.

```
ras> shdsl rpvc route set 1 8 35 10.10.10.1/24
```

54.5.9 RPVC Route Show Command

Syntax:

```
ras> shdsl rpvc route show <portlist>
```

where

- `<portlist>` = The port(s) of the RPVC.
- You can specify a single DSL port `<1>`, all DSL ports `<*>` or a list of DSL ports `<1,3,5>`. You can also include a range of ports `<1,5,6~8>`.

This command lists the domains for 2684 routed mode traffic.

The following example displays the domains for 2684 routed mode traffic for devices connected to DSL ports 1 and 2.

```
ras> shdsl rpvc route show 1,2
port vpi vci ip/netmask
-----
  1   8  35 10.10.10.0/24
  2   8  35 10.10.11.0/24
```

54.5.10 RPVC Route Delete Command

Syntax:

```
ras> shdsl rpvc route delete <port number> <vpi> <vci> <ip>/<netmask>
```

where

<port number>	=	The port of the RPVC. Specify a single DSL port <1>.
<vpi>	=	The VPI of the RPVC.
<vci>	=	The VCI of the RPVC.
<ip>	=	The subscriber's CPE LAN IP address in dotted decimal notation.
/<netmask>	=	The bit number of the subnet mask of the subscriber's IP address. To find the bit number, convert the subnet mask to binary and add all of the 1's together. Take "255.255.255.0" for example. 255 converts to eight 1's in binary. There are three 255's, so add three eights together and you get the bit number (24).

This command removes a domain for 2684 routed mode traffic. The domain includes the subscriber's LAN IP addresses.

The following example removes a domain for a CPE device is connected to DSL port 1 on the IES-708-22A and the 2684 routed mode traffic is to use the PVC identified by VPI 8 and VCI 35. The CPE device's LAN IP address is 10.10.10.10 and uses a subnet mask of 255.255.255.0. This includes the CPE device's LAN IP addresses and the IP addresses of the LAN computers.

```
ras> shdsl rpvc route delete 1 8 35 10.10.10.1/24
```

54.5.11 RPVC ARP Agingtime Set Command

Syntax:

```
ras> shdsl rpvc arp agingtime set <sec>
```

where

`<sec>` = The number of seconds (10~10000) the device is to keep the Address Resolution Protocol table's entries of IP addresses of 2684 routed mode gateways. Use 0 to disable the aging time.

This command configures how long the device stores the IP addresses of CPE devices using 2684 routed mode in the Address Resolution Protocol table.

The following example sets the device to store the IP addresses 2684 routed mode gateways in the Address Resolution Protocol table for 500 seconds.

```
ras> shdsl rpvc arp agingtime set 500
```

54.5.12 RPVC ARP Agingtime Show Command

Syntax:

```
ras> shdsl rpvc arp agingtime show
```

This command displays how long the device stores the IP addresses of 2684 routed mode gateways in the Address Resolution Protocol table.

The following is an example.

```
ras> shdsl rpvc arp agingtime show
rpvc aging time (sec): 600
```

54.5.13 RPVC ARP Show Command

Syntax:

```
ras> shdsl rpvc arp show
```

This command displays how long the device stores the IP addresses of 2684 routed mode gateways in the Address Resolution Protocol table.

The following is an example.

```
ras> shdsl rpvc arp show
gateway ip      vid  mac
-----
192.168.10.102  1   00:0d:9d:d9:43:3b
```

54.5.14 RPVC ARP Flush Command

Syntax:

```
ras> shdsl rpvc arp flush
```

This command clears the IP addresses of 2684 routed mode gateways from the Address Resolution Protocol table.

54.6 PPPoA to PPPoE (PAE) Commands

This feature is available in STU-C mode only.

You can use these commands to create PVCs for PAE translation.

54.6.1 PAE PVC Delete Command

Syntax:

```
ras> shdsl paepvc delete <portlist> <vpi> <vci>
```

where

<portlist>	=	The port number of the PAE PVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the PAE PVC.
<vci>	=	The VCI of the PAE PVC.

This command removes a PAE PVC.

54.6.2 PAE PVC Set Command

Syntax:

```
ras> shdsl paepvc set <portlist> <vpi> <vci> <DS vcprofile[,US vcprofile]>  
<pvid> <priority> [acname <acname>] [srvcname <srvcname>] [hellotime  
<hellotime>]
```

where

<portlist>	=	The port number of the PAE PVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the PAE PVC.
<vci>	=	The VCI of the PAE PVC.
<DS vcprofile	=	Assign a VC profile to use for this channel's downstream traffic shaping.
[,US vcprofile]>	=	Assign a VC profile to use for policing this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.
<pvid>	=	1 – 4094; the VLAN Identifier to add to Ethernet frames that the system routes using this PVC.
<priority>	=	Set the IEEE 802.1p priority (0~7) to add to the traffic that uses this PVC.

- `<acname>` = This field is optional. Specify the hostname of a remote access concentrator if there are two access concentrators (or BRAS) on the network or that you want to allow PAE translation to the specified access concentrator.
- `<srvcname>` = This field is optional. Specify the name of the service that uses this PVC. This must be a service name that you configure on the remote access concentrator.
- `<hellotime>` = 0 - 600; specify the timeout, in seconds, for the PPPoE session. Enter 0 if there is no timeout.

This command creates a PPPoA-to-PPPoE PVC to allow communication between the ATM (CPE) and Ethernet network (BRAS) segments. The PVC is mapped to a PPPoE session that connects to the specified BRAS.

The following example creates a PPPoA-to-PPPoE PVC (1/33) for port 1. The VLAN ID is 1, and the IEEE 802.1p priority is 0. This configuration is for the `video` service on the `vom` access concentrator. The IES-708-22A waits 10 seconds before terminating the PPPoE session.

```

ras> shdsl paepvc set 1 1 33 DEFVAL 1 0 acname vom srvcname video hellotime
10

```

54.6.3 PAE PVC Show Command

Syntax:

```

ras> shdsl paepvc show [<portlist> [<vpi> <vci>]]

```

where

- `<portlist>` = The port number of the PAE PVC. You can specify a single DSL port `<1>`, all DSL ports `<*>` or a list of DSL ports `<1,3,5>`. You can also include a range of ports `<1,5,6~8>`.
- `<vpi>` = The VPI of the PAE PVC.
- `<vci>` = The VCI of the PAE PVC.

This command displays the PPPoA-to-PPPoE PVC settings for the specified port(s) or PVCs.

The following example displays the settings for port 1.

```

ras> shdsl paepvc show 1
port vpi   vci pvid pri htime US/DS vcprofile/acname/srvcname
-----
   1    1    33   1   0    10 dsprofile: DEFVAL
                                usprofile:
                                acname   : vom
                                srvcname  : video

```

54.6.4 PAE PVC Session Command

Syntax:

```
ras> shdsl paepvc session <portlist> [<vpi> <vci>]
```

where

<portlist>	=	The port number of the PAE PVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the PAE PVC.
<vci>	=	The VCI of the PAE PVC.

This command displays the status of PPPoA-to-PPPoE PVC sessions on the specified port(s) or PVCs.

The following example displays the settings for port 1.

```
ras> shdsl paepvc session 1
pvc 1-1/33
session state : down
session id    : 0
session uptime: 0 secs
acname       :
srvcname     :
```

54.6.5 PAE PVC Counter Command

Syntax:

```
ras> shdsl paepvc counter <portlist> [<vpi> <vci>]
```

where

<portlist>	=	The port number of the PAE PVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the PAE PVC.
<vci>	=	The VCI of the PAE PVC.

This command displays statistics about PPPoA-to-PPPoE PVC activity.

The following example displays the statistics for port 1.

```

ras> shdsl paepvc counter 1
pvc 1-1/33

```

	tx	rx
ppp lcp config-request :	-	0
ppp lcp echo-request :	-	0
ppp lcp echo-reply :	-	0
pppoe padi :	0	-
pppoe pado :	-	0
pppoe padr :	0	-
pppoe pads :	-	0
pppoe padt :	0	0
pppoe srvcname error :	-	0
pppoe ac system error :	-	0
pppoe generic error :	0	0

Each value is described below.

tx/rx	=	The values in these columns are for packets transmitted (tx) or received (rx) by the IES-708-22A.
ppp lcp config-request	=	The number of config-request PDUs received by the IES-708-22A from the CPE (client) device.
ppp lcp echo-request	=	The number of echo-request PDUs received by the IES-708-22A from the CPE (client) device.
ppp lcp echo-reply	=	The number of echo-reply PDUs received by the IES-708-22A from the CPE (client) device.
pppoe padi	=	The number of padi PDUs sent by the IES-708-22A to the BRAS.
pppoe pado	=	The number of pado PDUs sent by the BRAS to the IES-708-22A.
pppoe padr	=	The number of padr PDUs sent by the IES-708-22A to the BRAS.
pppoe pads	=	The number of pads PDUs sent by the BRAS to the IES-708-22A.
pppoe padt	=	The number of padt PDUs sent and received by the IES-708-22A.
pppoe srvcname error	=	The number of service name errors; for example, the IES-708-22A's specified service is different than the BRAS's setting.

<code>pppoe ac system error</code>	=	The number of times the access concentrator experienced an error while performing the Host request; for example, when resources are exhausted in the access concentrator. This value does not include the number of times the IES-708-22A checks the AC name field in the BRAS's reply PDU and finds a mismatch, however.
<code>pppoe generic error</code>	=	The number of other types of errors that occur in the PPPoE session between the IES-708-22A and the BRAS.

54.7 Transparent LAN Service (TLS) Commands

This feature is available in STU-C mode only.



You can NOT configure PPPoA-to-PPPoE and TLS settings on the same PVC.

54.7.1 TLS PVC Delete Command

Syntax:

```
ras> shdsl tlspvc delete <portlist> <vpi> <vci>
```

where

<code><portlist></code>	=	The port number of the TLS PVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<code><vpi></code>	=	The VPI of the TLS PVC.
<code><vci></code>	=	The VCI of the TLS PVC.

This command clears TLS settings for the PVC.

54.7.2 TLS PVC Set Command

Syntax:

```
ras> shdsl tlspvc set <portlist> <vpi> <vci> <DS vcprofile[,US vcprofile]>  
<pvid> <priority>
```

where

<code><portlist></code>	=	The port number of the TLS PVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<code><vpi></code>	=	The VPI of the TLS PVC.
<code><vci></code>	=	The VCI of the TLS PVC.

<DS vcprofile	=	Assign a VC profile to use for this channel's downstream traffic shaping.
[,US vcprofile]>	=	Assign a VC profile to use for policing this channel's upstream traffic. The IES-708-22A does not perform upstream traffic policing if you do not specify an upstream VC profile.
<pvid>	=	1 – 4094; the (second) VLAN Identifier to add to Ethernet frames that the system routes using this PVC.
<priority>	=	Set the IEEE 802.1p priority (0~7) to add to the traffic that uses this PVC.

This command sets the second VLAN tag to add to the packets from the PVC.

The following example adds VLAN tag 100 to traffic using the DEFVAL ATM profile on PVC (1/33) on port 2.

```
ras> shdsl tlspvc set 2 1 33 DEFVAL 100 0
```

54.7.3 TLS PVC Show Command

Syntax:

```
ras> shdsl tlspvc show [<portlist> [<vpi> <vci>]]
```

where

<portlist>	=	The port number of the TLS PVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the TLS PVC.
<vci>	=	The VCI of the TLS PVC.

This command displays the TLS settings for the specified port(s) or PVC(s). The following example shows the TLS settings on port 2.

```
ras> shdsl tlspvc show 2
port vpi  vci  pvid pri DS/US vcprofile
-----
   2    1   33  100  0 DEFVAL
```


ACL Commands

This feature is available in STU-C mode only.

An ACL (Access Control Logic) profile allows the system to classify and perform actions on the upstream traffic. Use the ACL Profile commands to set up ACL profiles and the ACL Assignment commands to apply them to PVCs.

55.1 ACL Profile Commands

Use these commands to set up ACL profiles.

55.1.1 ACL Profile Set Command

Syntax:

```
ras> switch acl profile set <name> <rule> <action>
```

where

<name>	=	The name of the ACL profile.
<rule>	=	The rule that classifies traffic flows. See below.
<action>	=	One or more actions to perform on the classified packets. You can select one or more of the following actions. <ul style="list-style-type: none"> • <code>rate <rate></code> = Sets the transmission rate (1~65535 in kbps) for the matched traffic. • <code>rvlan <rvlan></code> = Replaces the VLAN ID with this VLAN ID (1~4094). • <code>rpri <rpri></code> = Replaces the priority with this priority (0 ~7) of the matched packets. • <code>deny</code> = Drops the packets.

This command configures an ACL rule to classify the upstream traffic and perform action(s) on the classified traffic.

The following lists the set of criteria you can configure for rules in ACL profiles. The rules are listed in sequence from highest priority to lowest priority. The criteria within a rule are position-independent.

- `etype <etype> vlan <vid>`
- `etype <etype> smac <mac>`
- `etype <etype> dmac <mac>`
- `vlan < vid > smac <mac>`

- `vlan < vid > dmac <mac>`
- `smac < mac > dmac <mac>`
- `vlan < vid > priority <priority>`
- `etype <etype>`
- `vlan <vid>`
- `smac <mac>`
- `dmac <mac>`
- `priority <priority>`
- `protocol <protocol>`
- `srcip <ip>/<mask> [dstip <ip>/<mask> [tos <stos> <etos> [srcport <sport> <eport> [dstport <sport> <eport>]]]]]`

where

- `etype <etype>` = Ethernet type (0~65535).
- `vlan <vid>` = VLAN ID (1~4094).
- `smac <mac>` = Source MAC address.
- `dmac <mac>` = Destination MAC address.
- `priority <priority>` = Priority (0 ~ 7)
- `protocol <protocol>` = Protocol type: tcp, udp, ospf, igmp, ip, gre, icmp or user specified IP protocol number <0 ~ 255>.
- `srcip <ip>/<mask>` = Source IP address and subnet mask (0~32).
- `dstip <ip>/<mask>` = Destination IP address and subnet mask (0~32).
- `tos <stos> <etos>` = Sets the ToS (Type of Service) range between 0 and 255.
- `srcport <sport> <eport>` = Source port range (0~65535).
- `dstport <sport> <eport>` = Destination port range (0~65535).

The following guidelines apply to classifiers.

- You can apply one classifier for a protocol on a port's PVC.
- You cannot create a classifier that contains matching criteria for layer 2 and layer 3 fields. For example `switch acl profile set test protocol tcp vlan 15 deny` is not allowed as protocol type and VLAN do not belong to the same network layer.
- Each type of criteria can only be used once in a classifier. For example, `profile acl set test protocol tcp protocol udp deny` is not allowed. For this example, you need to create a separate classifier for each protocol and apply them to the same PVC(s).

The following example creates an ACL rule example named `test` for traffic from VLAN 10 with a priority level of 2. This rule limits the rate on the classified traffic to 1000 kbps and changes the priority level to 7.

```
ras> switch acl profile set test vlan 10 priority 2 rate 1000 rpri 7
```

55.1.2 ACL Profile Delete Command

Syntax:

```
ras> switch acl profile delete <profile>
```

where

`<profile>` = The name of the ACL profile.

This command removes the specified ACL profile.



You cannot remove the ACL profile(s) that is currently in use.

55.1.3 ACL Profile Show Map Command

Syntax:

```
ras> switch acl profile showmap <profile>
```

where

`<profile>` = The name of the ACL profile.

This command displays the DSL port(s) to which the specified ACL profile is applied.

The following example displays the port mapping table for the `example` ACL profile.

```

ras> switch acl profile showmap test
profile: test
port type  vpi  vci
-----

```

55.1.4 ACL Profile Show Command

Syntax:

```
ras> switch acl profile show [<profile>]
```

where

`<profile>` = The name of the ACL profile.

This command lists the names of every ACL profile or displays the detailed settings of the specified ACL profile.

```
ras> switch acl profile show test
profile test:
rule:
  vlan    :10
  priority:2

action:
  rpri    :7
  rate    :1000
```

55.2 ACL Assignment Commands

Use these commands to apply ACL profiles to PVCs.

55.2.1 ACL Assignment Set Command

Syntax:

```
ras> switch acl set <portlist> <vpi> <vci> <profile>
```

where

<portlist>	=	The port number of the PVC. You can specify a single DSL port <1>, all DSL ports <*> or a list of DSL ports <1,3,5>. You can also include a range of ports <1,5,6~8>.
<vpi>	=	The VPI of the PVC.
<vci>	=	The VCI of the PVC.
<profile>	=	The name of the ACL profile.

This command allows you to apply an ACL profile to the specified port(s). You can apply up to eight profiles to a subscriber port.

The following example applies the ACL profile “test” to a PVC.

```
ras> switch acl set 1 0 33 test
```

55.2.2 ACL Assignment Delete Command

Syntax:

```
ras> switch acl delete <portlist> <vpi> <vci> <profile>
```


where

<code><portlist></code>	=	The port number of the PVC. You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> .
<code><vpi></code>	=	The VPI of the PVC.
<code><vci></code>	=	The VCI of the PVC.
<code><profile></code>	=	The name of the ACL profile.

This command allows you to remove an ACL profile from the specified PVC.

55.2.3 ACL Assignment Show Command

Syntax:

```
ras> switch acl show [<portlist>] [<vpi> <vci>]
```

where

<code><portlist></code>	=	The port number of the PVC. You can specify a single DSL port <code><1></code> , all DSL ports <code><*></code> or a list of DSL ports <code><1,3,5></code> . You can also include a range of ports <code><1,5,6~8></code> .
<code><vpi></code>	=	The VPI of the PVC.
<code><vci></code>	=	The VCI of the PVC.

This command displays the current ACL profiles applied to the specified PVC(s). The following figure shows an example.

```

ras> switch acl show
port vpi   vci type profile
-----
   1    0   33 PVC  test

```

PART V

Troubleshooting and Specifications

[Troubleshooting \(377\)](#)

[Product Specifications \(387\)](#)

Troubleshooting

This chapter offers some suggestions to solve problems you might encounter. The potential problems are divided into the following categories.

- [Power, Hardware Connections, and LEDs](#)
- [IES-708-22A Access and Login](#)
- [Internet Access](#)

56.1 Power, Hardware Connections, and LEDs



The IES-708-22A does not turn on. None of the LEDs turn on.

- 1 Make sure you are using the power adaptor or cord included with the IES-708-22A.
- 2 Make sure the power adaptor or cord is connected to the IES-708-22A and plugged in to an appropriate power source. Make sure the power source is turned on.
- 3 Disconnect and re-connect the power adaptor or cord to the IES-708-22A.
- 4 If the problem continues, contact the vendor.



The **ALARM/ALM** LED is on.

- 1 Disconnect and re-connect the power adaptor to the IES-708-22A.
- 2 Use the statistics monitor command to verify the cause of the alarm.
 - 2a If the unit is overheated, ensure that the IES-708-22A is installed in a well-ventilated area. Keep the bottom, top, and all sides clear of obstructions and away from the exhaust of other equipment.
 - 2b If the voltage levels are outside the allowed range, take a screenshot of the statistics monitor command display, and contact the vendor.
- 3 If the problem continues, contact the vendor.



One of the LEDs does not behave as expected.

- 1 Make sure you understand the normal behavior of the LED. See [Section 3.1 on page 49](#).
- 2 Check the hardware connections. See [Chapter 2 on page 45](#).
- 3 Inspect your cables for damage. Contact the vendor to replace any damaged cables.
- 4 Disconnect and re-connect the power adaptor to the IES-708-22A.
- 5 If a LAN port LED is off, follow these steps.
 - 5a Check the **Speed Mode** settings in the **ENET Port Setup** screen. Make sure that the LAN port's connection speed is set to match that of the port on the peer Ethernet device.
 - 5b Check the Ethernet cable and connections between the LAN port and the peer Ethernet device.
 - 5c Make sure the peer Ethernet device is functioning properly.
- 6 If the problem continues, contact the vendor.

56.2 IES-708-22A Access and Login



I forgot the IP address for the IES-708-22A.

- 1 The default IP address is **192.168.1.1**.
- 2 Use the console port to log in to the IES-708-22A.
- 3 If this does not work, you have to reset the device to its factory defaults. See [Section 56.1 on page 377](#).



I forgot the password.

- 1 The default password is **1234**.
- 2 If this does not work, you have to reset the device to its factory defaults. See [Section 56.1 on page 377](#).



I cannot see or access the **Login** screen in the web configurator.

- 1 Make sure you are using the correct IP address.
 - The default IP address is [192.168.1.1](#).
 - If you changed the IP address ([Chapter 11 on page 99](#)), use the new IP address.
 - If you changed the IP address and have forgotten it, see the troubleshooting suggestions for [I forgot the IP address for the IES-708-22A](#).
- 2 Make sure your Internet browser does not block pop-up windows and has JavaScripts and Java enabled. See [Appendix B on page 419](#).

- 3 Make sure your computer is in the same subnet as the IES-708-22A. (If you know that there are routers between your computer and the IES-708-22A, skip this step.)
- 4 Reset the device to its factory defaults, and try to access the IES-708-22A with the default IP address. See [Section 56.1 on page 377](#).
- 5 If the problem continues, contact the network administrator or vendor, or try one of the advanced suggestions.

Advanced Suggestions

- Try to access the IES-708-22A using another service, such as Telnet. If you can access the IES-708-22A, check the service access and remote management settings filters to find out why the IES-708-22A does not respond to HTTP.



I can see the **Login** screen, but I cannot log in to the IES-708-22A.

- 1 Make sure you have entered the user name and password correctly. The default user name is **admin**, and the default password is **1234**. These fields are case-sensitive, so make sure [Caps Lock] is not on.
- 2 Disconnect and re-connect the power adaptor or cord to the IES-708-22A.
- 3 If this does not work, you have to reset the device to its factory defaults. See [Section 56.1 on page 377](#).



I cannot Telnet to the IES-708-22A.

See the troubleshooting suggestions for [I cannot see or access the Login screen in the web configurator](#). Ignore the suggestions about your browser.

- 1 Make sure that the number of current Telnet sessions does not exceed the maximum allowed number. You cannot have more than five Telnet sessions at one time.
- 2 Make sure that your computer's IP address matches a configured secured client IP address (if configured). The IES-708-22A immediately disconnects the Telnet session if secured host IP addresses are configured and your computer's IP address does not match one of them.
- 3 Make sure that you have not disabled the Telnet service or changed the server port number that the IES-708-22A uses for Telnet.
- 4 Ping the IES-708-22A from your computer.
 - 4a If you are able to ping the IES-708-22A but are still unable to Telnet, contact the vendor.
 - 4b If you cannot ping the IES-708-22A, check the cable, connections and IP configuration.
 - 4c Incorrectly configuring the access control settings may lock you out from using in-band management. Try using the console port to reconfigure the system.



I cannot use FTP to upload / download the configuration file. / I cannot use FTP to upload new firmware.

See the troubleshooting suggestions for [I cannot see or access the Login screen in the web configurator](#). Ignore the suggestions about your browser.



I cannot use SNMP to access / manage the IES-708-22A.

See the troubleshooting suggestions for [I cannot see or access the Login screen in the web configurator](#). Ignore the suggestions about your browser.

- 1 Ping the IES-708-22A from the SNMP server. If you cannot, check the cable, connections and IP configuration.
- 2 Check to see that the community (or trusted host) in the IES-708-22A matches the SNMP server's community.
- 3 Make sure that your computer's IP address matches a configured trusted host IP address (if configured).
- 4 Incorrectly configuring the access control settings may lock you out from using in-band management. Try using the console port to reconfigure the system.

56.3 Internet Access



The LAN port's LED is on, but data cannot be transmitted.

- 1 Make sure that the LAN port has the appropriate mode setting.
- 2 Make sure that the IES-708-22A's IP settings are properly configured.
- 3 Check the VLAN configuration.
- 4 Ping the IES-708-22A from a computer behind the peer Ethernet device. If you cannot ping, check the Ethernet cable and connections between the Ethernet port and the Ethernet switch or router.
- 5 Check the switch mode. In daisychain mode, if you have a loop topology and enable RSTP, it is possible for RSTP to disable Ethernet port 1 (the uplink port).



It is not recommended to use daisychain mode in a loop topology.



The DSL link is up, but data cannot be transmitted.

- 1 Check the switch mode and port isolation settings. Check to see that the VPI/VCI and multiplexing mode (LLC/VC) settings in the subscriber's DSL modem or router match those of the DSL port. If the subscriber is having problems with a video or other high-bandwidth services, make sure the IES-708-22A's DSL port's data rates are set high enough.
- 2 Check the VLAN configuration.
- 3 Ping the IES-708-22A from the computer behind the DSL modem or router. If you cannot ping, connect a DSL modem to a DSL port (that is known to work).
- 4 If the DSL modem or router works with a different DSL port, there may be a problem with the original port. Contact the distributor.
- 5 If using a different port does not work, try a different DSL modem or router with the original port.



The computer behind a DSL modem or router cannot access a local server connected to the IES-708-22A.

- 1 Make sure that the subscriber is able to transmit to the IES-708-22A.
- 2 Make sure the computer behind the DSL device has the correct gateway IP address configured.
- 3 Check the VLAN configuration.
- 4 Check the cable and connections between the IES-708-22A and the local server.
- 5 Try to access another local server. If data can be transmitted to a different local server, the local server that could not be accessed may have a problem.



The SYNC-rate is not the same as the configured rate.

- 1 Connect the DSL modem or router directly to the DSL port using a different telephone wire.
- 2 If the rates match, the quality of the telephone wiring that connects the subscriber to the DSL port may be limiting the speed to a certain rate. If they do not match when a good wire is used, contact the distributor.

56.4 Password

If you forget your password, you will need to use the console port to reload the factory-default configuration file (see [Section 56.6.2 on page 383](#)).

56.5 System Lockout

Any of the following could also lock you and others out from using in-band management (managing through the data ports).

- 1 Deleting the management VLAN (default is VLAN 1).
- 2 Incorrectly configuring the CPU VLAN.
- 3 Incorrectly configuring the access control settings.
- 4 Disabling all ports.



Be careful not to lock yourself and others out of the system.

If you lock yourself (and others) out of the system, you can try using the console port to reconfigure the system. See [Section 56.6.2 on page 383](#).

56.6 Resetting the Defaults

If you lock yourself (and others) from the IES-708-22A, you will need to reload the factory-default configuration file. Uploading the factory-default configuration file replaces the current configuration file with the factory-default configuration file. This means that you will lose all previous configurations and the speed of the console port will be reset to the default of 9600 bps with 8 data bit, no parity, one stop bit and flow control set to none. The user name will be reset to “admin” and the password will be reset to “1234” and the IP address to 192.168.1.1.

56.6.1 Resetting the Defaults Via Command

If you know the password, you can reload the factory-default configuration file via Command Line Interface (CLI) command. Use the following procedure.

- 1 Connect to the console port using a computer with terminal emulation software. See [Section 3.2.2 on page 50](#) for details.
- 2 Enter your password.
- 3 Type `config restore`.
- 4 Type `y` at the question “Do you want to restore default ROM file(y/n)?”
- 5 The IES-708-22A restarts.

Figure 132 Resetting the IES-708-22A Via Command

```

ras> config restore

System will reboot automatically after restoring default configuration.
Do you want to proceed(y/n)? >
restoring configuration...
saving configuration to flash...
  
```

The IES-708-22A is now reinitialized with a default configuration file including the default user name of “admin” and the default password of “1234”.

56.6.2 Uploading the Default Configuration File

If you forget your password or cannot access the IES-708-22A, you will need to reload the factory-default configuration file. Uploading the factory-default configuration file replaces the current configuration file with the factory-default configuration file. This means that you will lose all previous configurations and the speed of the console port will be reset to the default of 9600 bps with 8 data bit, no parity, one stop bit and flow control set to none. The password will also be reset to “1234” and the IP address to 192.168.1.1.




Uploading the factory default configuration file erases the IES-708-22A's entire configuration.

Obtain the default configuration file, unzip it and save it in a folder. Use a console cable to connect a computer with terminal emulation software to the IES-708-22A's console port. Turn the IES-708-22A off and then on to begin a session. When you turn on the IES-708-22A again you will see the initial screen. When you see the message `Press any key to enter Debug Mode within 3 seconds` press any key to enter debug mode.

To upload the configuration file, do the following:

- 1 Type `atlc` after the `Enter Debug Mode` message.
- 2 Wait for the `Starting XMODEM` upload message before activating XMODEM upload on your terminal.
- 3 This is an example Xmodem configuration upload using HyperTerminal. Click **Transfer**, then **Send File** to display the following screen.

Figure 133 Example Xmodem Upload

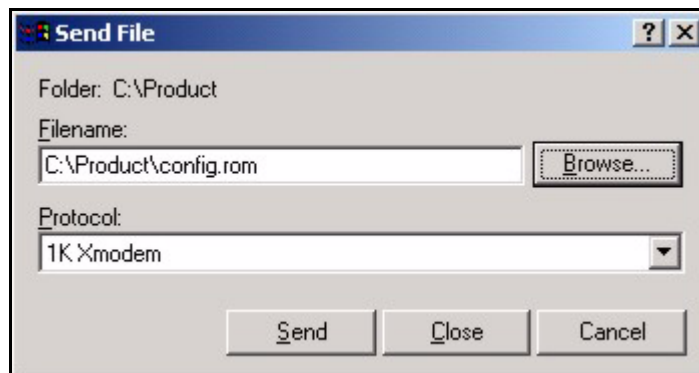

Type the configuration file's location, or click **Browse** to search for it. Choose the **1K Xmodem** protocol. Then click **Send**.

- 4 After a successful configuration file upload, type `atgo` to restart the IES-708-22A.

The IES-708-22A is now reinitialized with a default configuration file including the default password of “1234”.

56.7 Recovering the Firmware


Usually you should use FTP or the web configurator to upload the IES-708-22A's firmware. If the IES-708-22A will not start up, the firmware may be lost or corrupted. Use the following procedure to upload firmware to the IES-708-22A only when you are unable to upload firmware through FTP.



This procedure is for emergency situations only.

- 1 Obtain the firmware file, unzip it and save it in a folder on your computer.
- 2 Connect your computer to the console port and use terminal emulation software configured to the following parameters:
 - VT100 terminal emulation
 - 9600 bps
 - No parity, 8 data bits, 1 stop bit
 - No flow control
- 3 Turn off the IES-708-22A and turn it back on to restart it and begin a session.
- 4 When you see the message `Press any key to enter Debug Mode within 3 seconds`, press a key to enter debug mode.
- 5 Type `atba5` after the `Enter Debug Mode` message (this changes the console port speed to 115200 bps).
- 6 Change the configuration of your terminal emulation software to use 115200 bps and reconnect to the IES-708-22A.
- 7 Type `atur` after the `Enter Debug Mode` message.
- 8 Wait for the `Starting XMODEM upload` message before activating XMODEM upload on your terminal.
- 9 This is an example Xmodem configuration upload using HyperTerminal. Click **Transfer**, then **Send File** to display the following screen.

Figure 134 Example Xmodem Upload

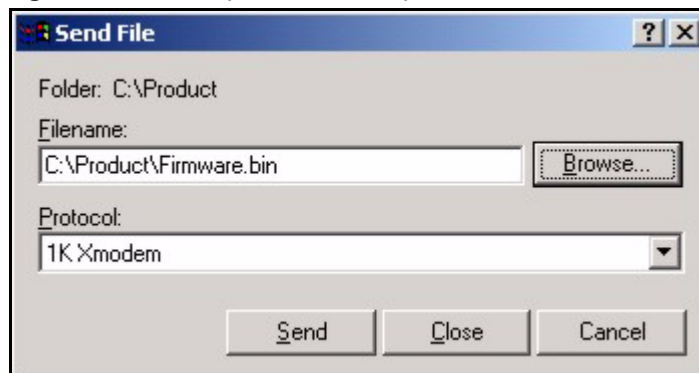

Type the firmware file's location, or click **Browse** to search for it. Choose the **1K Xmodem** protocol. Then click **Send**.

- 10** After a successful firmware upload, type `atgo` to restart the IES-708-22A. The console port speed automatically changes back to 9600 bps when the IES-708-22A restarts.

Product Specifications

This chapter gives details about your IES-708-22A's hardware and firmware features.

57.1 General IES-708-22A Specifications

The following tables summarize the IES-708-22A's hardware and firmware features.

Table 97 Hardware Specifications

SPECIFICATION	DESCRIPTION
Weight	2.8 kg
Dimensions & Construction	8-port G.SHDSL standalone mini-DSLAM 270 mm x 350 mm x 44.45 mm All front access 1 embedded FAN (4020) 19" rack installation or freestanding
Physical Form	Console port: Mini-RJ-11(4P4C) 2 Ethernet ports: RJ-45 10/100 Mbps (for uplink), auto-negotiating, auto-crossover Telco-50 female connector
SHDSL	Standards: <ul style="list-style-type: none"> ITU G.shdsl (ITU-T G.991.2 (2004)) Line probing Annex F (G.bis mode) Line coding: TC-PAM Transmission power: up to 13.5 dBm STU-C or STU-R mode with different FW download SHDSL payload format: ATM Rate Adaptation Mode: fixed, line probing Port operating modes: G.SHDSL (at most 2.3 Mbps), G.bis (at most 5.696 Mbps) ITU G.998.1 (ATM-based multi-paired bonding), at most 8 ports can be bonded in a group Annex A, Annex B and Annex F PSD mask SHDSL line profile SHDSL alarm profile Power backoff
Power	Power Consumption: 25 W 100~240 VAC, 50/60 Hz; 0.7 A
Ground Wire Gauge	18 AWG or larger
Power Wire Gauge	18 AWG or larger

Table 97 Hardware Specifications (continued)

SPECIFICATION	DESCRIPTION
Telephone Wire Gauge	26 AWG or larger
Temperature	Operating: 0 ~ 50 °C (32 ~ 122 °F) Storage: -20 ~ 70 °C (-4 ~ 158 °F)
Humidity	Operating: 10 ~ 90% (non-condensing) Storage: 10 ~ 95% (non-condensing)

Table 98 Firmware Specifications

SPECIFICATION	DESCRIPTION
Default IP Address	192.168.1.1
Default Subnet Mask	255.255.255.0 (24 bits)
Default Password	1234
ATM layer	Support Protocols: Multiple protocols over AAL5 (RFC 2684). - Support LLC and VC multiplexing modes. Multiple PVC support - 8 PVCs per port and each PVC is configurable - PVC to VLAN mapping - 802.1p default priority - PVC with traffic class (UBR, CBR, nrt-VBR, rt-VBR) - Full range VPI and VCI OAM F5 end-to-end loopback (ATM mode)
Ethernet	Standalone and daisy chain mode RSTP support
Bridging	IEEE 802.1Q VLAN aware bridging - Accept tagged and untagged packets from SHDSL ports - Accept tagged and untagged packets from Ethernet interface - GVRP Port isolation 256 static VLAN entries (full-range VLAN ID 1~4094) 4 K MAC address entries
Packet filtering	MAC count limiting MAC filtering: only selected MACs can pass through or are denied PPPoE filtering (pass-through/filter out) IGMP filtering (pass-through/filter out) DHCP filtering (pass-through/filter out) NetBIOS filtering (pass-through/filter out) IEEE 802.1X (EAPOL) filtering (pass-through/filter out) IP filtering (pass-through/filter out) ARP filtering (pass-through/filter out)
QoS	Four output priority queues with packet priority scheduling Packet prioritizing per 802.1p - Static configuration – default priority setting - 8 priority queues per PVC (up to 4 PVCs)
Broadband access support	DHCP snooping DHCP relay agent option 82 IEEE 802.1x port-based authentication with remote radius server

Table 98 Firmware Specifications (continued)

SPECIFICATION	DESCRIPTION
Multicast	IPv4 multicast forwarding (through L2 MAC) Static multicast membership configuration IGMP v1& v2 snooping & IGMP proxy mode support Shared VLAN multicast 256 multicast groups and each group can contain 10 (2 ENET + 8 DSL) members IGMP filtering profile IGMP count limiting MVLAN DSL port multicast bandwidth control
Management support	CLI-based management from console/Ethernet port SNMPV1,v2 and Telnet through inband Ethernet interface, PC-based EMS management support Web-based management through Inband Ethernet interface Secured Host: configure remote host IP addresses for management UNIX syslog F/W upgrade, configuration backup & restore via FTP and Web Text-based configuration file support SHDSL port configuration STU-C or STU-R mode (with different firmware download) Alarm/Status Surveillance Automatic alarm and status report LED indication for alarm and system status Alarm/event history Performance monitoring Periodic DSL performance counter update Security and Memory Backup Support login authorization Provides non-volatile memory to back-up system database Keep previous system parameters during re-booting Self diagnostics LAN port Line interface loop-back test Remote reset
Supported MIB	RFC1213 SNMP MIB II RFC1493 Bridge MIB RFC1643 Ethernet MIB RFC2674 Q MIB RFC 3276 SHDSL Line MIB RFC1757 RMON MIB, group 1,2,3,9 ZyXEL private MIB

Per system limitations:

- Number of VLAN: 256
- SHDSL profile: 24
- ATM profile: 48
- IGMP filter profile: 32
- SHDSL ALARM profile: 24
- Dot1X profile: 64
- DHCP relay server: 32
- IP routes: 128
- Static multicast address: 32
- IGMP groups: 256 groups (10 members per group)
- MAC learning: 9k (128 per SHDSL port, 4k per ENET port)
- RPVC gateway IP address: 96
- RPVC routing entries: 96
- ACL profile: 128

Per DSL port limitations:

- Number of MAC filter: 10
- Number of PVC: 8
- Number of PPVC: 2
- Number of PPVC member: 8
- Number of RPVC: 8
- Number of TLSPVC: 8
- Number of PAEPVC: 8
- Number of VLAN: 16
- IGMP maximum host IPs per DSL port is 16
- IGMP maximum host IPs per Ethernet port is 1024
- Number of DHCP snooping: 32
- Maximum joined MVLAN: 4
- Maximum ACL profile mapping: 8

This section lists the default configuration of the IES-708-22A.

Table 99 Default Settings

VLAN Default Settings	One VLAN is created (this is also the management VLAN).
VID:	1
Registration:	Fixed for the Ethernet and DSL ports
Tagging:	Untagged for all ports
SHDSL Default Settings	
Enable/Disable State:	Enabled
Port Profile Default Settings	
Name:	DEFVAL
Profile Status:	Active

Table 99 Default Settings (continued)

Max Rate	2304 Kbps
Min Rate	192 Kbps
Annex Mode	Annex B
Wire Pair	2-wire
Line Probe	On
Current Condition SNR Margin	0 dB
Worst Case SNR Margin	0 dB
Virtual Channel Default Settings^A.	
Super channel:	Enabled
VPI:	0
VCI:	33
VC Profile:	DEFVAL (factory default)
Default VC Profile Settings	
DEFVAL Profile Settings	
Multiplexing:	LLC-based
Traffic Class:	UBR
PCR:	300000 cells/second
CDVT:	0
VC Profile:	DEFVAL_VC
Multiplexing:	VC-based
Traffic Class:	UBR
PCR:	300000 cells/second
CDVT:	0
Default IGMP Filter Profile Settings	The DEFVAL IGMP filter profile is assigned to all of the DSL ports by default. It allows a port to join all multicast IP addresses (224.0.0.0~239.255.255.255).

A. The IES-708-22A DSL ports' PVCs use ATM Adaptation Layer (AAL) 5.

The following list, which is not exhaustive, illustrates the standards supported in the IES-708-22A.

Table 100 Standards Supported

STANDARD	DESCRIPTION
RFC 867	Daytime Protocol
RFC 868	Time Protocol.
RFC 1112	IGMP v1
RFC 1157	SNMPv1: Simple Network Management Protocol version 1
RFC 1213	SNMP MIB II
RFC 1305	Network Time Protocol (NTP version 3)
RFC 1483	Multiprotocol Encapsulation over ATM Adaptation Layer 5
RFC 1493	Bridge MIB

Table 100 Standards Supported (continued)

STANDARD	DESCRIPTION
RFC 1643	Ethernet MIB
RFC 1757	RMON MIB, group 1,2,3,9
RFC 1901	SNMPv2c Simple Network Management Protocol version 2c
RFC 2131	DHCP (Dynamic Host Configuration Protocol)
RFC 2138	RADIUS (Remote Authentication Dial In User Service)
RFC 2236	Internet Group Management Protocol, Version 2.
RFC 2674	Q MIB
RFC 2684	Multiprotocol Encapsulation over ATM Adaptation Layer 5.
RFC 3046	DHCP (Dynamic Host Configuration Protocol)
RFC 3276	SHDSL Line MIB
IEEE 802.1D	Spanning Tree Protocol (STP)
IEEE 802.1d	Frame priority
IEEE 802.1p	Frame priority
IEEE 802.1Q	Tagged VLAN (Virtual Local Area Network)
IEEE 802.1w	Rapid Spanning Tree Protocol (RSTP)
IEEE 802.1x	Port Based Network Access Control.
G.SHDSL	G.991.2 Symmetric high-speed digital subscriber line (SHDSL)
ITU G.998.1	Bonding standards for ATM networks

57.2 Cable Pin Assignments

The following diagrams and chart show the pin assignments of the console cable.

Figure 135 Console Cable RJ-11 Male Connector

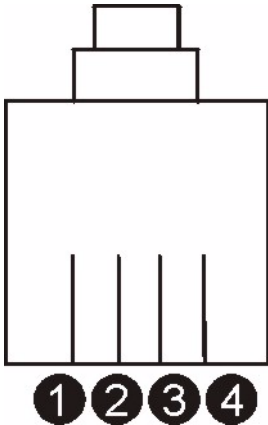


Figure 136 Console Cable DB-9 Female Connector

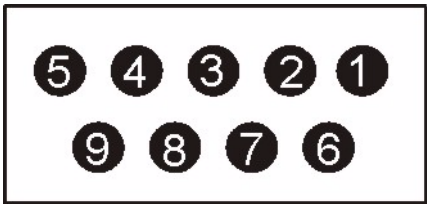


Table 101 Console Cable Connector Pin Assignments


RJ-11 MALE	DB-9 FEMALE
Pin 2: TXD	Pin 2
Pin 3: RXD	Pin 3
Pin 4: GND	Pin 5

The following diagram shows the pin assignments for Ethernet connections.

Table 102 Ethernet Cable Pin Assignments

WAN / LAN ETHERNET CABLE PIN LAYOUT					
Straight-through			Crossover		
(Switch)		(Adapter)	(Switch)		(Switch)
1 IRD +	-----	1 OTD +	1 IRD +	-----	1 IRD +
2 IRD -	-----	2 OTD -	2 IRD -	-----	2 IRD -
3 OTD +	-----	3 IRD +	3 OTD +	-----	3 OTD +
6 OTD -	-----	6 IRD -	6 OTD -	-----	6 OTD -

The following diagram shows the pin assignments of the Telco-50 connector.

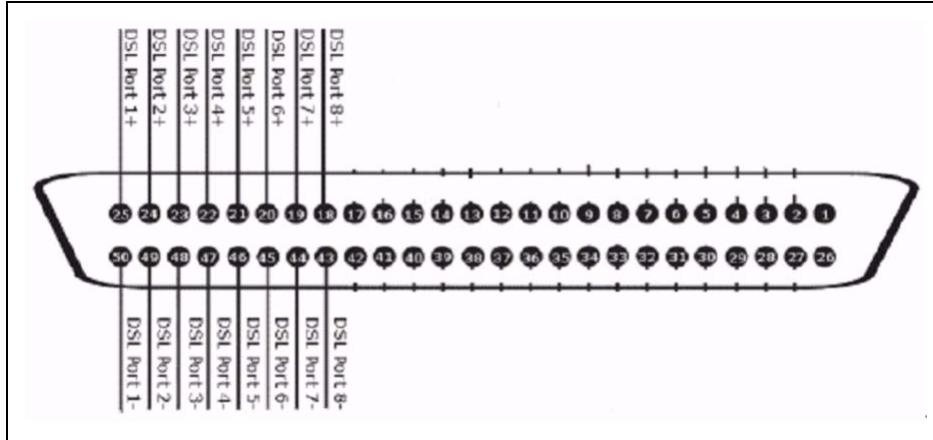Figure 137 Telco-50 Pin Assignments

This table lists the ports and matching pin numbers for the hardware Telco-50 connectors.

Table 103 Hardware Telco-50 Connector Port and Pin Numbers

PORT NUMBER	PIN NUMBER
1	25, 50
2	24, 49
3	23, 48
4	22, 47
5	21, 46
6	20, 45
7	19, 44
8	18, 43

PART VI

Appendices and Index



The appendices provide general information. Some details may not apply to your IES-708-22A.

[Setting up Your Computer's IP Address \(397\)](#)

[Pop-up Windows, JavaScripts and Java Permissions \(419\)](#)

[Common Services \(427\)](#)

[Virtual Circuit Topology \(431\)](#)

[Legal Information \(433\)](#)

[Customer Support \(437\)](#)

[Index \(443\)](#)

Setting up Your Computer's IP Address

All computers must have a 10M or 100M Ethernet adapter card and TCP/IP installed.

Windows 95/98/Me/NT/2000/XP/Vista, Macintosh OS 7 and later operating systems and all versions of UNIX/LINUX include the software components you need to install and use TCP/IP on your computer. Windows 3.1 requires the purchase of a third-party TCP/IP application package.


TCP/IP should already be installed on computers using Windows NT/2000/XP, Macintosh OS 7 and later operating systems.

After the appropriate TCP/IP components are installed, configure the TCP/IP settings in order to "communicate" with your network.

If you manually assign IP information instead of using dynamic assignment, make sure that your computers have IP addresses that place them in the same subnet as the IES-708-22A's LAN port.

Windows 95/98/Me

Click **Start**, **Settings**, **Control Panel** and double-click the **Network** icon to open the **Network** window.

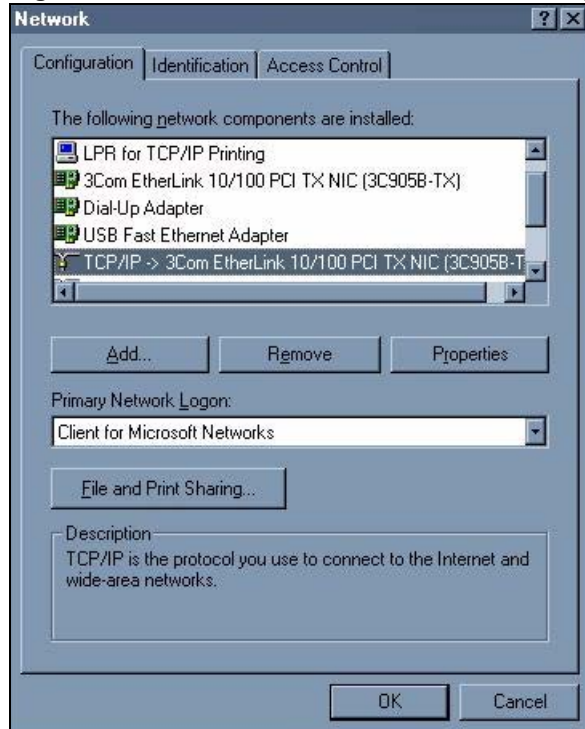Figure 138 Windows 95/98/Me: Network: Configuration

Installing Components

The **Network** window **Configuration** tab displays a list of installed components. You need a network adapter, the TCP/IP protocol and Client for Microsoft Networks.

If you need the adapter:

- 1 In the **Network** window, click **Add**.
- 2 Select **Adapter** and then click **Add**.
- 3 Select the manufacturer and model of your network adapter and then click **OK**.

If you need TCP/IP:

- 1 In the **Network** window, click **Add**.
- 2 Select **Protocol** and then click **Add**.
- 3 Select **Microsoft** from the list of **manufacturers**.
- 4 Select **TCP/IP** from the list of network protocols and then click **OK**.


If you need Client for Microsoft Networks:

- 1 Click **Add**.
- 2 Select **Client** and then click **Add**.
- 3 Select **Microsoft** from the list of manufacturers.
- 4 Select **Client for Microsoft Networks** from the list of network clients and then click **OK**.
- 5 Restart your computer so the changes you made take effect.


Configuring

- 1 In the **Network** window **Configuration** tab, select your network adapter's TCP/IP entry and click **Properties**
- 2 Click the **IP Address** tab.
 - If your IP address is dynamic, select **Obtain an IP address automatically**.
 - If you have a static IP address, select **Specify an IP address** and type your information into the **IP Address** and **Subnet Mask** fields.

Figure 139 Windows 95/98/Me: TCP/IP Properties: IP Address

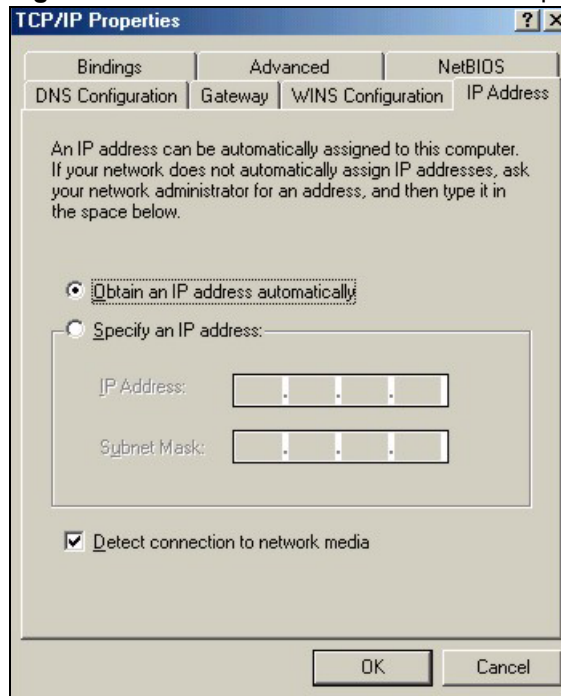

- 3 Click the **DNS Configuration** tab.
 - If you do not know your DNS information, select **Disable DNS**.
 - If you know your DNS information, select **Enable DNS** and type the information in the fields below (you may not need to fill them all in).

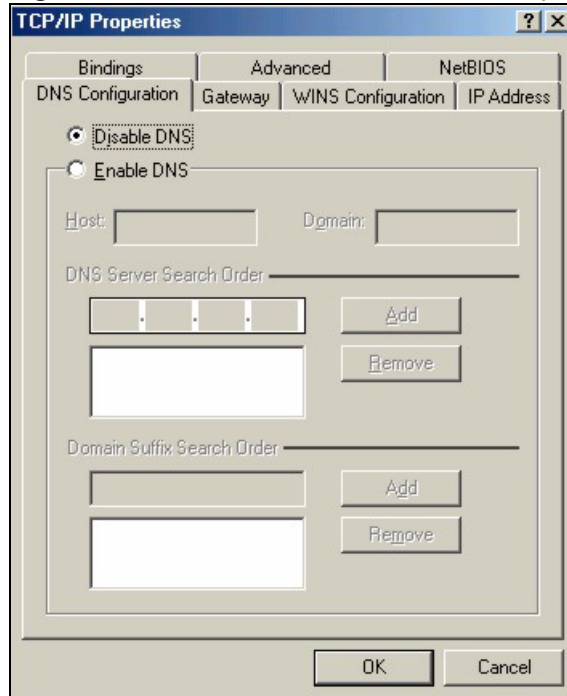Figure 140 Windows 95/98/Me: TCP/IP Properties: DNS Configuration

- 4 Click the **Gateway** tab.
 - If you do not know your gateway's IP address, remove previously installed gateways.
 - If you have a gateway IP address, type it in the **New gateway field** and click **Add**.
- 5 Click **OK** to save and close the **TCP/IP Properties** window.
- 6 Click **OK** to close the **Network** window. Insert the Windows CD if prompted.
- 7 Turn on your IES-708-22A and restart your computer when prompted.


Verifying Settings

- 1 Click **Start** and then **Run**.
- 2 In the **Run** window, type "winipcfg" and then click **OK** to open the **IP Configuration** window.
- 3 Select your network adapter. You should see your computer's IP address, subnet mask and default gateway.


Windows 2000/NT/XP

The following example figures use the default Windows XP GUI theme.


- 1 Click **start** (**Start** in Windows 2000/NT), **Settings**, **Control Panel**.

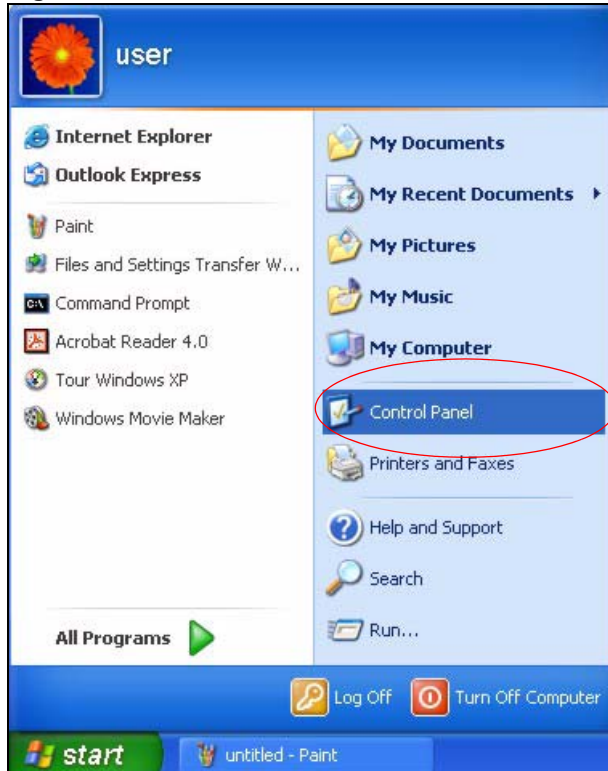Figure 141 Windows XP: Start Menu


- 2 In the **Control Panel**, double-click **Network Connections** (Network and Dial-up Connections in Windows 2000/NT).

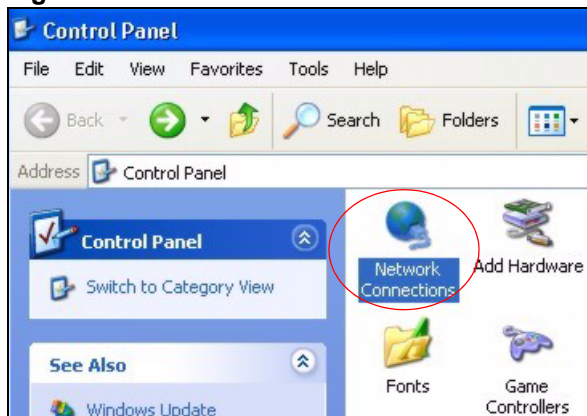Figure 142 Windows XP: Control Panel


- 3 Right-click **Local Area Connection** and then click **Properties**.

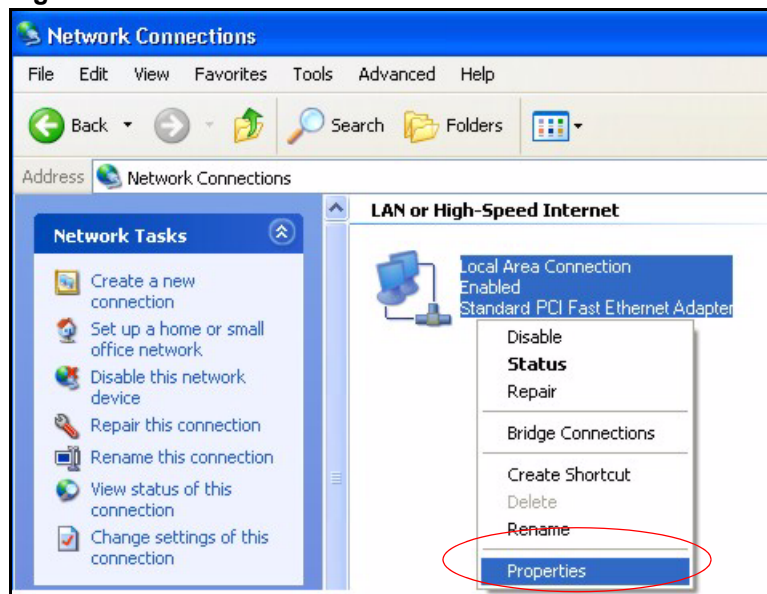Figure 143 Windows XP: Control Panel: Network Connections: Properties

- 4 Select **Internet Protocol (TCP/IP)** (under the **General** tab in Win XP) and then click **Properties**.

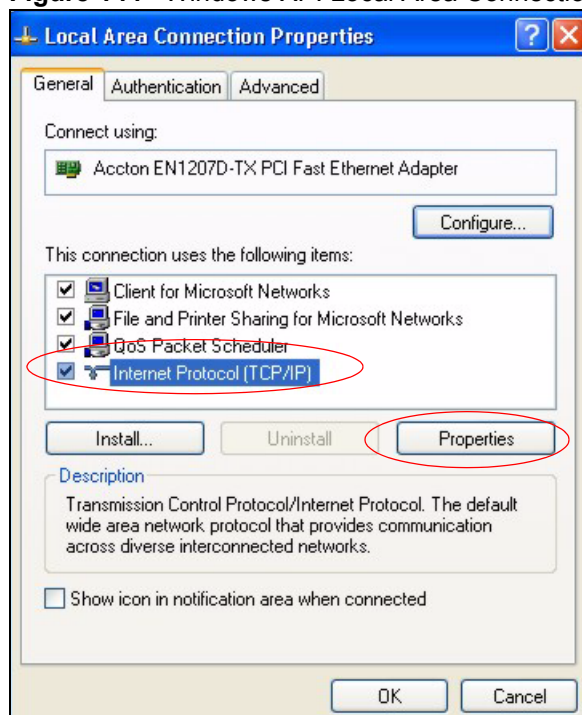Figure 144 Windows XP: Local Area Connection Properties


- 5 The **Internet Protocol TCP/IP Properties** window opens (the **General** tab in Windows XP).
- If you have a dynamic IP address click **Obtain an IP address automatically**.
 - If you have a static IP address click **Use the following IP Address** and fill in the **IP address**, **Subnet mask**, and **Default gateway** fields.
 - Click **Advanced**.

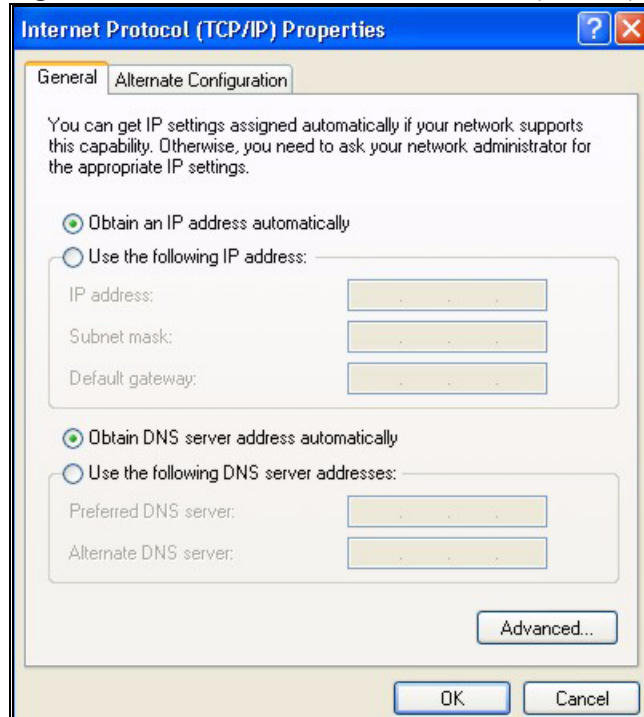Figure 145 Windows XP: Internet Protocol (TCP/IP) Properties


- 6** If you do not know your gateway's IP address, remove any previously installed gateways in the **IP Settings** tab and click **OK**.

Do one or more of the following if you want to configure additional IP addresses:

- In the **IP Settings** tab, in IP addresses, click **Add**.
- In **TCP/IP Address**, type an IP address in **IP address** and a subnet mask in **Subnet mask**, and then click **Add**.
- Repeat the above two steps for each IP address you want to add.
- Configure additional default gateways in the **IP Settings** tab by clicking **Add** in **Default gateways**.
- In **TCP/IP Gateway Address**, type the IP address of the default gateway in **Gateway**. To manually configure a default metric (the number of transmission hops), clear the **Automatic metric** check box and type a metric in **Metric**.
- Click **Add**.
- Repeat the previous three steps for each default gateway you want to add.
- Click **OK** when finished.

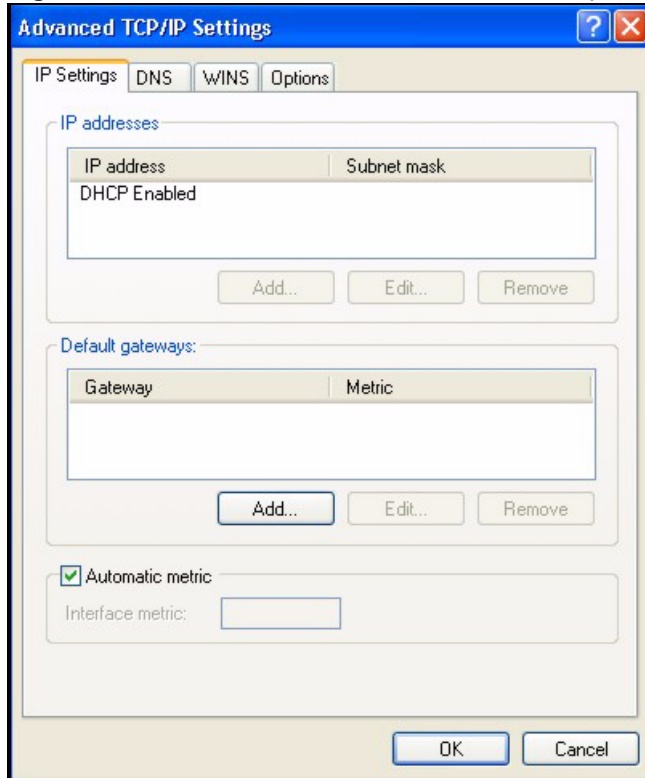Figure 146 Windows XP: Advanced TCP/IP Properties

- 7 In the **Internet Protocol TCP/IP Properties** window (the **General** tab in Windows XP):
- Click **Obtain DNS server address automatically** if you do not know your DNS server IP address(es).
 - If you know your DNS server IP address(es), click **Use the following DNS server addresses**, and type them in the **Preferred DNS server** and **Alternate DNS server** fields.
- If you have previously configured DNS servers, click **Advanced** and then the **DNS** tab to order them.

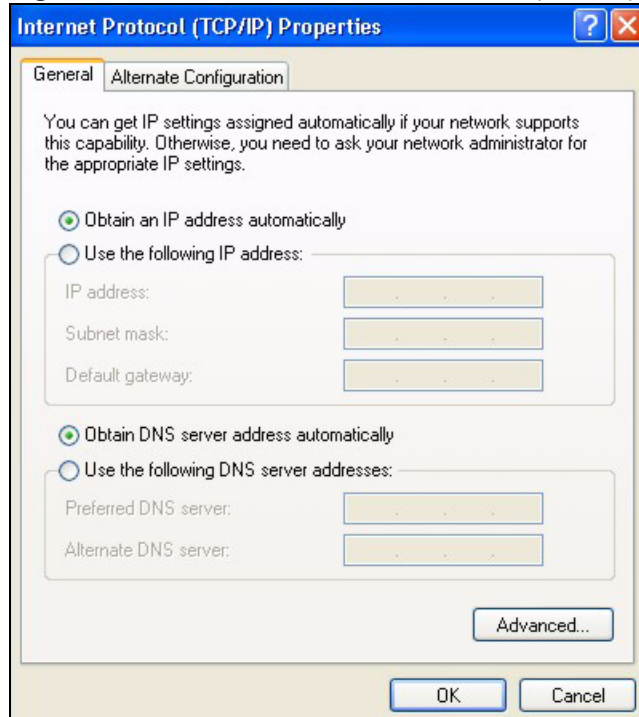Figure 147 Windows XP: Internet Protocol (TCP/IP) Properties

- 8** Click **OK** to close the **Internet Protocol (TCP/IP) Properties** window.
- 9** Click **Close** (**OK** in Windows 2000/NT) to close the **Local Area Connection Properties** window.
- 10** Close the **Network Connections** window (**Network and Dial-up Connections** in Windows 2000/NT).
- 11** Turn on your IES-708-22A and restart your computer (if prompted).

Verifying Settings


- 1** Click **Start**, **All Programs**, **Accessories** and then **Command Prompt**.
- 2** In the **Command Prompt** window, type "ipconfig" and then press [ENTER]. You can also open **Network Connections**, right-click a network connection, click **Status** and then click the **Support** tab.

Windows Vista

This section shows screens from Windows Vista Enterprise Version 6.0.


- 1** Click the **Start** icon, **Control Panel**.

Figure 148 Windows Vista: Start Menu

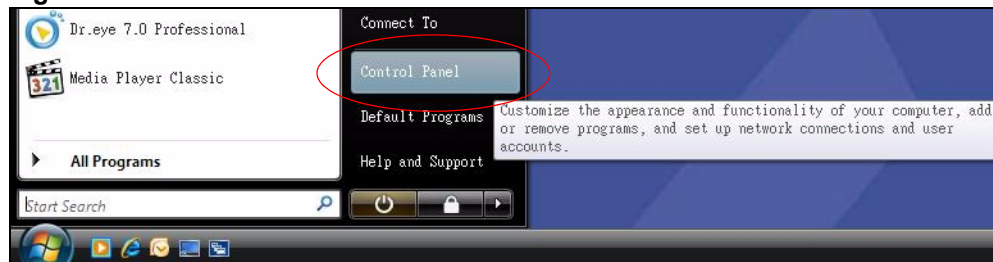


2 In the **Control Panel**, double-click **Network and Internet**.

Figure 149 Windows Vista: Control Panel

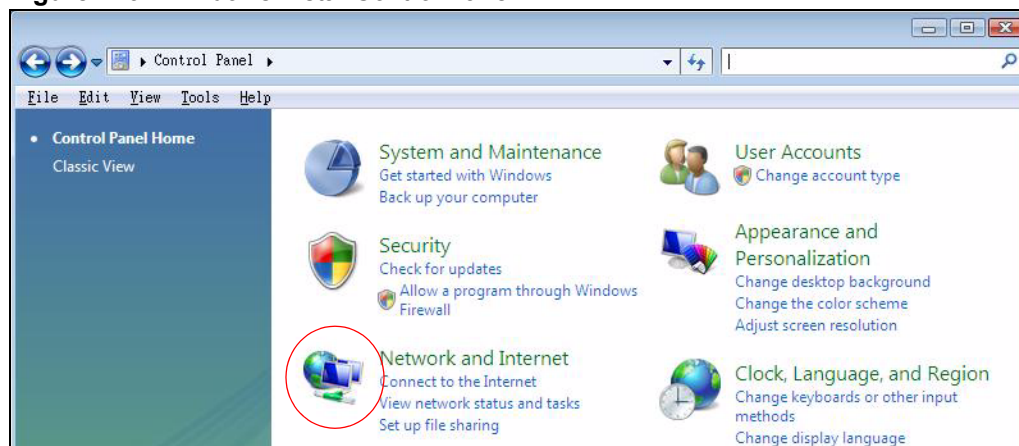


3 Click **Network and Sharing Center**.

Figure 150 Windows Vista: Network And Internet

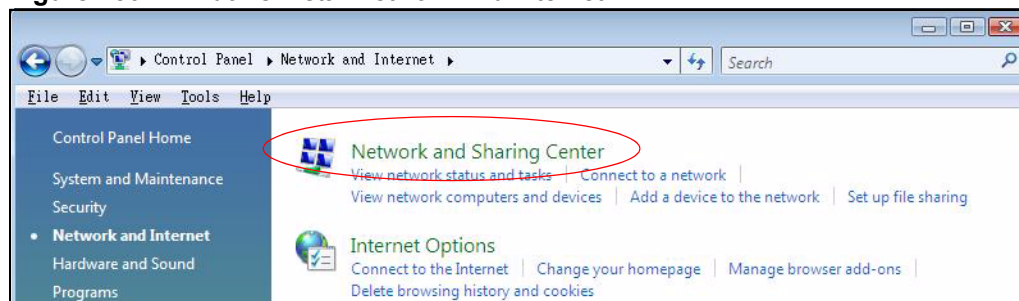

4 Click **Manage network connections**.

Figure 151 Windows Vista: Network and Sharing Center

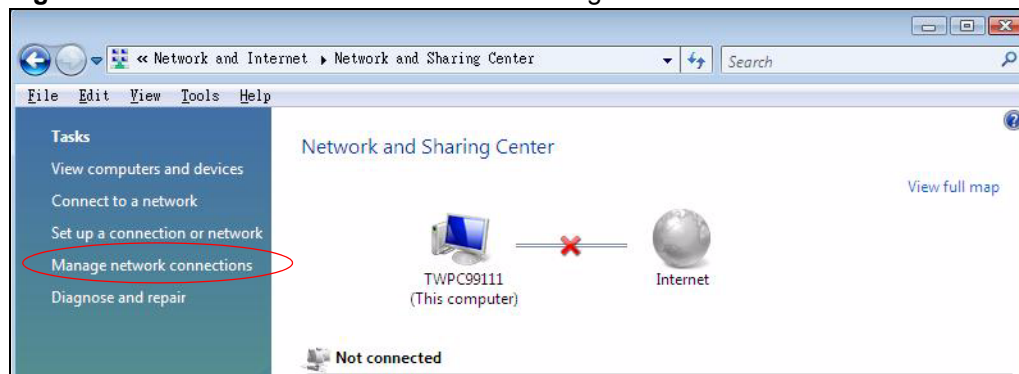


- 5 Right-click **Local Area Connection** and then click **Properties**.




During this procedure, click **Continue** whenever Windows displays a screen saying that it needs your permission to continue.

Figure 152 Windows Vista: Network and Sharing Center

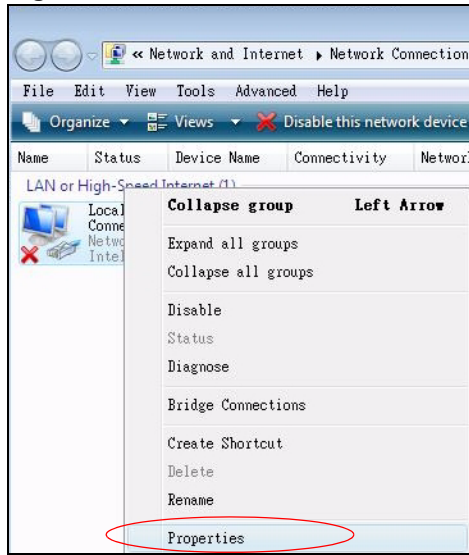

- 6 Select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.


Figure 153 Windows Vista: Local Area Connection Properties

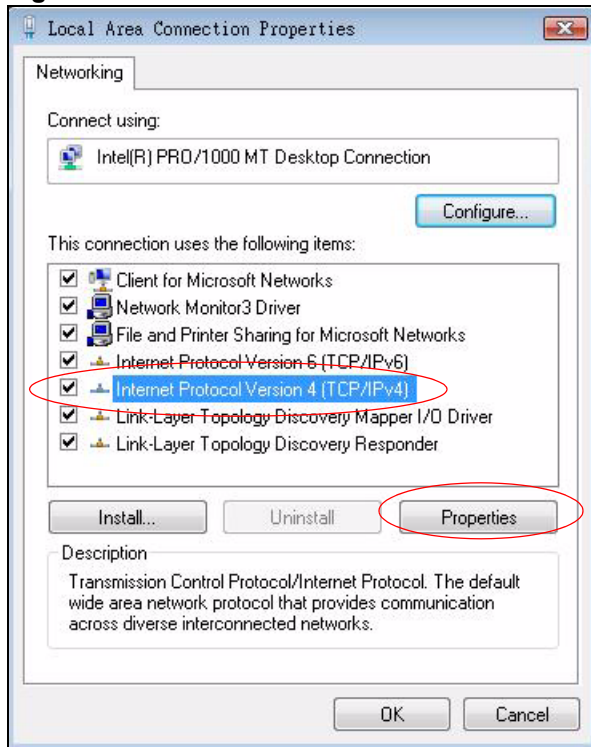

7 The **Internet Protocol Version 4 (TCP/IPv4) Properties** window opens (the **General** tab).

- If you have a dynamic IP address click **Obtain an IP address automatically**.
- If you have a static IP address click **Use the following IP address** and fill in the **IP address**, **Subnet mask**, and **Default gateway** fields.
- Click **Advanced**.


Figure 154 Windows Vista: Internet Protocol Version 4 (TCP/IPv4) Properties

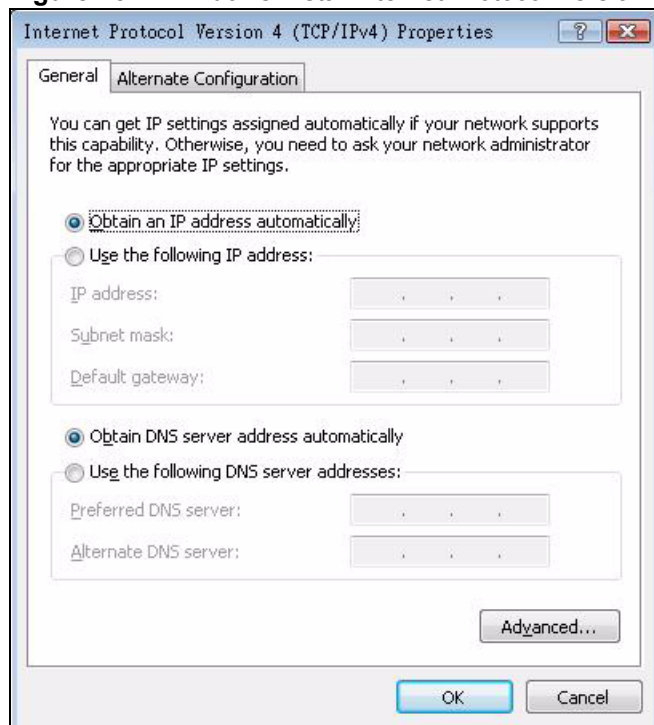

8 If you do not know your gateway's IP address, remove any previously installed gateways in the **IP Settings** tab and click **OK**.

Do one or more of the following if you want to configure additional IP addresses:

- In the **IP Settings** tab, in IP addresses, click **Add**.
- In **TCP/IP Address**, type an IP address in **IP address** and a subnet mask in **Subnet mask**, and then click **Add**.
- Repeat the above two steps for each IP address you want to add.
- Configure additional default gateways in the **IP Settings** tab by clicking **Add** in **Default gateways**.
- In **TCP/IP Gateway Address**, type the IP address of the default gateway in **Gateway**. To manually configure a default metric (the number of transmission hops), clear the **Automatic metric** check box and type a metric in **Metric**.
- Click **Add**.
- Repeat the previous three steps for each default gateway you want to add.
- Click **OK** when finished.

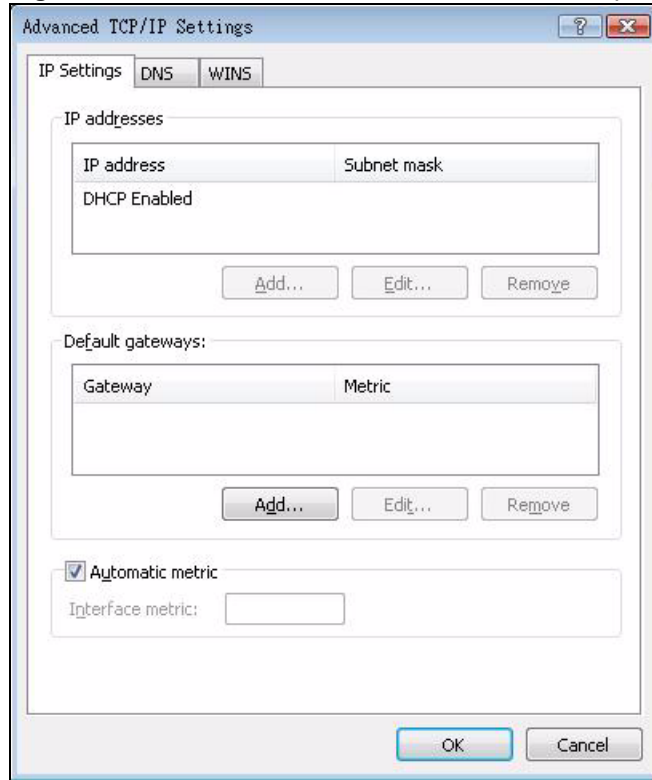
Figure 155 Windows Vista: Advanced TCP/IP Properties

9 In the **Internet Protocol Version 4 (TCP/IPv4) Properties** window, (the **General** tab):

- Click **Obtain DNS server address automatically** if you do not know your DNS server IP address(es).
- If you know your DNS server IP address(es), click **Use the following DNS server addresses**, and type them in the **Preferred DNS server** and **Alternate DNS server** fields.

If you have previously configured DNS servers, click **Advanced** and then the **DNS** tab to order them.

Figure 156 Windows Vista: Internet Protocol Version 4 (TCP/IPv4) Properties

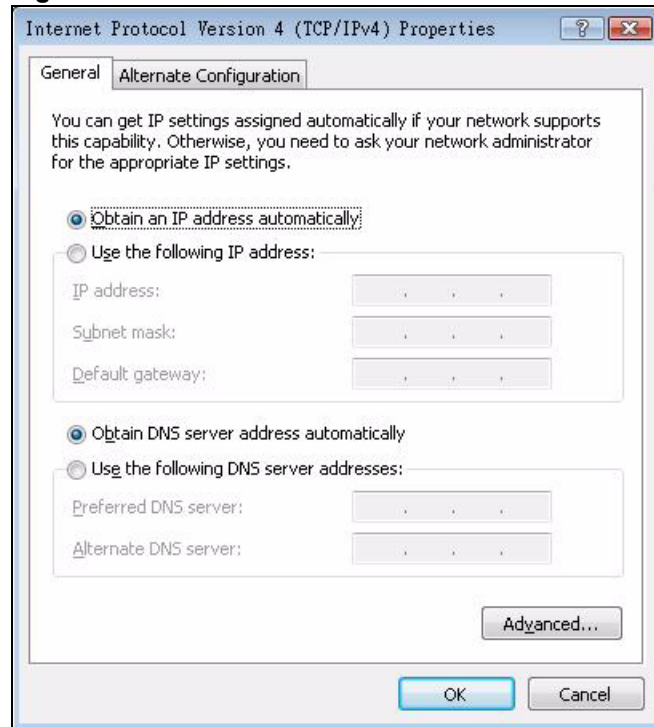


- 10** Click **OK** to close the **Internet Protocol Version 4 (TCP/IPv4) Properties** window.
- 11** Click **Close** to close the **Local Area Connection Properties** window.
- 12** Close the **Network Connections** window.
- 13** Turn on your IES-708-22A and restart your computer (if prompted).

Verifying Settings


- 1** Click **Start**, **All Programs**, **Accessories** and then **Command Prompt**.
- 2** In the **Command Prompt** window, type "ipconfig" and then press [ENTER]. You can also open **Network Connections**, right-click a network connection, click **Status** and then click the **Support** tab.

Macintosh OS 8/9

- 1** Click the **Apple** menu, **Control Panel** and double-click **TCP/IP** to open the **TCP/IP Control Panel**.

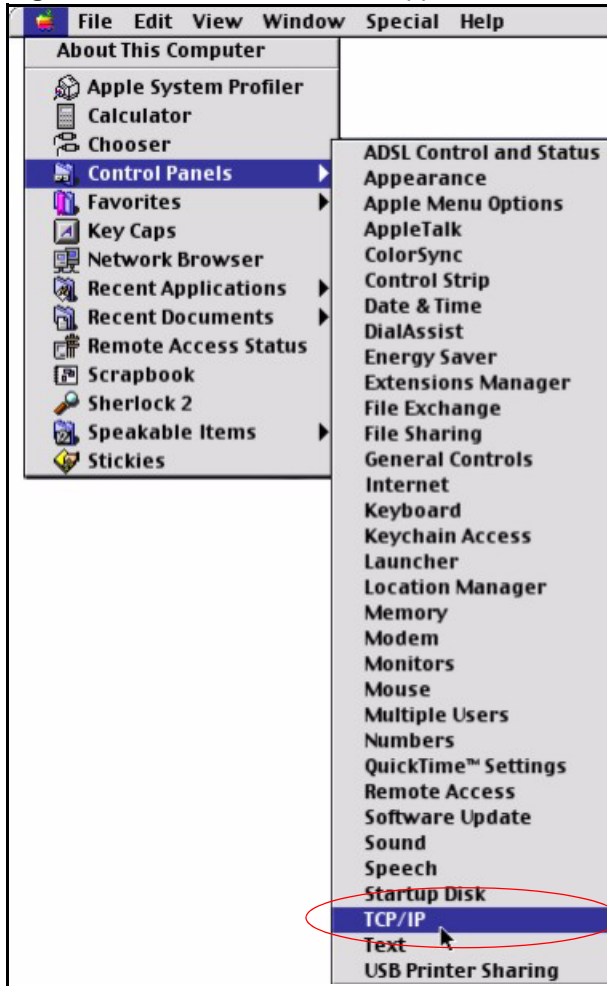Figure 157 Macintosh OS 8/9: Apple Menu

2 Select **Ethernet built-in** from the **Connect via** list.

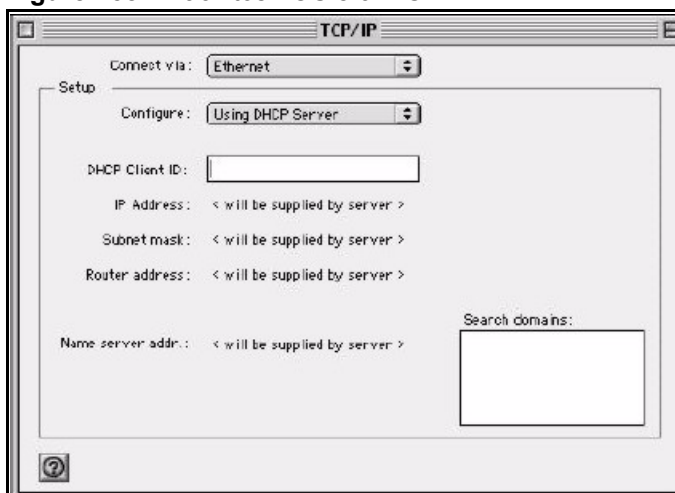Figure 158 Macintosh OS 8/9: TCP/IP

3 For dynamically assigned settings, select **Using DHCP Server** from the **Configure:** list.

4 For statically assigned settings, do the following:

- From the **Configure** box, select **Manually**.

- Type your IP address in the **IP Address** box.
 - Type your subnet mask in the **Subnet mask** box.
 - Type the IP address of your IES-708-22A in the **Router address** box.
- 5** Close the **TCP/IP Control Panel**.
 - 6** Click **Save** if prompted, to save changes to your configuration.
 - 7** Turn on your IES-708-22A and restart your computer (if prompted).


Verifying Settings

Check your TCP/IP properties in the **TCP/IP Control Panel** window.


Macintosh OS X

- 1** Click the **Apple** menu, and click **System Preferences** to open the **System Preferences** window.

Figure 159 Macintosh OS X: Apple Menu

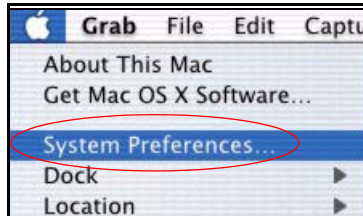

- 2** Click **Network** in the icon bar.
 - Select **Automatic** from the **Location** list.
 - Select **Built-in Ethernet** from the **Show** list.
 - Click the **TCP/IP** tab.
- 3** For dynamically assigned settings, select **Using DHCP** from the **Configure** list.

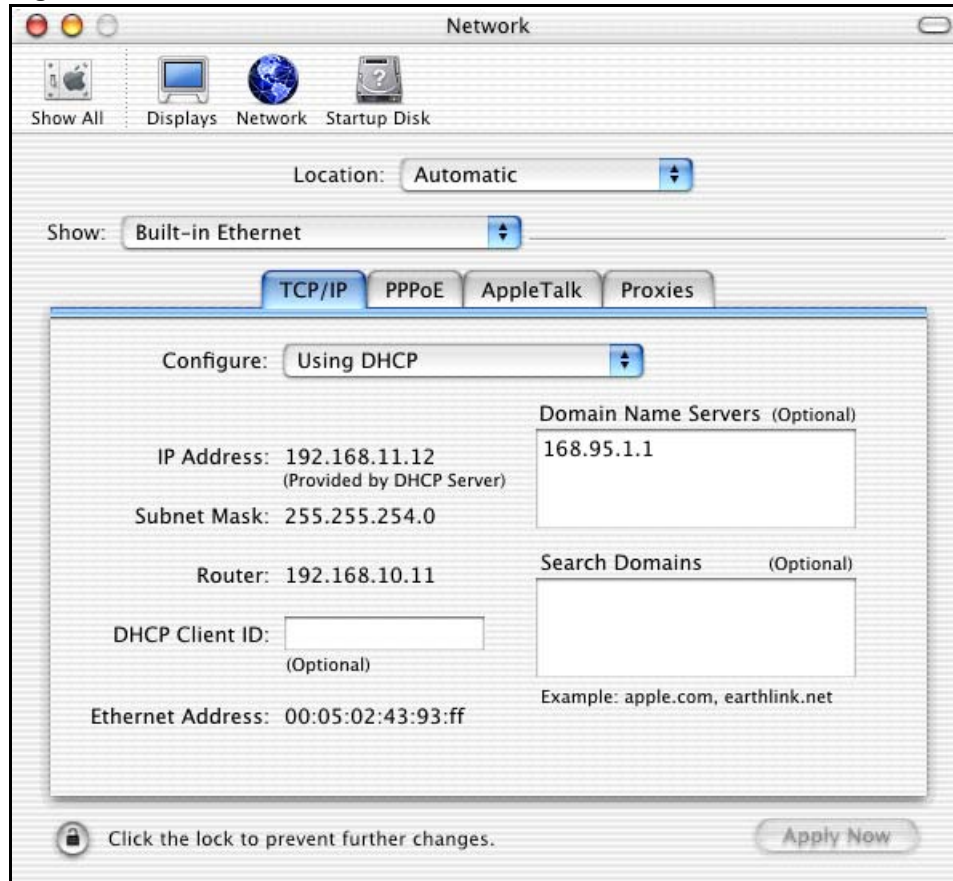Figure 160 Macintosh OS X: Network

- 4 For statically assigned settings, do the following:
 - From the **Configure** box, select **Manually**.
 - Type your IP address in the **IP Address** box.
 - Type your subnet mask in the **Subnet mask** box.
 - Type the IP address of your IES-708-22A in the **Router address** box.
- 5 Click **Apply Now** and close the window.
- 6 Turn on your IES-708-22A and restart your computer (if prompted).

Verifying Settings

Check your TCP/IP properties in the **Network** window.

Linux

This section shows you how to configure your computer's TCP/IP settings in Red Hat Linux 9.0. Procedure, screens and file location may vary depending on your Linux distribution and release version.




Make sure you are logged in as the root administrator.

Using the K Desktop Environment (KDE)

Follow the steps below to configure your computer IP address using the KDE.

- 1 Click the Red Hat button (located on the bottom left corner), select **System Setting** and click **Network**.

Figure 161 Red Hat 9.0: KDE: Network Configuration: Devices

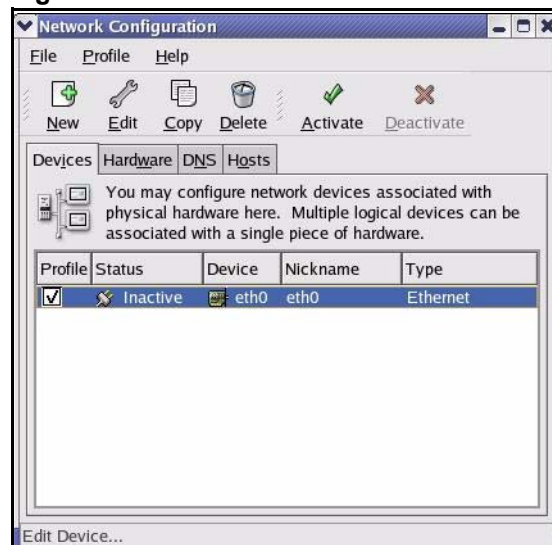


- 2 Double-click on the profile of the network card you wish to configure. The **Ethernet Device General** screen displays as shown.


Figure 162 Red Hat 9.0: KDE: Ethernet Device: General



- If you have a dynamic IP address, click **Automatically obtain IP address settings with** and select **dhcp** from the drop down list.
 - If you have a static IP address, click **Statically set IP Addresses** and fill in the **Address**, **Subnet mask**, and **Default Gateway Address** fields.
- 3 Click **OK** to save the changes and close the **Ethernet Device General** screen.
 - 4 If you know your DNS server IP address(es), click the **DNS** tab in the **Network Configuration** screen. Enter the DNS server information in the fields provided.

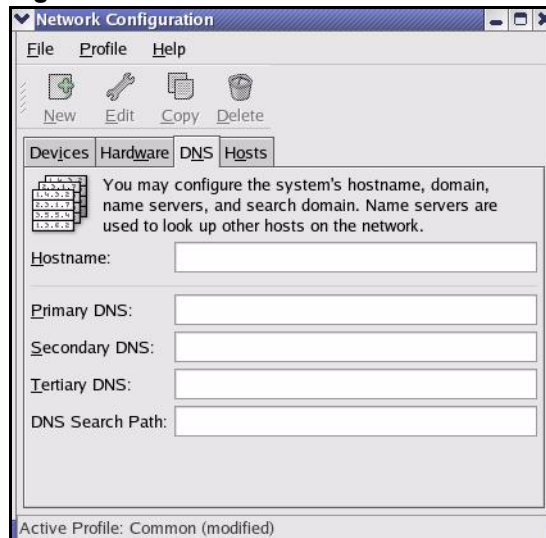Figure 163 Red Hat 9.0: KDE: Network Configuration: DNS

- 5 Click the **Devices** tab.
- 6 Click the **Activate** button to apply the changes. The following screen displays. Click **Yes** to save the changes in all screens.

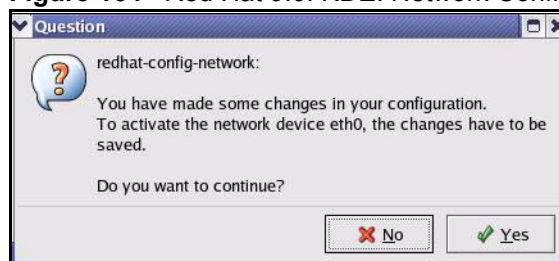Figure 164 Red Hat 9.0: KDE: Network Configuration: Activate

- 7 After the network card restart process is complete, make sure the **Status** is **Active** in the **Network Configuration** screen.

Using Configuration Files

Follow the steps below to edit the network configuration files and set your computer IP address.

- 1 Assuming that you have only one network card on the computer, locate the `ifconfig-eth0` configuration file (where `eth0` is the name of the Ethernet card). Open the configuration file with any plain text editor.
 - If you have a dynamic IP address, enter **dhcp** in the `BOOTPROTO=` field. The following figure shows an example.

Figure 165 Red Hat 9.0: Dynamic IP Address Setting in ifconfig-eth0

```
DEVICE=eth0
ONBOOT=yes
BOOTPROTO=dhcp
USERCTL=no
PEERDNS=yes
TYPE=Ethernet
```

- If you have a static IP address, enter **static** in the `BOOTPROTO=` field. Type `IPADDR=` followed by the IP address (in dotted decimal notation) and type `NETMASK=` followed by the subnet mask. The following example shows an example where the static IP address is 192.168.1.10 and the subnet mask is 255.255.255.0.

Figure 166 Red Hat 9.0: Static IP Address Setting in ifconfig-eth0

```
DEVICE=eth0
ONBOOT=yes
BOOTPROTO=static
IPADDR=192.168.1.10
NETMASK=255.255.255.0
USERCTL=no
PEERDNS=yes
TYPE=Ethernet
```

- 2 If you know your DNS server IP address(es), enter the DNS server information in the `resolv.conf` file in the `/etc` directory. The following figure shows an example where two DNS server IP addresses are specified.

Figure 167 Red Hat 9.0: DNS Settings in resolv.conf

```
nameserver 172.23.5.1
nameserver 172.23.5.2
```

- 3 After you edit and save the configuration files, you must restart the network card. Enter `./network restart` in the `/etc/rc.d/init.d` directory. The following figure shows an example.

Figure 168 Red Hat 9.0: Restart Ethernet Card

```
[root@localhost init.d]# network restart

Shutting down interface eth0:                [OK]
Shutting down loopback interface:            [OK]
Setting network parameters:                  [OK]
Bringing up loopback interface:               [OK]
Bringing up interface eth0:                   [OK]
```

Verifying Settings

Enter `ifconfig` in a terminal screen to check your TCP/IP properties.

Figure 169 Red Hat 9.0: Checking TCP/IP Properties

```
[root@localhost]# ifconfig
eth0      Link encap:Ethernet  HWaddr 00:50:BA:72:5B:44
          inet addr:172.23.19.129  Bcast:172.23.19.255  Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:717 errors:0 dropped:0 overruns:0 frame:0
          TX packets:13 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:100
          RX bytes:730412 (713.2 Kb)  TX bytes:1570 (1.5 Kb)
          Interrupt:10 Base address:0x1000
[root@localhost]#
```


Pop-up Windows, JavaScripts and Java Permissions

In order to use the web configurator you need to allow:

- Web browser pop-up windows from your device.
- JavaScripts (enabled by default).
- Java permissions (enabled by default).



Internet Explorer 6 screens are used here. Screens for other Internet Explorer versions may vary.

Internet Explorer Pop-up Blockers


You may have to disable pop-up blocking to log into your device.

Either disable pop-up blocking (enabled by default in Windows XP SP (Service Pack) 2) or allow pop-up blocking and create an exception for your device's IP address.

Disable Pop-up Blockers

- 1 In Internet Explorer, select **Tools, Pop-up Blocker** and then select **Turn Off Pop-up Blocker**.

Figure 170 Pop-up Blocker

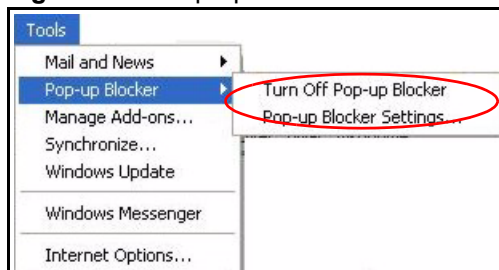


You can also check if pop-up blocking is disabled in the **Pop-up Blocker** section in the **Privacy** tab.

- 1 In Internet Explorer, select **Tools, Internet Options, Privacy**.

- 2 Clear the **Block pop-ups** check box in the **Pop-up Blocker** section of the screen. This disables any web pop-up blockers you may have enabled.

Figure 171 Internet Options: Privacy

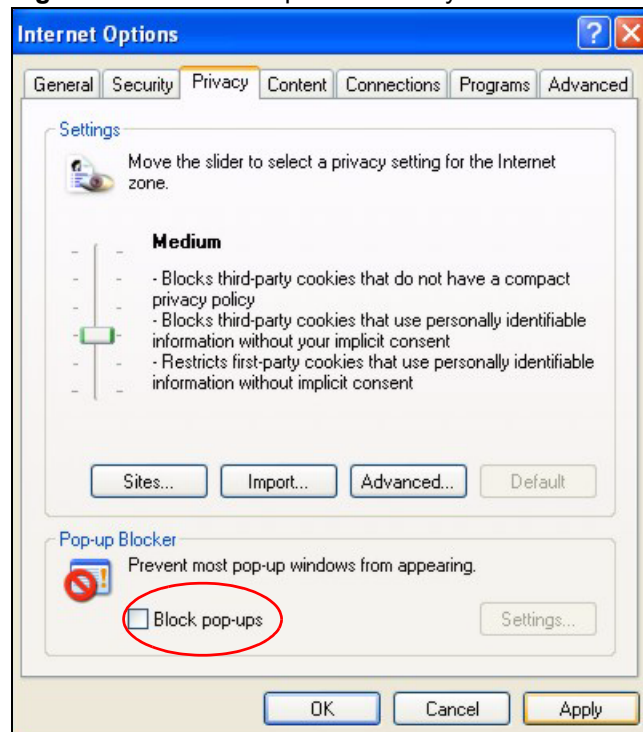


- 3 Click **Apply** to save this setting.


Enable Pop-up Blockers with Exceptions

Alternatively, if you only want to allow pop-up windows from your device, see the following steps.

- 1 In Internet Explorer, select **Tools, Internet Options** and then the **Privacy** tab.
- 2 Select **Settings...** to open the **Pop-up Blocker Settings** screen.

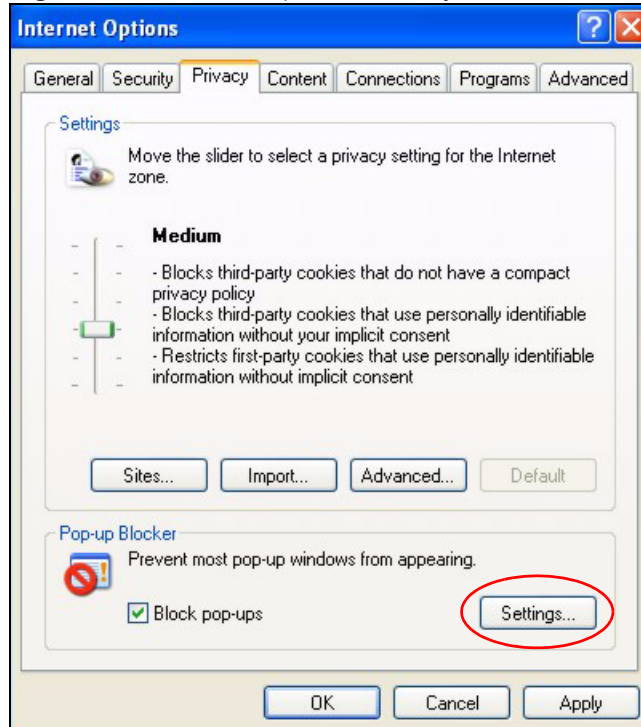Figure 172 Internet Options: Privacy

- 3 Type the IP address of your device (the web page that you do not want to have blocked) with the prefix "http://". For example, http://192.168.167.1.
- 4 Click **Add** to move the IP address to the list of **Allowed sites**.

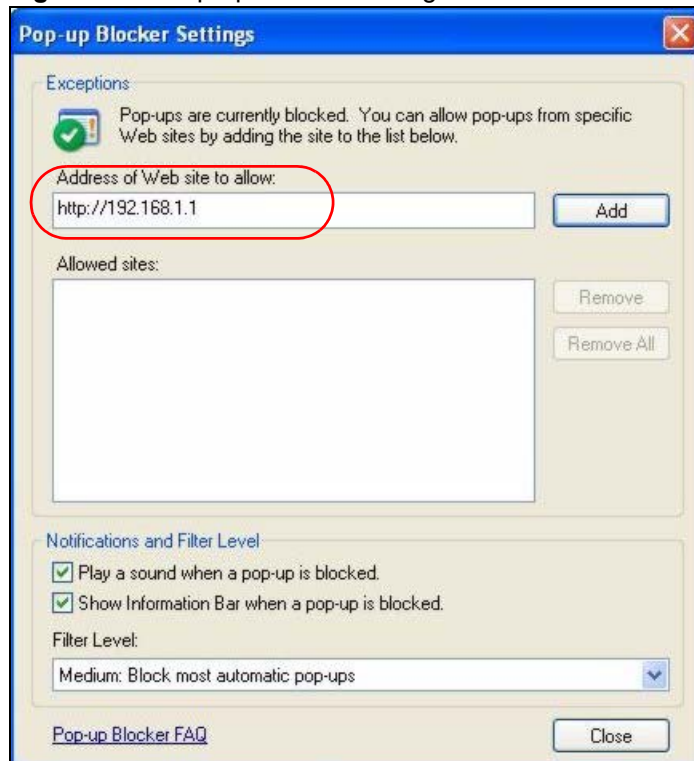Figure 173 Pop-up Blocker Settings


- 5 Click **Close** to return to the **Privacy** screen.
- 6 Click **Apply** to save this setting.

JavaScripts


If pages of the web configurator do not display properly in Internet Explorer, check that JavaScripts are allowed.

- 1 In Internet Explorer, click **Tools**, **Internet Options** and then the **Security** tab.

Figure 174 Internet Options: Security

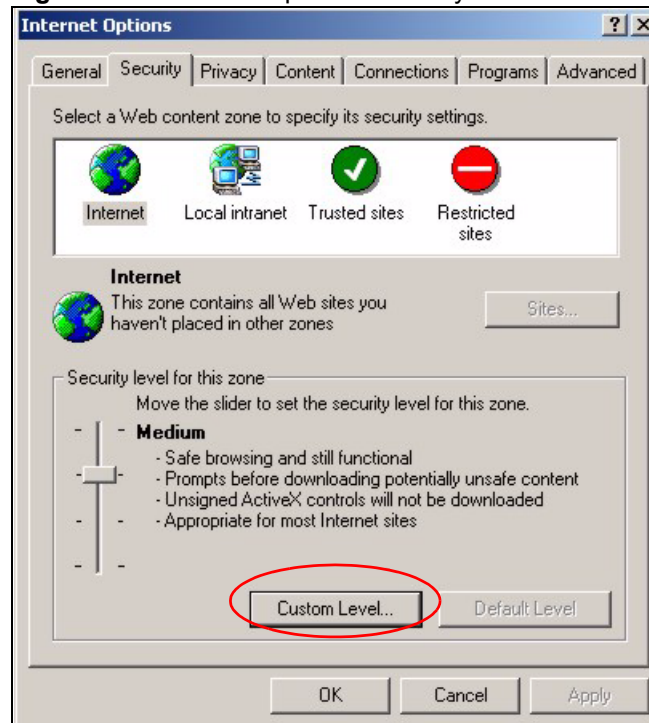


- 2 Click the **Custom Level...** button.
- 3 Scroll down to **Scripting**.
- 4 Under **Active scripting** make sure that **Enable** is selected (the default).
- 5 Under **Scripting of Java applets** make sure that **Enable** is selected (the default).
- 6 Click **OK** to close the window.

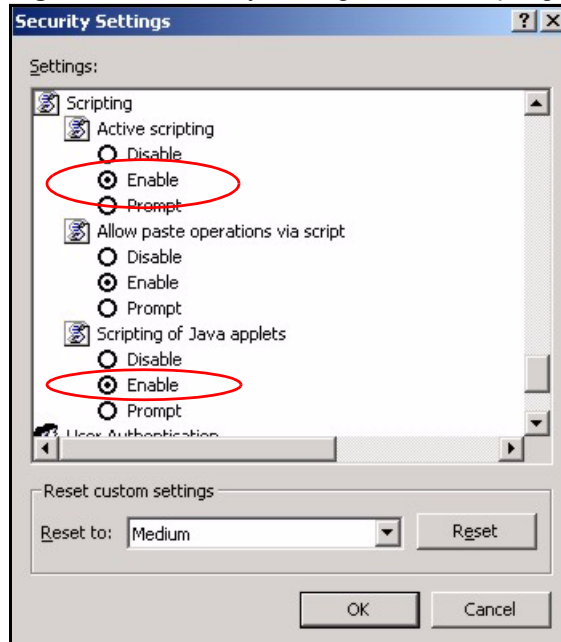Figure 175 Security Settings - Java Scripting

Java Permissions


- 1 From Internet Explorer, click **Tools, Internet Options** and then the **Security** tab.
- 2 Click the **Custom Level...** button.
- 3 Scroll down to **Microsoft VM**.
- 4 Under **Java permissions** make sure that a safety level is selected.
- 5 Click **OK** to close the window.

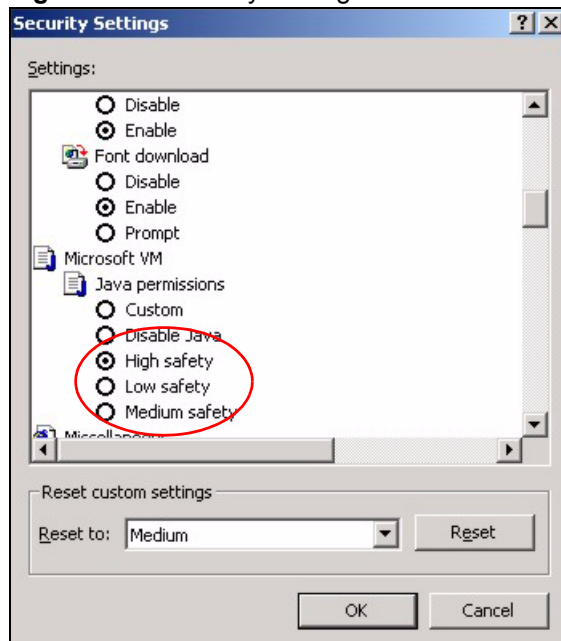Figure 176 Security Settings - Java

JAVA (Sun)

- 1 From Internet Explorer, click **Tools**, **Internet Options** and then the **Advanced** tab.
- 2 Make sure that **Use Java 2 for <applet>** under **Java (Sun)** is selected.
- 3 Click **OK** to close the window.


Figure 177 Java (Sun)

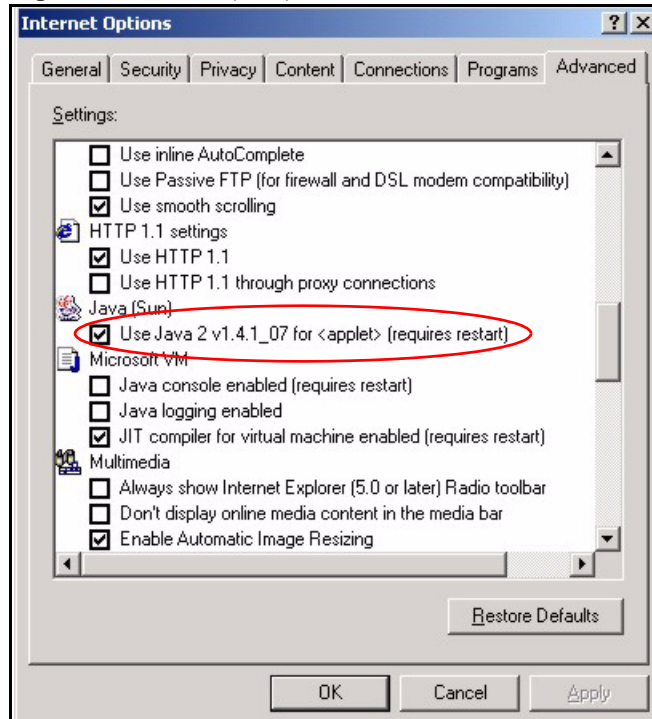


Mozilla Firefox

Mozilla Firefox 2.0 screens are used here. Screens for other versions may vary.

You can enable Java, Javascripts and pop-ups in one screen. Click **Tools**, then click **Options** in the screen that appears.

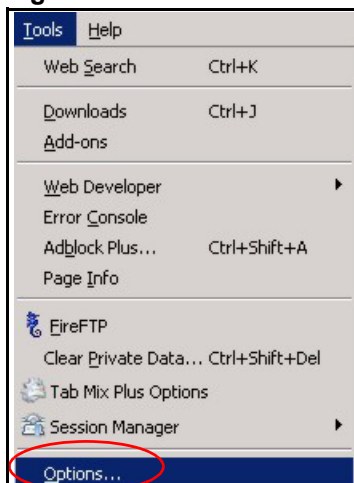Figure 178 Mozilla Firefox: Tools > Options

Click **Content** to show the screen below. Select the check boxes as shown in the following screen.

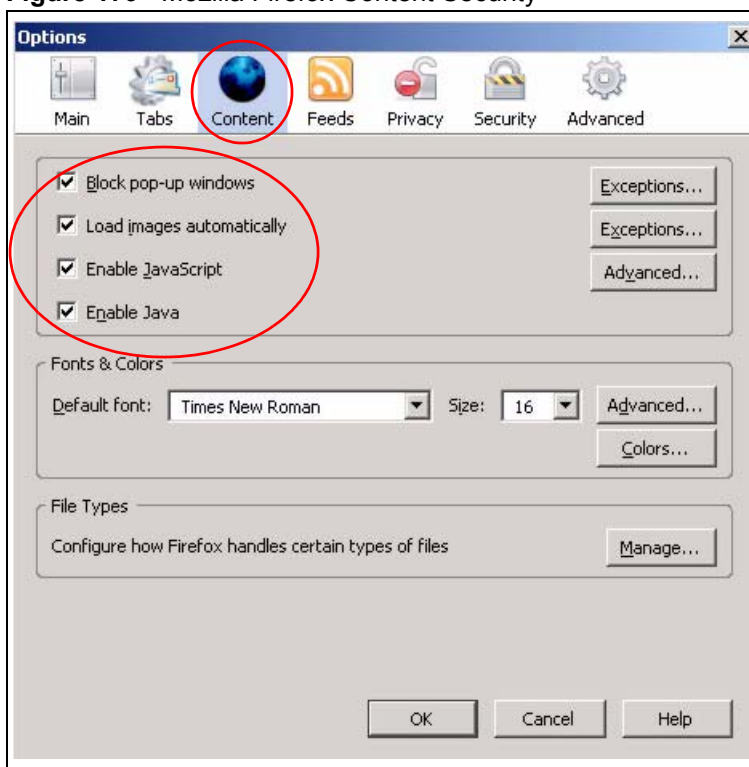Figure 179 Mozilla Firefox Content Security

Common Services

The following table lists some commonly-used services and their associated protocols and port numbers. For a comprehensive list of port numbers, ICMP type/code numbers and services, visit the IANA (Internet Assigned Number Authority) web site.

- **Name:** This is a short, descriptive name for the service. You can use this one or create a different one, if you like.
- **Protocol:** This is the type of IP protocol used by the service. If this is **TCP/UDP**, then the service uses the same port number with TCP and UDP. If this is **USER-DEFINED**, the **Port(s)** is the IP protocol number, not the port number.
- **Port(s):** This value depends on the **Protocol**. Please refer to RFC 1700 for further information about port numbers.
 - If the **Protocol** is **TCP**, **UDP**, or **TCP/UDP**, this is the IP port number.
 - If the **Protocol** is **USER**, this is the IP protocol number.
- **Description:** This is a brief explanation of the applications that use this service or the situations in which this service is used.

Table 104 Commonly Used Services

NAME	PROTOCOL	PORT(S)	DESCRIPTION
AH (IPSEC_TUNNEL)	User-Defined	51	The IPSEC AH (Authentication Header) tunneling protocol uses this service.
AIM/New-ICQ	TCP	5190	AOL's Internet Messenger service. It is also used as a listening port by ICQ.
AUTH	TCP	113	Authentication protocol used by some servers.
BGP	TCP	179	Border Gateway Protocol.
BOOTP_CLIENT	UDP	68	DHCP Client.
BOOTP_SERVER	UDP	67	DHCP Server.
CU-SEEME	TCP UDP	7648 24032	A popular videoconferencing solution from White Pines Software.
DNS	TCP/UDP	53	Domain Name Server, a service that matches web names (for example www.zyxel.com) to IP numbers.
ESP (IPSEC_TUNNEL)	User-Defined	50	The IPSEC ESP (Encapsulation Security Protocol) tunneling protocol uses this service.
FINGER	TCP	79	Finger is a UNIX or Internet related command that can be used to find out if a user is logged on.

Table 104 Commonly Used Services (continued)

NAME	PROTOCOL	PORT(S)	DESCRIPTION
FTP	TCP TCP	20 21	File Transfer Program, a program to enable fast transfer of files, including large files that may not be possible by e-mail.
H.323	TCP	1720	NetMeeting uses this protocol.
HTTP	TCP	80	Hyper Text Transfer Protocol - a client/server protocol for the world wide web.
HTTPS	TCP	443	HTTPS is a secured http session often used in e-commerce.
ICMP	User-Defined	1	Internet Control Message Protocol is often used for diagnostic or routing purposes.
ICQ	UDP	4000	This is a popular Internet chat program.
IGMP (MULTICAST)	User-Defined	2	Internet Group Management Protocol is used when sending packets to a specific group of hosts.
IKE	UDP	500	The Internet Key Exchange algorithm is used for key distribution and management.
IRC	TCP/UDP	6667	This is another popular Internet chat program.
MSN Messenger	TCP	1863	Microsoft Networks' messenger service uses this protocol.
NEW-ICQ	TCP	5190	An Internet chat program.
NEWS	TCP	144	A protocol for news groups.
NFS	UDP	2049	Network File System - NFS is a client/server distributed file service that provides transparent file sharing for network environments.
NNTP	TCP	119	Network News Transport Protocol is the delivery mechanism for the USENET newsgroup service.
PING	User-Defined	1	Packet INternet Groper is a protocol that sends out ICMP echo requests to test whether or not a remote host is reachable.
POP3	TCP	110	Post Office Protocol version 3 lets a client computer get e-mail from a POP3 server through a temporary connection (TCP/IP or other).
PPTP	TCP	1723	Point-to-Point Tunneling Protocol enables secure transfer of data over public networks. This is the control channel.
PPTP_TUNNEL (GRE)	User-Defined	47	PPTP (Point-to-Point Tunneling Protocol) enables secure transfer of data over public networks. This is the data channel.
RCMD	TCP	512	Remote Command Service.
REAL_AUDIO	TCP	7070	A streaming audio service that enables real time sound over the web.
REXEC	TCP	514	Remote Execution Daemon.
RLOGIN	TCP	513	Remote Login.

Table 104 Commonly Used Services (continued)


NAME	PROTOCOL	PORT(S)	DESCRIPTION
RTELNET	TCP	107	Remote Telnet.
RTSP	TCP/UDP	554	The Real Time Streaming (media control) Protocol (RTSP) is a remote control for multimedia on the Internet.
SFTP	TCP	115	Simple File Transfer Protocol.
SMTP	TCP	25	Simple Mail Transfer Protocol is the message-exchange standard for the Internet. SMTP enables you to move messages from one e-mail server to another.
SNMP	TCP/UDP	161	Simple Network Management Program.
SNMP-TRAPS	TCP/UDP	162	Traps for use with the SNMP (RFC:1215).
SQL-NET	TCP	1521	Structured Query Language is an interface to access data on many different types of database systems, including mainframes, midrange systems, UNIX systems and network servers.
SSH	TCP/UDP	22	Secure Shell Remote Login Program.
STRM WORKS	UDP	1558	Stream Works Protocol.
SYSLOG	UDP	514	Syslog allows you to send system logs to a UNIX server.
TACACS	UDP	49	Login Host Protocol used for (Terminal Access Controller Access Control System).
TELNET	TCP	23	Telnet is the login and terminal emulation protocol common on the Internet and in UNIX environments. It operates over TCP/IP networks. Its primary function is to allow users to log into remote host systems.
TFTP	UDP	69	Trivial File Transfer Protocol is an Internet file transfer protocol similar to FTP, but uses the UDP (User Datagram Protocol) rather than TCP (Transmission Control Protocol).
VDOLIVE	TCP	7000	Another videoconferencing solution.

Virtual Circuit Topology

ATM is a connection-oriented technology, meaning that it sets up virtual circuits over which end systems communicate. The terminology for virtual circuits is as follows:

- Virtual Channel Logical connections between ATM switches
- Virtual Path A bundle of virtual channels
- Virtual Circuits A series of virtual paths between circuit end point

Figure 180 Virtual Circuit Topology

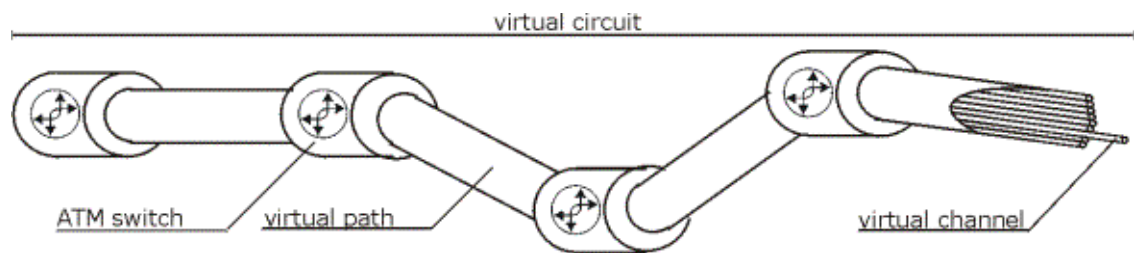

Think of a virtual path as a cable that contains a bundle of wires. The cable connects two points and wires within the cable provide individual circuits between the two points. In an ATM cell header, a VPI (Virtual Path Identifier) identifies a link formed by a virtual path; a VCI (Virtual Channel Identifier) identifies a channel within a virtual path.

The VPI and VCI identify a virtual path, that is, termination points between ATM switches. A series of virtual paths make up a virtual circuit.

Legal Information

Copyright

Copyright © 2007 by ZyXEL Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of ZyXEL Communications Corporation.

Published by ZyXEL Communications Corporation. All rights reserved.

Disclaimer

ZyXEL does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. ZyXEL further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Trademarks

ZyNOS (ZyXEL Network Operating System) is a registered trademark of ZyXEL Communications, Inc. Other trademarks mentioned in this publication are used for identification purposes only and may be properties of their respective owners.

Certifications

Federal Communications Commission (FCC) Interference Statement

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operations.

FCC Warning

This device has been tested and found to comply with the limits for a Class A digital switch, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this device in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning:

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Taiwanese BSMI (Bureau of Standards, Metrology and Inspection) A Warning:

警告使用者
這是甲類的資訊產品，在居住的環境使用時，
可能造成射頻干擾，在這種情況下，
使用者會被要求採取某些適當的對策。

Notices

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CLASS 1 LASER PRODUCT

APPAREIL A LASER DE CLASS 1

PRODUCT COMPLIES WITH 21 CFR 1040.10 AND 1040.11.

PRODUIT CONFORME SELON 21 CFR 1040.10 ET 1040.11.

Viewing Certifications

- 1 Go to <http://www.zyxel.com>.
- 2 Select your product on the ZyXEL home page to go to that product's page.
- 3 Select the certification you wish to view from this page.

ZyXEL Limited Warranty

ZyXEL warrants to the original end user (purchaser) that this product is free from any defects in materials or workmanship for a period of up to two years from the date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, ZyXEL will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating

condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of ZyXEL. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. ZyXEL shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact ZyXEL's Service Center for your Return Material Authorization number (RMA). Products must be returned Postage Prepaid. It is recommended that the unit be insured when shipped. Any returned products without proof of purchase or those with an out-dated warranty will be repaired or replaced (at the discretion of ZyXEL) and the customer will be billed for parts and labor. All repaired or replaced products will be shipped by ZyXEL to the corresponding return address, Postage Paid. This warranty gives you specific legal rights, and you may also have other rights that vary from country to country.

Registration

Register your product online to receive e-mail notices of firmware upgrades and information at www.zyxel.com for global products, or at www.us.zyxel.com for North American products.

Customer Support

Please have the following information ready when you contact customer support.

Required Information

- Product model and serial number.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

“+” is the (prefix) number you dial to make an international telephone call.

Corporate Headquarters (Worldwide)

- Support E-mail: support@zyxel.com.tw
- Sales E-mail: sales@zyxel.com.tw
- Telephone: +886-3-578-3942
- Fax: +886-3-578-2439
- Web: www.zyxel.com, www.europe.zyxel.com
- FTP: [ftp.zyxel.com](ftp://ftp.zyxel.com), [ftp.europe.zyxel.com](ftp://ftp.europe.zyxel.com)
- Regular Mail: ZyXEL Communications Corp., 6 Innovation Road II, Science Park, Hsinchu 300, Taiwan

Costa Rica

- Support E-mail: soporte@zyxel.co.cr
- Sales E-mail: sales@zyxel.co.cr
- Telephone: +506-2017878
- Fax: +506-2015098
- Web: www.zyxel.co.cr
- FTP: [ftp.zyxel.co.cr](ftp://ftp.zyxel.co.cr)
- Regular Mail: ZyXEL Costa Rica, Plaza Roble Escazú, Etapa El Patio, Tercer Piso, San José, Costa Rica

Czech Republic

- E-mail: info@cz.zyxel.com
- Telephone: +420-241-091-350
- Fax: +420-241-091-359
- Web: www.zyxel.cz

- Regular Mail: ZyXEL Communications, Czech s.r.o., Modranská 621, 143 01 Praha 4 - Modrany, Česká Republika

Denmark

- Support E-mail: support@zyxel.dk
- Sales E-mail: sales@zyxel.dk
- Telephone: +45-39-55-07-00
- Fax: +45-39-55-07-07
- Web: www.zyxel.dk
- Regular Mail: ZyXEL Communications A/S, Columbusvej, 2860 Soeborg, Denmark

Finland

- Support E-mail: support@zyxel.fi
- Sales E-mail: sales@zyxel.fi
- Telephone: +358-9-4780-8411
- Fax: +358-9-4780-8448
- Web: www.zyxel.fi
- Regular Mail: ZyXEL Communications Oy, Malminkaari 10, 00700 Helsinki, Finland

France

- E-mail: info@zyxel.fr
- Telephone: +33-4-72-52-97-97
- Fax: +33-4-72-52-19-20
- Web: www.zyxel.fr
- Regular Mail: ZyXEL France, 1 rue des Vergers, Bat. 1 / C, 69760 Limonest, France

Germany

- Support E-mail: support@zyxel.de
- Sales E-mail: sales@zyxel.de
- Telephone: +49-2405-6909-69
- Fax: +49-2405-6909-99
- Web: www.zyxel.de
- Regular Mail: ZyXEL Deutschland GmbH., Adenauerstr. 20/A2 D-52146, Wuerselen, Germany

Hungary

- Support E-mail: support@zyxel.hu
- Sales E-mail: info@zyxel.hu
- Telephone: +36-1-3361649
- Fax: +36-1-3259100
- Web: www.zyxel.hu
- Regular Mail: ZyXEL Hungary, 48, Zoldlomb Str., H-1025, Budapest, Hungary

India

- Support E-mail: support@zyxel.in
- Sales E-mail: sales@zyxel.in
- Telephone: +91-11-30888144 to +91-11-30888153
- Fax: +91-11-30888149, +91-11-26810715
- Web: <http://www.zyxel.in>
- Regular Mail: India - ZyXEL Technology India Pvt Ltd., II-Floor, F2/9 Okhla Phase -1, New Delhi 110020, India

Japan

- Support E-mail: support@zyxel.co.jp
- Sales E-mail: zyp@zyxel.co.jp
- Telephone: +81-3-6847-3700
- Fax: +81-3-6847-3705
- Web: www.zyxel.co.jp
- Regular Mail: ZyXEL Japan, 3F, Office T&U, 1-10-10 Higashi-Gotanda, Shinagawa-ku, Tokyo 141-0022, Japan

Kazakhstan

- Support: <http://zyxel.kz/support>
- Sales E-mail: sales@zyxel.kz
- Telephone: +7-3272-590-698
- Fax: +7-3272-590-689
- Web: www.zyxel.kz
- Regular Mail: ZyXEL Kazakhstan, 43 Dostyk Ave., Office 414, Dostyk Business Centre, 050010 Almaty, Republic of Kazakhstan

Malaysia

- Support E-mail: support@zyxel.com.my
- Sales E-mail: sales@zyxel.com.my
- Telephone: +603-8076-9933
- Fax: +603-8076-9833
- Web: <http://www.zyxel.com.my>
- Regular Mail: ZyXEL Malaysia Sdn Bhd., 1-02 & 1-03, Jalan Kenari 17F, Bandar Puchong Jaya, 47100 Puchong, Selangor Darul Ehsan, Malaysia

North America

- Support E-mail: support@zyxel.com
- Sales E-mail: sales@zyxel.com
- Telephone: +1-800-255-4101, +1-714-632-0882
- Fax: +1-714-632-0858
- Web: www.us.zyxel.com
- FTP: <ftp.us.zyxel.com>

- Regular Mail: ZyXEL Communications Inc., 1130 N. Miller St., Anaheim, CA 92806-2001, U.S.A.

Norway

- Support E-mail: support@zyxel.no
- Sales E-mail: sales@zyxel.no
- Telephone: +47-22-80-61-80
- Fax: +47-22-80-61-81
- Web: www.zyxel.no
- Regular Mail: ZyXEL Communications A/S, Nils Hansens vei 13, 0667 Oslo, Norway

Poland

- E-mail: info@pl.zyxel.com
- Telephone: +48-22-333 8250
- Fax: +48-22-333 8251
- Web: www.pl.zyxel.com
- Regular Mail: ZyXEL Communications, ul. Okrzei 1A, 03-715 Warszawa, Poland

Russia

- Support: <http://zyxel.ru/support>
- Sales E-mail: sales@zyxel.ru
- Telephone: +7-095-542-89-29
- Fax: +7-095-542-89-25
- Web: www.zyxel.ru
- Regular Mail: ZyXEL Russia, Ostrovityanova 37a Str., Moscow 117279, Russia

Singapore

- Support E-mail: support@zyxel.com.sg
- Sales E-mail: sales@zyxel.com.sg
- Telephone: +65-6899-6678
- Fax: +65-6899-8887
- Web: <http://www.zyxel.com.sg>
- Regular Mail: ZyXEL Singapore Pte Ltd., No. 2 International Business Park, The Strategy #03-28, Singapore 609930

Spain

- Support E-mail: support@zyxel.es
- Sales E-mail: sales@zyxel.es
- Telephone: +34-902-195-420
- Fax: +34-913-005-345
- Web: www.zyxel.es
- Regular Mail: ZyXEL Communications, Arte, 21 5ª planta, 28033 Madrid, Spain

Sweden

- Support E-mail: support@zyxel.se
- Sales E-mail: sales@zyxel.se
- Telephone: +46-31-744-7700
- Fax: +46-31-744-7701
- Web: www.zyxel.se
- Regular Mail: ZyXEL Communications A/S, Sjöporten 4, 41764 Göteborg, Sweden

Thailand

- Support E-mail: support@zyxel.co.th
- Sales E-mail: sales@zyxel.co.th
- Telephone: +662-831-5315
- Fax: +662-831-5395
- Web: <http://www.zyxel.co.th>
- Regular Mail: ZyXEL Thailand Co., Ltd., 1/1 Moo 2, Ratchaphruk Road, Bangrak-Noi, Muang, Nonthaburi 11000, Thailand.

Ukraine

- Support E-mail: support@ua.zyxel.com
- Sales E-mail: sales@ua.zyxel.com
- Telephone: +380-44-247-69-78
- Fax: +380-44-494-49-32
- Web: www.ua.zyxel.com
- Regular Mail: ZyXEL Ukraine, 13, Pimonenko Str., Kiev 04050, Ukraine

United Kingdom

- Support E-mail: support@zyxel.co.uk
- Sales E-mail: sales@zyxel.co.uk
- Telephone: +44-1344-303044, 08707-555779 (UK only)
- Fax: +44-1344-303034
- Web: www.zyxel.co.uk
- FTP: [ftp.zyxel.co.uk](ftp://ftp.zyxel.co.uk)
- Regular Mail: ZyXEL Communications UK Ltd., 11 The Courtyard, Eastern Road, Bracknell, Berkshire RG12 2XB, United Kingdom (UK)

Index

Numerics

2684 routed mode [353](#)
 4-wire [117](#)
 8-wire [117](#)

A

Access Control [219](#)
 Address Resolution Protocol. See ARP. [166](#)
 aging time [96](#)
 alarm commands [269](#)
 Alarm Profile Screen [124](#), [126](#)
 Annex A [119](#)
 Annex B [119](#)
 applications [39](#), [40](#)
 ARP [166](#), [243](#)
 table [243](#)
 ATM F5 [240](#)
 ATM Forum Traffic Management 4.0 Specification [120](#)
 ATM QoS [119](#)
 ATM traffic class [120](#), [123](#)
 authentication [90](#)
 default privilege level for administrators [91](#)
 modes for administrators [91](#)
 user [90](#)
 authentication modes
 administrator [91](#)

B

back up configuration [237](#)
 Bridge Protocol Data Units (BPDU) [170](#)
 Burst Tolerance (BT) [121](#)

C

Canonical Format Indicator (CFI) [139](#)
 Cell Delay Variation Tolerance (CDVT) [121](#)

certifications [433](#)
 notices [434](#)
 viewing [434](#)
 CI [247](#)
 CI commands. See commands. [247](#)
 CLI [247](#)
 CLI commands. See commands. [247](#)
 command interface [42](#)
 Command Line Interface. See CI or CLI. [247](#)
 commands [247](#), [248](#)
 abbreviations [247](#)
 config save [248](#)
 configuration
 back up [237](#), [321](#)
 file names [321](#)
 restore [236](#), [321](#)
 using FTP [321](#)
 console port [50](#), [384](#)
 pin assignments [392](#)
 Constant Bit Rate (CBR) [120](#)
 contact information [437](#)
 contact person's name [87](#)
 copyright [433](#)
 CRC anomalies [134](#)
 customer support [437](#)
 Cyclic Redundancy Checking [341](#)

D

Daytime (RFC 867) [88](#)
 default gateway [99](#)
 default privilege level [91](#)
 DEFVAL [108](#)
 DEFVAL profile settings [390](#)
 DEFVAL_VC [108](#)
 DHCP [166](#), [181](#)
 DHCP relay [181](#)
 option 82 [181](#)
 Diagnostic [239](#)
 disclaimer [433](#)
 double-tagged frames [205](#)
 downstream (traffic) [103](#)
 DSL port statistics [75](#)
 DSL profiles [103](#)

default [103](#)
duplex [101](#)
Dynamic Host Configuration Protocol. See DHCP. [181](#)

E

EAPoL [166](#)
encapsulation
 LLC [108](#)
 VC Mux [108](#)
EPL [107](#)
Errored Seconds (ES) [133](#), [134](#), [338](#), [341](#)
Estimated Power Loss [107](#)
Ethernet address. See MAC address. [84](#)
Ethernet port
 default settings [50](#)
 statistics [73](#)
Extensible Authentication Protocol. See EAPoL. [166](#)

F

factory defaults [237](#), [382](#)
FCC interference statement [433](#)
filtering databases [285](#)
firmware upgrade [235](#), [321](#)
 file names [321](#)
 using FTP [321](#)
 when unable to use FTP [384](#)
firmware version [84](#)
front panel [49](#)
 LEDs [49](#)
 ports [50](#)
FTP [42](#), [238](#), [321](#)
full duplex [101](#)

G

GARP [93](#)
GARP timer [96](#)
GARP timer setup [93](#)
General Setup [87](#)
Generic Attribute Registration Protocol. See GARP. [93](#)

H

hardware
 installation [45](#)
 installation precautions [46](#)
 mounting brackets [46](#)
 rack-mounting [46](#)
 rubber feet [45](#)
Home screen [71](#)
host name [87](#)

I

IEEE 802.1D. See STP. [171](#)
IEEE 802.1Q. See VLAN. [139](#)
IEEE 802.1w. See RSTP. [171](#)
IEEE 802.1x [175](#), [177](#)
IEEE 802.1x. See also RADIUS. [175](#)
IGMP [166](#)
 leave packets [149](#)
 modes [153](#)
 query packets [149](#)
 report packets [149](#)
IGMP Filter Profile Screen [127](#)
IGMP snooping [147](#)
initial configuration [65](#)
installation
 freestanding [45](#)
 mounting brackets [46](#)
 precautions [46](#)
 rack-mounting [46](#)
 rubber feet [45](#)
Internet Explorer [65](#)
Internet Group Management Protocol. See IGMP. [166](#)
Internet Protocol. See IP. [166](#)
IP [166](#)
 ip commands [315](#)
 IP Setup [99](#)
ISDN [119](#)

L

LEDs [49](#)
line operating values [131](#)
Line Performance [132](#)
LLC [108](#)
location [87](#)
log format [272](#)

logging out [62](#)
 login [57](#)
 Login screen [58](#)
 loopback test [240](#)
 Loss Of Sync Word Seconds (LOSWS) [341](#)
 Loss of Sync Word Seconds (LOSWS) [134](#)

M

MAC address [84](#)
 MAC address learning [96](#)
 MAC filter [167](#)
 Management Information Base (MIB) [220](#)
 managing the device
 good habits [42](#)
 using FTP. See FTP.
 using SNMP. See SNMP.
 using Telnet. See command interface.
 using the command interface. See command interface.
 using the web configurator. See web configurator.
 Maximum Burst Size (MBS) [121](#)
 Media Access Control. See MAC address. [84](#)
 metric [228](#)
 model [87](#)
 mounting brackets [46](#)
 mpair4 [117](#)
 multicast MAC address [158](#)
 Multicast VLAN. See MVLAN. [159](#)
 MVLAN [159](#)

N

NetBIOS [166](#)
 Network Basic Input/Output System. See NetBIOS. [166](#)
 non real-time Variable Bit Rate (nrt-VBR) [120](#)
 NTP (RFC-1305) [88](#)
 N-wire Mode [117](#)

O

OAM F5 Loopback [240](#)
 option 82 [181](#)

P

packet filter [165](#)
 password [61](#)
 Peak Cell Rate (PCR) [120](#)
 Permanent Virtual Circuit. See PVC. [107](#)
 ping [240](#)
 Point-to-Point Protocol over Ethernet. See PPPoE. [166](#)
 Port Security [179](#)
 Port Setup [101](#)
 Port VLAN ID. See PVID. [110](#)
 POTS [119](#)
 PPPoE [166](#)
 PPVC [349](#)
 PPVC Setup [113](#)
 PPVC Setup Members [114](#)
 priority queue assignment [97](#)
 product registration [435](#)
 PVC [107](#), [347](#)
 PVID [110](#)
 default [140](#)

Q

Q-in-Q. See TLS. [205](#)
 Quality of Service (QOS) [119](#)

R

rack-mounting [46](#)
 RADIUS [175](#)
 shared secret [176](#)
 RADIUS Setup [176](#)
 Rapid Spanning Tree Protocol. See RSTP. [169](#)
 real-time Variable Bit Rate (rt-VBR) [120](#)
 reboot [238](#)
 Region Setting [119](#)
 registration
 product [435](#)
 related documentation [3](#)
 Remote Authentication Dial In User Service. See RADIUS. [175](#)
 Remote Management screen [225](#)
 restart [238](#)
 restore configuration [236](#)

RFC 1305. See NTP. [88](#)
RFC 2131. See DHCP. [181](#)
RFC 2132. See DHCP. [181](#)
RFC 2138. See RADIUS. [175](#)
RFC 2139. See RADIUS. [175](#)
RFC 2486. See EAPoL. [166](#)
RFC 3046. See Option 82. [181](#)
RFC 867. See Daytime. [88](#)
RFC 868. See Time. [88](#)
RSTP [169](#)
 port states [170](#)
 See also STP. [169](#)
rubber feet
 installation [45](#)

S

safety warnings [6](#)
save configuration [62](#)
Secured Client Setup screen [225](#)
Service Access Control [224](#)
Service Provider's Network (SPN) [205](#)
Severely Errored Seconds (SES) [134](#), [338](#), [341](#)
shared secret [91](#)
shdsl alarmprofile commands [340](#)
shdsl commands [329](#)
shdsl paepvc commands [362](#)
shdsl ppvc commands [349](#)
shdsl pvc commands [347](#)
SHDSL Rates [117](#)
SHDSL rates [117](#)
shdsl rpvc commands [353](#)
shdsl tlspvc commands [366](#)
shdsl vcprofile commands [345](#)
Simple Network Management Protocol. See SNMP. [219](#)
SNMP [42](#), [219](#)
 commands [220](#)
 Get [220](#)
 GetNext [220](#)
 manager [220](#)
 MIBs [221](#)
 supported versions [219](#)
 Trap [220](#)
 traps [221](#)
SNMP screen [223](#)
Spanning Tree Protocol. See STP. [169](#)
static multicast filter [157](#)
static route [227](#)
 metric [228](#)

Static VLAN. See SVLAN. [285](#)
statistics
 DSL port [75](#)
 Ethernet port [73](#)
statistics dhcp commands [282](#)
statistics igmpsnoop commands [307](#)
statistics ip commands [318](#)
statistics monitor command [267](#)
statistics port command [267](#)
statistics shdsl commands [334](#)
STP [169](#)
 Bridge Protocol Data Units (BPDU) [170](#)
 designated bridge [169](#)
 hello time [170](#)
 max age [170](#)
 path cost [169](#)
 port path cost [174](#)
 port priority [174](#)
 port states [170](#)
 root bridge [169](#)
 root port [169](#)
super channel [108](#)
Sustained Cell Rate (SCR) [121](#)
SVLAN [285](#)
switch acl commands [372](#)
switch acl profile commands [369](#)
switch dhcprelay commands [277](#)
switch dhcpsnoop commands [281](#)
switch igmpfilter commands [300](#)
switch igmpsnoop bandwidth commands [303](#)
switch igmpsnoop commands [299](#)
switch igmpsnoop igmpcount commands [306](#)
switch isolation commands [266](#)
switch mac count commands [295](#)
switch mac filter commands [293](#)
switch pktfilter commands [311](#)
Switch Setup [95](#)
switch vlan commands [286](#)
syntax conventions [4](#)
sys commands [265](#)
sys snmp commands [327](#)
syslog [217](#)
System Information [83](#)
system log [240](#)
system up time [71](#)

T

Tag Control Information (TCI) [139](#)
Tag Protocol Identifier (TPID) [139](#)

tagged VLAN. See VLAN. [139](#)
telco-50 connector
 pin assignments [393](#)
temperature [84](#)
terminal emulation [384](#)
Theoretical Arrival Time (TAT) [121](#)
Time (RFC-868) [88](#)
time server protocols supported [88](#)
time zone [88](#)
TLS [205](#)
trademarks [433](#)
traffic parameters [120](#)
traffic shaping [119](#)
Transparent LAN Service. See TLS. [205](#)

U

UnAvailable Seconds (UAS) [134](#), [338](#), [341](#)
UNIX syslog [217](#)
Unspecified Bit Rate (UBR) [120](#)
up time [72](#)
upstream (traffic) [103](#)
User Account [89](#)

V

Variable Bit Rate (VBR) [120](#)
VC [108](#)
VC Mux [108](#)
VC Profile Screen [123](#)
VC Setup [108](#)
ventilation [46](#)
ventilation holes
 hardware [46](#)
virtual channel [107](#)
 downstream profile [109](#)
 profile [108](#)
 upstream profile [109](#)
Virtual Circuit. See VC. [108](#)
Virtual Local Area Network. See VLAN. [139](#)
VLAN [139](#)
 explicit tagging [285](#)
 forwarding [140](#)
 implicit tagging [285](#)
 priority frame [140](#)
 registration information [285](#)
 VLAN ID [139](#)
 VLAN ID, maximum number of [139](#)

 when VLAN ID is zero [140](#)
VLAN stacking. See TLS. [205](#)
voltage [84](#)

W

warranty [434](#)
 note [435](#)
web configurator [42](#), [57](#)
 login [57](#)

X

XMODEM upload [383](#), [384](#)

